 


Type	For use with	Ground Earth-Fault Alarm	Ground Earth-Fault Protection	ARMS	Zone Selective Interlocking (ZSI)	Cat. No. Part no. Article no.	Price see price list	Std. pack
		(A)	(G)	(M)	(Z)			
<b>Spare trip unit for universal protection Type U (Digitrip 520M LSI)</b>								
	520M LSI	—	—	—	—	IZMX-DTU 124014	1	
Further functions for universal protection Type U (Digitrip 520M)								
Communication capability								
High Load Alarm with contact								
External power supply is not required for all listed functions.								
520M LSI	ZSI	IZMX-DTU	—	—	—	●	+IZMX-DTU-Z 155563	1
520M LSIA	Ground Earth-Fault Alarm	IZMX-DTU	●	—	—	—	IZMX-DTU-A 156652	1
520M LSIA		IZMX-DTU	●	—	—	—	+IZMX-DTU-A 155560	1
520M LSIA	Ground Earth-Fault Alarm and ZSI	IZMX-DTU	●	—	—	●	+IZMX-DTU-AZ 155565	1
520M LSIG	Ground Earth-Fault Protection	IZMX-DTU	—	●	—	—	IZMX-DTU-G 156653	1
520M LSIG		IZMX-DTU	—	●	—	—	+IZMX-DTU-G 155561	1
520M LSI	ARMS	IZMX-DTU	—	—	●	—	IZMX-DTU-M 156654	1
520M LSI		IZMX-DTU	—	—	●	—	+IZMX-DTU-M 155562	1
520M LSI	ARMS and ZSI	IZMX-DTU	—	—	●	●	+IZMX-DTU-MZ 155568	1
520M LSIA	Ground Earth-Fault Alarm and ARMS	IZMX-DTU	●	—	●	—	IZMX-DTU-AM 156655	1
520M LSIA		IZMX-DTU	●	—	●	—	+IZMX-DTU-AM 155564	1
520M LSIA	Ground Earth-Fault Alarm, ARMS and ZSI	IZMX-DTU	●	—	●	●	+IZMX-DTU-AMZ 155569	1
520M LSIG	Ground Earth-Fault Protection and ARMS	IZMX-DTU	—	●	●	—	IZMX-DTU-GM 156656	1
520M LSIG		IZMX-DTU	—	●	●	—	+IZMX-DTU-GM 155566	1
520M LSIG	Ground Earth-Fault Protection and ZSI	IZMX-DTU	—	●	—	●	+IZMX-DTU-GZ 155567	1
520M LSIG	Ground Earth-Fault Protection, ARMS and ZSI	IZMX-DTU	—	●	●	●	+IZMX-DTU-GMZ 155570	1