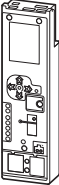


Type	For use with	Ground Earth-Fault Alarm (A)	Ground Earth-Fault Protection (G)	ARMS (M)	Zone Selective Interlocking (ZSI) (Z)	Cat. No. Part no. Article no.	Price see price list	Std. pack
Spare trip unit for professional protection Type P (Digitrip 1150i LSI)¹⁾								
 1150i LSI	—	—	—	—	—	IZMX-DTP 124015		1
Further functions for professional protection Type P (Digitrip 1150i LSI) External power supply is not required for the stated functions Display using large LCD graphic color display Extended parameter, protection, measuring, analysis, diagnostics and event memory functions Communication-enabled with communication module								
1150i LSI	ZSI	IZMX-DTP	—	—	—	●	+IZMX-DTP-Z 155571	1
1150i LSIG	Ground Earth-Fault Protection is programable and can be set to alarm or protection)	IZMX-DTP	—	●	—	—	IZMX-DTP-G 156657	1
1150i LSIG		IZMX-DTP	—	●	—	—	+IZMX-DTP-G 155572	1
1150i LSIG	Ground Earth-Fault Protection is programable and can be set to alarm or protection. ZSI included.	IZMX-DTP	—	●	—	●	+IZMX-DTP-GZ 155573	1
1150i LSI	ARMS	IZMX-DTP	—	—	●	—	IZMX-DTP-M 156658	1
1150i LSI		IZMX-DTP	—	—	●	—	+IZMX-DTP-M 155574	1
1150i LSI	ARMS and ZSI	IZMX-DTP	—	—	●	●	+IZMX-DTP-MZ 155575	1
1150i LSIG	Ground Earth-Fault Protection is programable and can be set to alarm or protection.	IZMX-DTP	—	●	●	—	IZMX-DTP-GM 156659	1
1150i LSIG		IZMX-DTP	—	●	●	—	+IZMX-DTP-GM 155576	1
1150i LSIG	Ground Earth-Fault Protection is programable and can be set to alarm or protection. ZSI included.	IZMX-DTP	—	●	●	●	+IZMX-DTP-GMZ 155577	1

Notes

¹⁾ If it is used for an upgrade from A, V, U (520... trip unit and external voltage measurement modul type has to be ordered separately. One module can supply voltage for up to 20 breakers.