




Danfoss INSTRUCTION
CI 32...50

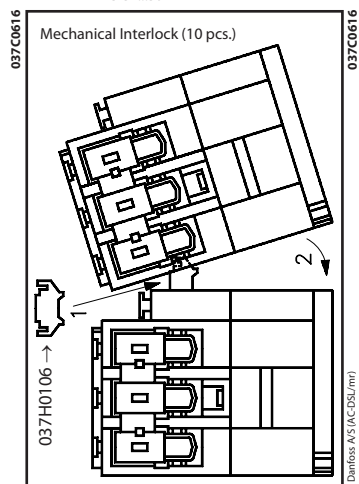


Danfoss INSTRUCTION
CI 32...50

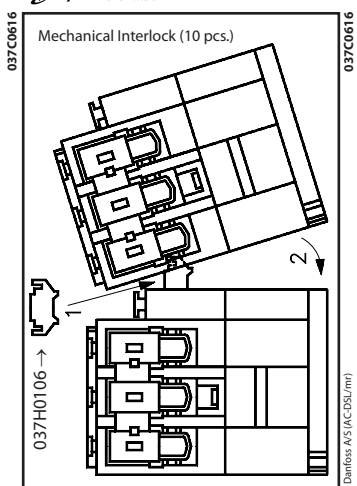


Danfoss INSTRUCTION
CI 32...50

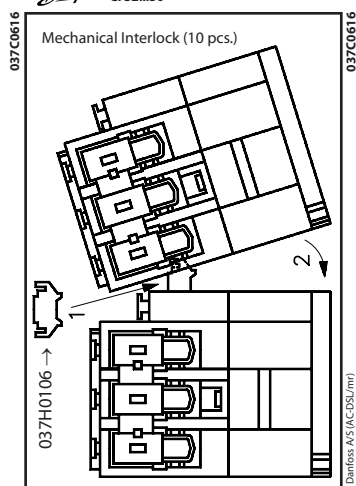


Danfoss INSTRUCTION
CI 32...50

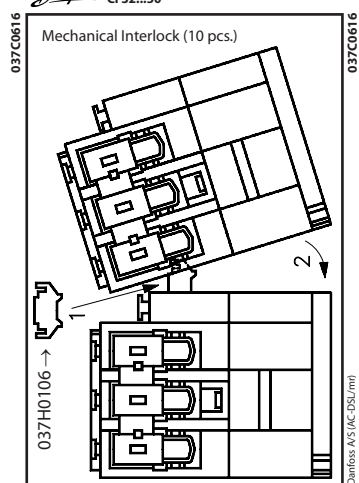


Danfoss INSTRUCTION
CI 32...50

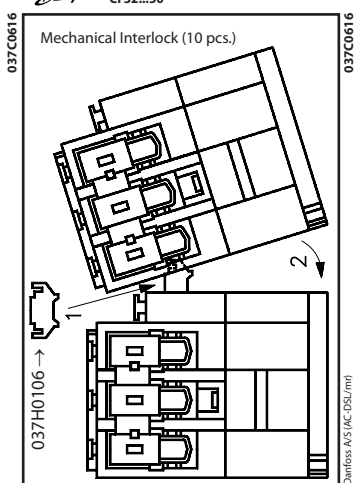


Danfoss INSTRUCTION
CI 32...50

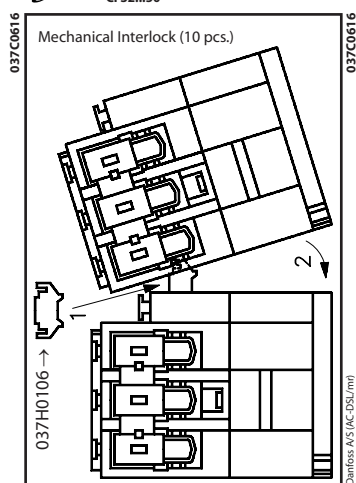

Danfoss INSTRUCTION
CI 32...50

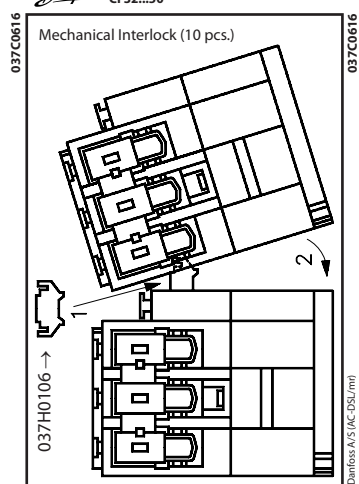

Danfoss INSTRUCTION
CI 32...50

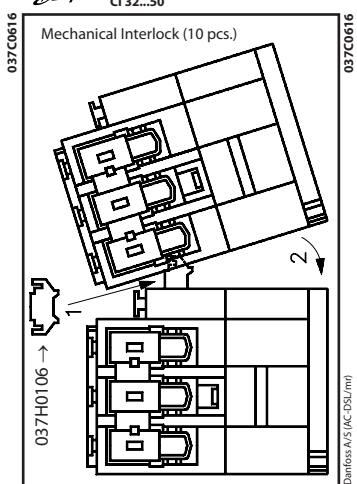

Danfoss INSTRUCTION
CI 32...50

