# Wireless Input Module Type G8886 4401 703





# **Product Description**

G8886 4401 703 is a smallsize 4-channel transmitter with 4 contact inputs

control lights, sunblinds/ Venetian blinds and other functions supported by the master generator.

The wireless input module is part of the Dupline® "Smart House" building automation concept and can be used to

Ordering Key	_ G 8886 4401 703
Type: Dupline®	
Compact housing	
Input type	
4 channels	
4 inputs —	
Colour/input type ——	
Supply	

## **Type Selection**

Supply Ordering no.

G 8886 4401 703 **Dupline**®

## **Input Specifications**

Wireless inputs Transmission frequency

868 MHz

# **Supply Specifications**

**Power supply** 

Battery: CR2032

# **General Specifications**

applications

cable: GAP-TPH-CAB. Following installation, the programming can be changed by removing the multiconnector and using the supplied adapter for the GAP-TPH-CAB cable.
Compact
IP 20 3 (IEC 60664) 0-50°C/32-122°F -20-70°C/-4-158°F
20 - 80% 50 g – without battery
51 x 35 x 15 mm (including frame)



# **Mode of Operation**

The G8886 4401 703 input module is designed for base unit G3486 0058 230 and will only function with this unit.

The wireless G8886 4401 703 input modules are programmed as standard input G88104401 using a GAP 1605 (see data sheet for this unit).

The communication between G8886 4401 703 input modules and the G3486 0058

230 base is established in the following way:

- Push the "Mode" button on the G3486 0058 230 base until the red LED indicates association.

- Activate a channel on the G8886 4401 703 input module that you want to associate with the G3486 0058 230 base.


It is possible to disable the communication between the G3486 0058 230 base and all the modules with which it is associated.

- Push the "Mode" button on the G3486 0058 230 base until the red "Disable" LED is lit.

This means that there is no connection between the G3486 0058 230 base and its associations.

To reestablish the connection, push "Mode" until neither "Associate" or "Deactivate" are lit.

Under normal circumstances, the "Supply" and "Dupline" LEDs will be lit continuously, whereas the LED for "Communication" only blinks briefly when you push an associated G8886 4401 703 input module.

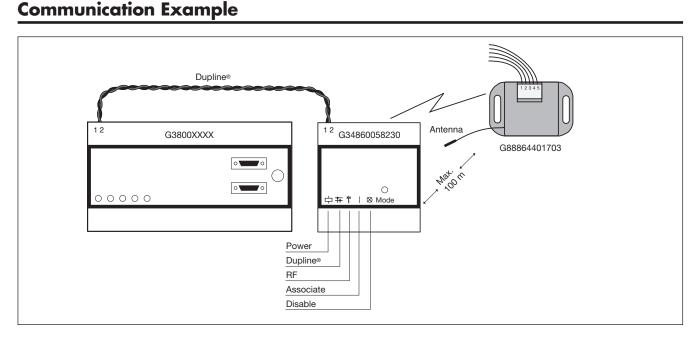

**Dimensions/LED allocation** 

## Accessories

Programming cable for GAP 1605

GAP-TPH-CAB

