

# Installation guide








## Pressure switch

### Types KP 1 and KP 7W



060R9760

060R9760

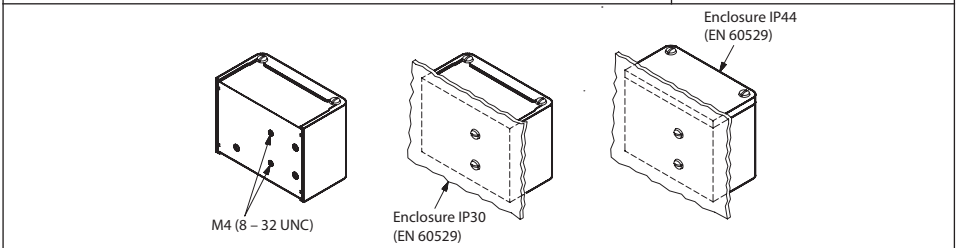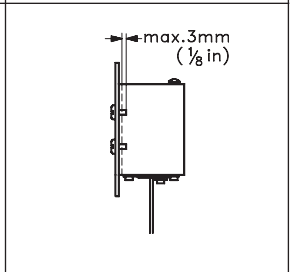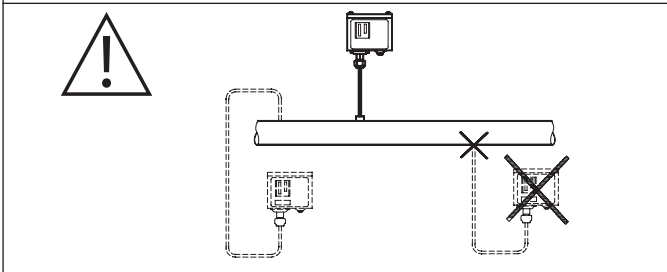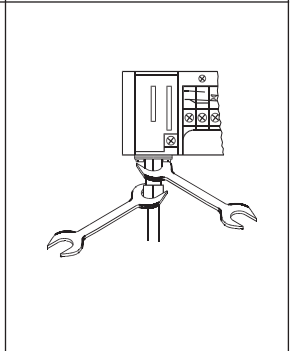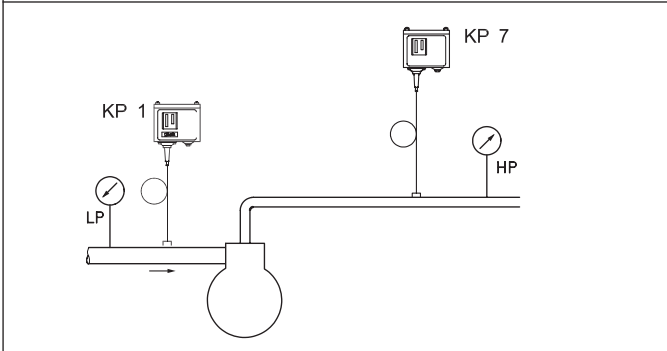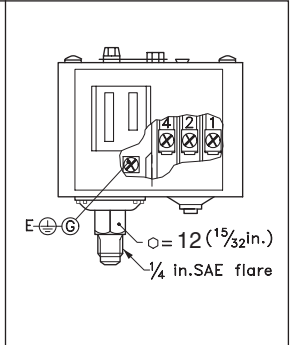
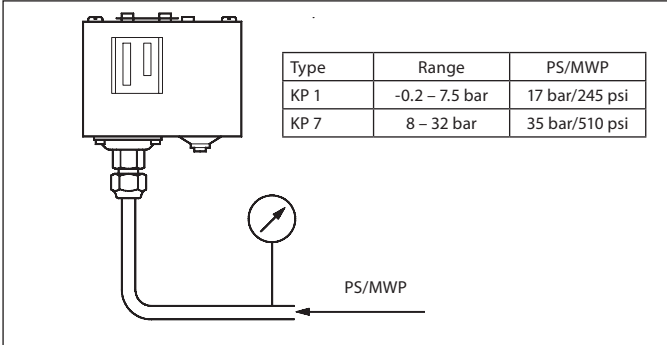






**CAUTION:**

Disconnect power supply before wiring connections are made or service to avoid possible electrical shock or damage to equipment.  
Do never touch live parts with your fingers or with any tool.



**KP 1**

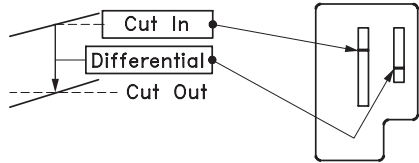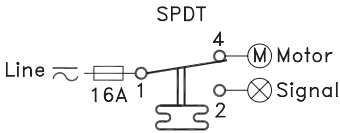

**KP 7**

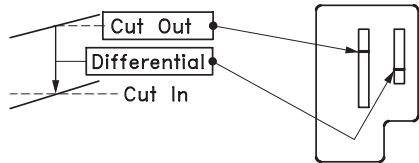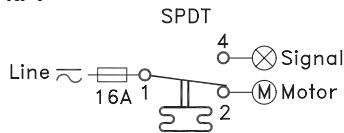

**Manual trip function**

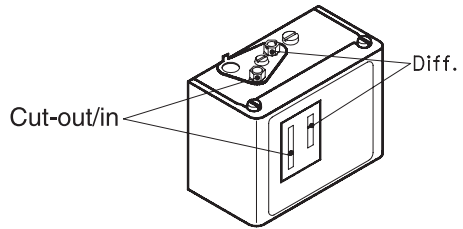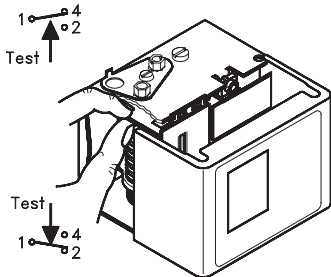

**Electrical rating - General**

LR 112A	AC 1: 16A	400 V	DC 11
	AC 3: 16A		12 W
	AC 15: 10 A		220 V

*When used acc. to UL regulations*



**Listed refrigeration controller 61B5**

Voltage	FL	LR	Resist. load	Pilot duty
240 AC	A	A	8 A	3 A
120 AC	8	48	16 A	
240 DC	16	96		12 W

Use copper wire only  
Tightening torque 20 lb.in.

