




PE-(PEN-) rail for fuse enclosure

Part no. PEN43RS27
Catalog No. 072481

EL-Nummer (Norway) 2502288

Delivery program

			
Product range			Ci insulated enclosures
Basic function			Prepared enclosures
Product function			Modular busbar system
Accessories			PE (PEN) busbars
Single unit/Complete unit			Modular system
Conductor cross-section			
Solid		mm ²	2 x 2.5 - 35 18 x 0.5 - 6
Stranded		mm ²	2 x 2.5 - 25 18 x 0.5 - 4
For use with			SE-RS-I43 (I44) RS27/I43 (I44)

Technical data ETIM 7.0

Energy distribution systems (EG000015) / Rail terminal bar (EC000275)			
Electric engineering, automation, process control engineering / Electrical insulation and connecting material / Energy distribution system / Rail terminal bar clamp (ecI@ss10.0.1-27-40-06-03 [ACO369011])			
Number of poles			1
Nominal current		A	63
Connection type			Screwing
Mounting method			Screw
Number of connections total			6
Number of connections < 6 mm ²			0
Number of connections 10 mm ²			0
Number of connections 16 mm ²			4
Number of connections 25 mm ²			0
Number of connections > 25 mm ²			2
Number of connections < AWG 6			0
Number of connections AWG 6			0
Number of connections AWG 4			0
Number of connections AWG 2			0
Number of connections AWG 4/0			0
Number of connections 250 kcmil			0
Number of connections > 250 kcmil			0
Contact safe			Yes
Height		mm	0
Width		mm	150
Depth		mm	50

Additional product information (links)

allowInterrupt=1&RevisionSelectionMethod=LatestReleased&noSaveAs=0&Renderit	http://www.eaton.eu/DE/ecm/idcplg?IdcService=GET_FILE&model certification xEnergy Safety Ci
allowInterrupt=1&RevisionSelectionMethod=LatestReleased&noSaveAs=0&Renderit	http://www.eaton.eu/DE/ecm/idcplg?IdcService=GET_FILE&Save time – we assist you with expert pre-assembly
allowInterrupt=1&RevisionSelectionMethod=LatestReleased&noSaveAs=0&Renderit	http://www.eaton.eu/DE/ecm/idcplg?IdcService=GET_FILE&product information xEnergy Safety Ci
tool for calculating the power loss for switching device combinations	http://www.eaton.eu/DE/Europe/Electrical/Customersupport/ConfigurationTools/TCTool/index.htm

