


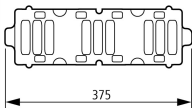

Busbar support, for CI enclosure 375mm, 3x hxd=40x10mm

Part no. SH1603/4
Catalog No. 065366
EL-Nummer (Norway) 0002502268

Delivery program

			
Product range			xEnergy Safety Ci
Basic function			Prepared enclosures
Product function			Accessories for busbar enclosures
Accessories			Busbar support
Function			For use between two enclosures
Description			Component mounting possible on busbar Interval between busbar supports max. 375 mm
Interval between busbar centres		mm	50
Width		mm	375
Rated operational current	I_e	A	1600
For use with			L1, L2, L3: 3 x 40 x 10
For use with			C148... C145... C144...

Technical data ETIM 7.0

Energy distribution systems (EG000015) / Busbar support (EC001166)			
Electric engineering, automation, process control engineering / Electrical insulation and connecting material / Energy distribution system / Busbar support (ecl@ss10.0.1-27-40-06-07 [AC0377011])			
Number of poles			3
Max. rated current		A	1600
Busbar distance		mm	50

Additional product information (links)

Manufacturer's Declaration CI-RoHS	ftp://ftp.moeller.net/DOCUMENTATION/PDF/2013-01-31_Ci_RoHS.pdf
Declaration of conformity	ftp://ftp.moeller.net/DOCUMENTATION/PDF/ci_ce.pdf
allowInterrupt=1&RevisionSelectionMethod=LatestReleased&noSaveAs=0&RenderModelCertification=xEnergy Safety Ci	http://www.eaton.eu/DE/ecm/idcplg?IdcService=GET_FILE&model certification xEnergy Safety Ci
allowInterrupt=1&RevisionSelectionMethod=LatestReleased&noSaveAs=0&RenderModelCertification=xEnergy Safety Ci	http://www.eaton.eu/DE/ecm/idcplg?IdcService=GET_FILE&Save time - we assist you with expert pre-assembly
allowInterrupt=1&RevisionSelectionMethod=LatestReleased&noSaveAs=0&RenderModelCertification=xEnergy Safety Ci	http://www.eaton.eu/DE/ecm/idcplg?IdcService=GET_FILE&product information xEnergy Safety Ci
tool for calculating the power loss for switching device combinations	http://www.eaton.eu/DE/Europe/Electrical/CustomerSupport/ConfigurationTools/TCTool/index.htm
configurator - xEnergy family	http://www.eaton.eu/DE/Europe/Electrical/CustomerSupport/ConfigurationTools/xEnergyMainSupport/index.htm