


PRODUCT-DETAILS

# 1721-184K-500

## Cover Frame 1gang studio white - future linear

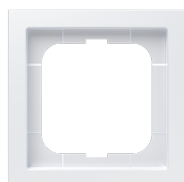

### General Information

Extended Product Type	1721-184K-500
Product ID	2CKA001754A4498
EAN	4011395174524
Catalog Description	Cover Frame 1gang studio white - future linear
Long Description	With small corner radii for trunking systems.

### Installation

Instructions and Manuals	No document needed
--------------------------	--------------------

### Technical

Data Sheet, Technical Information	No document needed
Number of Gangs	1
Design Range	future linear 63x63
Mounting Type	Flush Mounted
Type of Fastening	Clamp
Mounting Orientation	Horizontal Vertical
Surface Finishing	Untreated

Material	Glossy Thermoplastic
Label Space Provided	No
RAL Number	RAL 9016 - Traffic White
Color	studio white
Battery Weight	0 g

## Environmental

Degree of Protection	IP20
RoHS Status	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
RoHS Information	2CKA200000E2825
REACH Declaration	2CKA309999E9999
Conflict Minerals Reporting Template (CMRT)	9AKK108468A3363

## Dimensions

Product Net Width	80 mm
Product Net Height	80 mm
Product Net Depth / Length	11 mm
Product Net Weight	17.5 g

## Ordering

Replaced Product ID (OLD)	1754-0-4498
---------------------------	-------------

## Certificates and Declarations

Declaration of Conformity - CE	2CKA200000E2825
--------------------------------	-----------------

## Classifications

ETIM 8	EC000007 - Cover frame for domestic switching devices
ETIM 9	EC000007 - Cover frame for domestic switching devices
WEEE Category	Product Not in WEEE Scope
CN8	8538 90 99
eClass	V11.0 : 27144001

## Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
2CKA001582A0346	Cover plate with labelling field Busch-Infoline® Signalling Single push button studio white - 63x63	1571 CN-84	1	piece
2CKA001582A0348	Cover plate with labelling field Busch-Infoline® Signalling Single push button Clear studio white - 63x63	1572 CN-84	1	piece
2CKA001582A0350	Cover plate with labelling field Busch-Infoline® Signalling Central cover plate studio white - 63x63	1573 CN-84	1	piece
2CKA001582A0353	Cover Plate Busch-Infoline® Signalling Central cover plate studio white - 63x63	1575 CN-84	1	piece

2CKA001582A0355	Cover Plate Busch-Infoline® Signalling Central cover plate studio white - 63x63	1576 CN-84	1	piece
2CKA001731A1923	Cover Busch-Infolicht® studio white - 63x63	1716-84	1	piece
2CKA001731A1916	Rocker for Switch, Pull cord studio white - 63x63	1720-84	1	piece
2CKA001710A3808	Cover plate with legend Level switch Turn button studio white - 63x63	1740 DR/03-84	1	piece
2CKA001710A3512	Cover Plate Symbol "2-1-3" for Level switch, Turn button studio white - 63x63	1740 DRL-84-503	1	piece
2CKA001710A3172	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button studio white - 63x63	1740-84	1	piece
2CKA001710A3161	Cover Plate Blind cap 1 gang with Mounting plate studio white - 63x63	1742-84	1	piece
2CKA001710A3991	Cable Outlet / Blank Plate / Adapter Ring Blind cap 0 gang studio white - 63x63	1742-84-500	1	piece
2CKA001724A4368	Cover Plate SAT 4 gang studio white - 63x63	1743/10-04-84	1	piece
2CKA001724A4377	Cover Plate TV / Radio / 2x SAT 4 gang studio white - 63x63	1743-04-84	1	piece
2CKA001724A4332	Data / Telecommunication / Antenna SAT 3 gang studio white - 63x63	1743-84-500	1	piece
2CKA001710A3173	Cover Plate Busch-Infoline® telephone connector boxes (VDo) studio white - 63x63	1745-84	1	piece
2CKA001710A3993	Data / Telecommunication / Antenna Telecommunication inserts 0 gang studio white - 63x63	1746/10-84-500	1	piece
2CKA001710A3167	Cover Plate with Hinged Lid Telecommunication inserts 50 x 50 mm 1 gang studio white - 63x63	1746-84	1	piece
2CKA001710A4096	Intermediate Ring for cover plates Busch-Balance® SI studio white - 63x63	1747 BSI-84	1	piece
2CKA001710A3863	Cable Outlet / Blank Plate / Adapter Ring studio white - 63x63	1747 SI-84	1	piece
2CKA001710A3861	Intermediate Ring studio white - 63x63	1747-84	1	piece
2CKA001710A3163	Cover Plate Cable outlet studio white - 63x63	1749-84	1	piece
2CKA001723A0240	Cover Plate Loudspeaker 2 gang studio white - 63x63	1751-84	1	piece
2CKA001710A3175	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key studio white - 63x63	1755 SL/PZ-84-101	1	piece
2CKA001724A2761	Cover plate with labelling field For data connection housing studio white - 63x63	1758-84	1	piece
2CKA001731A1877	Rocker with labelling field for Switch/push button, Single push button studio white - 63x63	1764 NLI-84	1	piece
2CKA001710A3992	Data / Telecommunication / Antenna TAE 0 gang studio white - 63x63	1766-84-500	1	piece
2CKA001753A0258	Cover Plate 1 ... 15 Min for Time switch, Toggle studio white - 63x63	1770-84-103	1	piece
2CKA001753A0301	Cover Plate 10 ... 120 Min for Time switch, Toggle studio white - 63x63	1771-84-103	1	piece
2CKA001751A2980	Multimedia Devices studio white	1785 ENO-84	1	piece
2CKA001751A3099	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker studio white - 63x63	1785 JA/02-84	1	piece
2CKA001751A3088	Mechanical Controls Symbol "arrows" for Venetian blind, Two-part rocker studio white - 63x63	1785 JA-84-500	1	piece
2CKA001751A3128	Mechanical Controls None for Switch/push button, Two-part rocker studio white - 63x63	1785 K-84-500	1	piece
2CKA001751A2992	Rocker with legend DND, MUR for Switch/push button, Two-part rocker studio white - 63x63	1785/11-84	1	piece
2CKA001751A3076	Mechanical Controls Without imprint for Switch/push button, Two-part rocker studio white - 63x63	1785-84-500	1	piece
2CKA001751A2968	Multimedia Devices studio white	1786 ENO-84	1	piece
2CKA001751A3098	Rocker for Venetian blind, Single rocker studio white - 63x63	1786 JA/02-84	1	piece
2CKA001751A2998	Rocker DND for Switch/push button, Single rocker studio white - 63x63	1786/11-84	1	piece
2CKA001751A3074	Mechanical Controls Without imprint for Switch/push button, Single rocker studio white - 63x63	1786-84-500	1	piece

2CKA001751A2750	Rocker for Switch/push button, Single rocker studio white - 63x63	1788-84	1	piece
2CKA001751A2751	Rocker with legend Heizung for Switch/push button, Single rocker studio white - 63x63	1789 H-84	1	piece
2CKA001751A2754	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white - 63x63	1789 KI-84	1	piece
2CKA001751A3084	Mechanical Controls Symbol "light" for Switch/push button, Single rocker studio white - 63x63	1789 LI-84-500	1	piece
2CKA001751A3151	Mechanical Controls for Switch/push button, Single rocker studio white - 63x63	1789 N-84-500	1	piece
2CKA001751A3161	Mechanical Controls Various symbols for Switch/push button, Single rocker studio white - 63x63	1789 ST-84-500	1	piece
2CKA001751A2755	Rocker for Switch/push button, Single rocker studio white - 63x63	1789 TR-84	1	piece
2CKA001751A3091	Mechanical Controls Without imprint for Switch/push button, Single rocker studio white - 63x63	1789-84-500	1	piece
2CKA001710A4111	Cover Plate studio white - 63x63	1790-590-84	1	piece
2CKA001710A4112	Cover Plate studio white - 63x63	1790-591-84	1	piece
2CKA001710A4113	Cover Plate studio white - 63x63	1790-592-84	1	piece
2CKA001710A4114	Cover Plate studio white - 63x63	1790-593-84	1	piece
2CKA001710A4115	Cover Plate studio white - 63x63	1790-594-84	1	piece
2CKA001710A4116	Cover Plate studio white - 63x63	1790-595-84	1	piece
2CKA001710A3698	Cover plate with legend for Thermostat Turn button studio white - 63x63	1794 TA-84	1	piece
2CKA001710A4017	Cover Plate for Thermostat Turn button studio white - 63x63	1795 HK-84	1	piece
2CKA001710A4049	Cover plate with legend for Thermostat Turn button 1 sliding switch studio white - 63x63	1795 HKEA-84	1	piece
2CKA001710A3725	Cover plate with legend for Thermostat Turn button 1 sliding switch studio white - 63x63	1795 TA-84	1	piece
2CKA001710A3569	Cover plate with legend for Thermostat Turn button 1 sliding switch studio white - 63x63	1795-84	1	piece
2CKA001753A0311	Cover Plate Pull cord studio white - 63x63	1796-84	1	piece
2CKA001710A3990	Data / Telecommunication / Antenna Modular Jack 2 gang studio white - 63x63	1800-84-500	1	piece
2CKA001710A1551	Data / Telecommunication / Antenna UAE/IAE (ISDN) 2 gang studio white - 63x63	1803-02-84-500	1	piece
2CKA001710A1550	Data / Telecommunication / Antenna UAE/IAE (ISDN) 1 gang studio white - 63x63	1803-84-500	1	piece
2CKA002013A5407	Busch-Object socket outlet SCHUKO® socket insert Safety Shutter studio white - 63x63	20 EUAB-84	1	piece
2CKA002011A6207	Socket Outlets studio white - 63x63	20 EUC-84-500	1	piece
2CKA002013A5418	Busch-Service-Socket SCHUKO® socket insert Safety Shutter studio white - 63x63	20 EUCBDR-84	1	piece
2CKA002013A5467	SCHUKO® socket insert Safety Shutter withControl light; LED /Green green - 63x63	20 EUCBL-13-84-101	1	piece
2CKA002013A5288	SCHUKO® socket insert Safety Shutter withControl light; LED /Green orange - 63x63	20 EUCBL-14-84	1	piece
2CKA002013A5286	SCHUKO® socket insert Safety Shutter withControl light; LED /Green studio white - 63x63	20 EUCBL-84	1	piece
2CKA002013A5294	Busch-stepflight SCHUKO® socket insert Safety Shutter withNight light; LED /White studio white - 63x63	20 EUCBLI-84	1	piece
2CKA002013A5268	SCHUKO® Socket insert with print Safety Shutter studio white - 63x63	20 EUCKS/DV-84	1	piece
2CKA002013A5372	Socket insert Safety Shutter Protective contact (SCHUKO) studio white - 63x63	20 EUCKS-84-500	1	piece
2CKA002013A5441	20 EUICRB-84-500 Socket Outlet	20 EUICRB-84-500	1	piece
2CKA002018A1509	Socket Outlets with Hinged Lid studio white - 63x63	20 EUK-84-500	1	piece

2CKA002018A1520	SCHUKO® socket insert Safety Shutter with Hinged Lid studio white - 63x63	20 EUKB-84	1	piece
2CKA002018A1529	SCHUKO® socket insert Safety Shutter with Hinged Lid studio white - 63x63	20 EUKBR-84	1	piece
2CKA002018A1540	SCHUKO® socket insert Safety Shutter with Hinged Lid studio white - 63x63	20 EUKNB-84	1	piece
2CKA002018A1551	SCHUKO® socket insert Safety Shutter with Hinged Lid studio white - 63x63	20 EUKNBL-84	1	piece
2CKA002018A1563	SCHUKO® socket insert Safety Shutter with Hinged Lid and lock; Different locking studio white - 63x63	20 EUKNBSL-84	1	piece
2CKA002018A1564	SCHUKO® socket insert Safety Shutter with Hinged Lid and lock; Simultaneous locking studio white - 63x63	20 EUKNBSL-84-101	1	piece
2CKA002011A6209	Socket Outlets studio white - 63x63	20 EUN-84-500	1	piece
2CKA001510A0005	Cover Busch-iceLight Reflector Ambient / orientation lightning / White studio white - 63x63	2068/11-84	1	piece
2CKA001510A0008	Cover Busch-iceLight Reflector Ambient / orientation lightning, Infolight studio white - 63x63	2068/14-84	1	piece
2CKA001510A0017	Cover Ambient lightning studio white - 63x63	2068/22-84	1	piece
2CKA001510A0015	Busch-iceLight set with Night light; LED studio white - 63x63	2069/11-84	1	piece
2CKA002495A0086	Socket insert Equipotential compensation Socket outlet 2-position studio white - 63x63	2095 UC-84	1	piece
2CKA002190A0215	2190 EUC-84 Socket Outl. S/F 1g	2190 EUC-84	1	piece
2CKA002013A5477	SCHUKO® socket insert Safety Shutter studio white - 63x63	23 EUCEB-84	1	piece
2CKA002013A5451	SCHUKO® socket insert Safety Shutter studio white - 63x63	2300 EUCEB-84	1	piece
2CKA002113A0511	2300 UCRKS-84-503 Socket Outl. S	2300 UCRKS-84-503	1	piece
2CKA002011A3833	Busch-Protector® SCHUKO® socket insert studio white - 63x63	2310 EUGL/VA-84-11	1	piece
2CKA002099A0198	2397 UCKS-84-505 Center Pl, SF for 2300	2397 UCKS-84-505	1	piece
2CKA002013A5361	2398 CKS-84 Cover plate shuttered	2398 CKS-84	1	piece
2CKA002099A0214	Socket insert Safety Shutter Earthing pin studio white - 63x63	2399 UCKS-84	1	piece
2CKA002099A0192	2399 UCKS-84-505 Center Pl, SF for 23M	2399 UCKS-84-505	1	piece
2CKA001751A3180	Electronic Controls for Switch/push button Single rocker studio white - 63x63	2520 KI-84-500	1	piece
2CKA001751A3199	Rocker for Switch/push button, Single rocker studio white - 63x63	2520 TR-84	1	piece
2CKA001724A4256	Cover Plate Bore hole 1 gang studio white - 63x63	2533-84	1	piece
2CKA001710A3646	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button studio white - 63x63	2542 DR/01-84	1	piece
2CKA001710A3651	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button studio white - 63x63	2542 DR/02-84	1	piece
2CKA001724A4385	Cover Plate Call unit studio white - 63x63	2548-020 F-84	1	piece
2CKA001724A4387	Cover Plate Red studio white - 63x63	2548-022 A-84	1	piece
2CKA001724A4388	Cover Plate Doctor Blue studio white - 63x63	2548-022 AR-84	1	piece
2CKA001724A4389	Cover Plate Call module Red studio white - 63x63	2548-022 B-84	1	piece
2CKA001724A4390	Cover Plate Pull-cord switch studio white - 63x63	2548-046 A-84	1	piece
2CKA001724A4391	Cover Plate Call module Red studio white - 63x63	2548-071 D-84	1	piece
2CKA001724A4392	Cover Plate Call module Red studio white - 63x63	2548-071 E-84	1	piece
2CKA001724A4393	Cover Plate Call / reset Red / Green studio white - 63x63	2548-642 B-84	1	piece
2CKA001724A4395	Cover Plate Reset Green studio white - 63x63	2548-642 C-84	1	piece
2CKA001724A4402	Cover Plate XLR 1 gang studio white - 63x63	2553-84	1	piece
2CKA001753A0394	Cover Plate Modular Jack 2 gang studio white - 63x63	2561-02-84	1	piece
2CKA001753A0403	Cover Plate Modular Jack 1 gang studio white - 63x63	2561-84	1	piece

2CKA003116A0662	FI-Schukomat SCHUKO® socket insert Protective Contact (SCHUKO) 30 mA studio white - 63x63	3120 EUCB-84	1	piece
2CKA003117A0006	Buschmat RCD - Insert RCD 30 mA studio white - 63x63	3151 UC-84	1	piece
2CKA006155A0121	6108/61-840-500 Coverplate f. CE	6108/61-840-500	1	piece
2CKA006115A0486	6108/61-84-500 Coverplate f. CE	6108/61-84-500	1	piece
2CKA006155A0114	6109/03-840-500 Coverplate f. RTC	6109/03-840-500	1	piece
2CKA006155A0063	6109/03-84-500 Coverplate f. RTC	6109/03-84-500	1	piece
2CKA006132A0407	6122/10-840-500 BW standard	6122/10-840-500	1	piece
2CKA006132A0379	6122/10-84-500 BW standard	6122/10-84-500	1	piece
2CKA006115A0183	6125/01-84-500 Control element 1g w. BAU	6125/01-84-500	1	piece
2CKA006115A0452	6125/02-840-500 cont.-element KNX 1g	6125/02-840-500	1	piece
2CKA006115A0219	6125/02-84-500 Control element 1/2gang	6125/02-84-500	1	piece
2CKA006116A0174	6126/01-84-500 Control element 2g w. BAU	6126/01-84-500	1	piece
2CKA006116A0227	6126/02-840-500 cont.-element KNX 2g	6126/02-840-500	1	piece
2CKA006116A0209	6126/02-84-500 Control element 2/4gang	6126/02-84-500	1	piece
2CKA006117A0200	6127/01-84-500 Control element 4g w. BAU	6127/01-84-500	1	piece
2CKA006117A0252	6127/02-840-500 cont.-element KNX 4g	6127/02-840-500	1	piece
2CKA006117A0235	6127/02-84-500 Control element 4/8gang	6127/02-84-500	1	piece
2CKA006134A0342	6128/28-840-500 RTC Control element 2/4g	6128/28-840-500	1	piece
2CKA006134A0334	6128/28-84-500 RTC Control element 2/4g	6128/28-84-500	1	piece
2CKA006135A0146	6129/01-84-500 Control element 3/6g w. IR	6129/01-84-500	1	piece
2CKA006430A0400	6430-84-102-500 Control Cover	6430-84-102-500	1	piece
2CKA006430A0306	Cover plate with legend for Time switch Central cover plate studio white - 63x63	6435-84	1	piece
2CKA006400A0059	Cover Plate PowerDock 1 gang studio white - 63x63	6477-84	1	piece
2CKA006400A0047	Multimedia Devices studio white - solo	6480/11-84-500	1	piece
2CKA006400A0045	Multimedia Devices studio white - future linear	6480-84-500	1	piece
2CKA006599A3009	6540-84-102-500 Center Pl. SF Dimmer	6540-84-102-500	1	piece
2CKA006599A2835	Cover Plate for Cooling Central cover plate studio white - 63x63	6541-84	1	piece
2CKA006599A3010	6543-84-101-500 Dimmer Control Cover	6543-84-101-500	1	piece
2CKA006599A2908	Control Element for Dimmer Two-part button with Neon lamp studio white - 63x63	6545-84	1	piece
2CKA006730A0038	Electronic Controls 1 channel Radio Control studio white - 63x63	6731-84-500	1	piece
2CKA006730A0039	Electronic Controls 2 channel Radio Control studio white - 63x63	6732-84-500	1	piece
2CKA006730A0040	6733-84-500 RF-Switch Sensor 4-fold	6733-84-500	1	piece
2CKA006800A2834	Electronic Controls studio white - 63x63	6815-84-101-500	1	piece
2CKA008200A0081	Cover Plate Loudspeaker studio white - 63x63	8253-84	1	piece
2CKA008300A0225	83260-84-515 Cover plates, Indoor St.	83260-84-515	1	piece
2CKA006220A0244	CP-FCC-84 C-plate Fan Coil	CP-FCC-84	1	piece

2CKA006220A0181	CP-RTC-84 C-plate RT sensor unit	CP-RTC-84	1	piece
2CKA006220A0384	CP-RTC-840 c-plate temp.	CP-RTC-840	1	piece
2CKA006220A0214	MD-F-1.0.1-84 Movement detector	MD-F-1.0.1-84	1	piece
2CKA006220A0385	MD-F-1.0.1-840 WD 180 sens	MD-F-1.0.1-840	1	piece
2CKA006220A0217	MSA-F-1.1.1-84 Mov. detector/actuator 1g	MSA-F-1.1.1-84	1	piece
2CKA006220A0386	MSA-F-1.1.1-840 WD 180 sens actuator	MSA-F-1.1.1-840	1	piece
2CKA006220A0086	MSA-F-1.1.1-84-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-84-WL	1	piece
2CKA006220A0139	SR-1-84 rocker 1gang	SR-1-84	1	piece
2CKA006220A0371	Electronic Controls free@home (TP) antique brass - 63x63	SR-1-840	1	piece
2CKA006220A0154	SR-2-84 rocker 2gang	SR-2-84	1	piece
2CKA006220A0376	Electronic Controls free@home (TP) antique brass - 63x63	SR-2-840	1	piece
2CKA006220A0145	SRB-1-84 rocker 1gang, blinds	SRB-1-84	1	piece
2CKA006220A0373	Electronic Controls free@home (TP) antique brass - 63x63	SRB-1-840	1	piece
2CKA006220A0160	SRB-2-84 rocker 2g, blinds	SRB-2-84	1	piece
2CKA006220A0378	Electronic Controls free@home (TP) antique brass - 63x63	SRB-2-840	1	piece
2CKA006220A0151	SRD-1-84 rocker 1gang, dimming	SRD-1-84	1	piece
2CKA006220A0375	Electronic Controls free@home (TP) antique brass - 63x63	SRD-1-840	1	piece
2CKA006220A0166	SRD-2-L-84 rocker 2g, left, dimming	SRD-2-L-84	1	piece
2CKA006220A0380	Electronic Controls free@home (TP) antique brass - 63x63	SRD-2-L-840	1	piece
2CKA006220A0260	SRD-2-R-84 rocker 2g, right, dimming	SRD-2-R-84	1	piece
2CKA006220A0383	Electronic Controls free@home (TP) antique brass - 63x63	SRD-2-R-840	1	piece
2CKA006220A0142	SRL-1-84 rocker 1gang, lighting	SRL-1-84	1	piece
2CKA006220A0372	Electronic Controls free@home (TP) antique brass - 63x63	SRL-1-840	1	piece
2CKA006220A0157	SRL-2-L-84 rocker 2g, left, lighting	SRL-2-L-84	1	piece
2CKA006220A0377	Electronic Controls free@home (TP) antique brass - 63x63	SRL-2-L-840	1	piece
2CKA006220A0169	SRL-2-R-84 rocker 2g, right, lighting	SRL-2-R-84	1	piece
2CKA006220A0381	Electronic Controls free@home (TP) antique brass - 63x63	SRL-2-R-840	1	piece
2CKA006220A0148	SRS-1-84 rocker 1gang, scene	SRS-1-84	1	piece
2CKA006220A0374	Electronic Controls free@home (TP) antique brass - 63x63	SRS-1-840	1	piece
2CKA006220A0163	SRS-2-L-84 rocker 2gang, left, scene	SRS-2-L-84	1	piece
2CKA006220A0379	Electronic Controls free@home (TP) antique brass - 63x63	SRS-2-L-840	1	piece
2CKA006220A0175	SRS-2-R-84 rocker 2g, right, scene	SRS-2-R-84	1	piece
2CKA006220A0382	Electronic Controls free@home (TP) antique brass - 63x63	SRS-2-R-840	1	piece
2CKA001751A3170	Bell push-switch DND / MUR insert DND, MUR Single push button Push button 1 pole, 1NO studio white - 63x63	2029 UC-84	1	piece
2CKA001719A0220	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring studio white - 63x63	2518-WD-84	1	piece
2CKA006710A0011	Kits 4 chan. Radio Control studio white - future linear	6716 UJ-84-500	1	piece
2CKA006730A0136	Control Element for Dimmer Two-part button studio white - 63x63	6736 FoH-84	1	piece
2CKA001032A0523	Room Temperature Controller set studio white - future linear	1098 UJ-84	1	piece
2CKA001799A0984	1701 P-84 SM box, 1-gang, Philips	1701 P-84	1	piece
2CKA001799A0982	Mounting Box 1 gang studio white - future linear	1701-84-500	1	piece
2CKA001799A0902	Mounting Box 2 gang studio white - future linear	1702-84	1	piece

2CKA001799A0918	Mounting Box 3 gang studio white - future linear	1703-84	1	piece
2CKA001751A3209	Rocker with legend for Switch/push button Two-part rocker 1gang studio white - 63x63	1785/11 K-84	1	piece
2CKA001710A4127	Cover plate with legend for RFID Hotel card studio white - 63x63	1792 RFID-84	1	piece
2CKA001710A4201	Cover plate with legend for Thermostat Turn button studio white - 63x63	1794 R-84	1	piece
2CKA001710A4202	Cover Plate for Thermostat Turn button studio white - solo	1794 R-84-500	1	piece
2CKA001751A3231	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button Push button 1 pole, studio white - 63x63	2029/12 UC-84	1	piece
2CKA001751A3220	Rocker with legend for Switch/push button Two-part rocker studio white - 63x63	2058-24-84	1	piece
2CKA001751A3240	Bell push-switch DND / MUR insert for Switch/push button Single push button with LED 3gang studio white - 63x63	2059 UC-84	1	piece
2CKA001761A1495	Cable Entry studio white - future linear	2087-84	1	piece
2CKA001761A1500	Cable Entry studio white - future linear	2088-84	1	piece
2CKA001751A3190	Mechanical Controls Symbol "light" for Switch/push button, Single rocker studio white - 63x63	2520 LI-84-500	1	piece
2CKA001724A4383	Cover Plate Call unit studio white - 63x63	2548-020 D-84	1	piece
2CKA001724A4384	Cover Plate Call unit studio white - 63x63	2548-020 E-84	1	piece
2CKA001724A4386	Cover Plate Call unit studio white - 63x63	2548-021 G-84	1	piece
2CKA001724A4394	Cover Plate Duty room unit White / Green studio white - 63x63	2548-642 BD-84	1	piece
2CKA001724A4396	Cover Plate Reset Yellow studio white - 63x63	2548-642 D-84	1	piece
2CKA001751A3258	Rocker for Switch/push button Single rocker studio white - 63x63	2570-10-84	1	piece
2CKA001751A3269	Rocker for Switch/push button Two-part rocker studio white - 63x63	2570-20-84	1	piece
2CKA001751A3280	Rocker for Switch/push button Three-part rocker studio white - 63x63	2570-30-84	1	piece
2CKA006132A0263	6122/02-84-500 Watchdog 180 comfort FM	6122/02-84-500	1	piece
2CKA006134A0222	6124-84-101 Room Thermostat with Display	6124-84-101	1	piece
2CKA006134A0223	6124-84-500-101 Room Thermostat with Display	6124-84-500-101	1	piece
2CKA006134A0212	6128-84-500-101 RoomThermostat/Switch Sensor	6128-84-500-101	1	piece
2CKA006200A0295	Kits 1gang studio white - future linear	62851 UJ-84-WL-500	1	piece
2CKA006730A0154	Smart switch set 4 chan. Bluetooth studio white - future linear	6716/01 UJ-84	1	piece
2CKA006730A0156	Kits 4 chan. Bluetooth studio white - future linear	6716/01 UJ-84-500	1	piece
2CKA006730A0158	Kits 4 channel Bluetooth studio white - future linear	6716/01 UJ-84-510	1	piece
2CKA006730A0145	Rocker for Dimmer Single rocker studio white - 63x63	6735 BT-84	1	piece
2CKA006730A0082	Wall sensor for ZigBee Light Link 1 channel 1gang Radio Control studio white - 63x63	6735/01-84	1	piece
2CKA006730A0164	Electronic Controls for Dimmer Single rocker studio white - 63x63	6735/10-84	1	piece
2CKA006730A0070	Control Element for Switch/dimmer Zigbee 1gang Radio Control studio white - 63x63	6735-84	1	piece
2CKA006730A0086	Wall sensor Zigbee 2 channel 2gang Radio Control studio white - 63x63	6736/01-84	1	piece
2CKA006730A0165	Electronic Controls for Dimmer Two-part button studio white - 63x63	6736/10-84	1	piece
2CKA006730A0074	Control Element for Switch/dimmer Zigbee 2gang Radio Control studio white - 63x63	6736-84	1	piece
2CKA006730A0090	Wall sensor for ZigBee Light Link 4 channel 4gang Radio Control studio white - 63x63	6737/01-84	1	piece
2CKA006730A0078	Control Element for Switch/dimmer Zigbee 4gang Radio Control studio white - 63x63	6737-84	1	piece



2CKA006800A2101	6800-84-104 Watchdog Comfort Sensor 180	6800-84-104	1	piece
2CKA008200A0156	Multimedia Devices Radio receiver studio white - future linear	8240-84-500	1	piece
2CKA008200A0224	Cover Plate Multimedia 3 gang studio white - 63x63	8256-84	1	piece
2CKA001731A1976	Cover Busch-Infolicht® grey metallic - 63x63	1716-803	1	piece
2CKA001731A1921	Cover Busch-Infolicht® anthracite - 63x63	1716-81	1	piece
2CKA001731A1950	Cover Busch-Infolicht® aluminium silver - 63x63	1716-83	1	piece
2CKA001731A1955	Cover Busch-Infolicht® stainless steel - Pure Stainless Steel	1716-866	1	piece
2CKA001731A1978	Cover Busch-Infolicht® studio white matt - 63x63	1716-884	1	piece
2CKA001731A1980	Cover Busch-Infolicht® black matt - 63x63	1716-885	1	piece
2CKA001731A1914	Rocker for Switch, Pull cord anthracite - 63x63	1720-81	1	piece
2CKA001731A1915	Rocker for Switch, Pull cord ivory white - 63x63	1720-82	1	piece
2CKA001731A1949	Rocker for Switch, Pull cord aluminium silver - 63x63	1720-83	1	piece
2CKA001731A1954	Rocker for Switch, Pull cord stainless steel - Pure Stainless Steel	1720-866	1	piece
2CKA001731A1979	Rocker for Switch, Pull cord studio white matt - 63x63	1720-884	1	piece
2CKA001731A1981	Rocker for Switch, Pull cord black matt - 63x63	1720-885	1	piece
2CKA001710A4119	Cover plate with legend Level switch Turn button grey metallic - 63x63	1740 DR/03-803	1	piece
2CKA001710A4120	Cover plate with legend Level switch Turn button anthracite - 63x63	1740 DR/03-81	1	piece
2CKA001710A3807	Cover plate with legend Level switch Turn button ivory white - 63x63	1740 DR/03-82	1	piece
2CKA001710A3811	Cover plate with legend Level switch Turn button aluminium silver - 63x63	1740 DR/03-83	1	piece
2CKA001710A3812	Cover plate with legend Level switch Turn button stainless steel - Pure Stainless Steel	1740 DR/03-866	1	piece
2CKA001710A3870	Cover plate with legend Level switch Turn button studio white matt - 63x63	1740 DR/03-884	1	piece
2CKA001710A3892	Cover plate with legend Level switch Turn button black matt - 63x63	1740 DR/03-885	1	piece
2CKA001710A4121	Mechanical Controls Symbol "2-1-3" for Level switch, Turn button grey metallic - 63x63	1740 DRL-803-503	1	piece
2CKA001710A4122	Mechanical Controls Symbol "2-1-3" for Level switch, Turn button anthracite - 63x63	1740 DRL-81-503	1	piece
2CKA001710A3511	Mechanical Controls Symbol "2-1-3" for Level switch, Turn button ivory white - 63x63	1740 DRL-82-503	1	piece
2CKA001710A4123	Mechanical Controls Symbol "2-1-3" for Level switch, Turn button aluminium silver - 63x63	1740 DRL-83-503	1	piece
2CKA001710A3771	Mechanical Controls Symbol "2-1-3" for Level switch, Turn button stainless steel - Pure Stainless Steel	1740 DRL-866-503	1	piece
2CKA001710A3871	Mechanical Controls Symbol "2-1-3" for Level switch, Turn button studio white matt - 63x63	1740 DRL-884-503	1	piece
2CKA001710A3893	Mechanical Controls Symbol "2-1-3" for Level switch, Turn button black matt - 63x63	1740 DRL-885-503	1	piece
2CKA001710A3840	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button grey metallic - 63x63	1740-803	1	piece
2CKA001710A3623	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button anthracite - 63x63	1740-81	1	piece
2CKA001710A3154	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button ivory white - 63x63	1740-82	1	piece
2CKA001710A3661	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button aluminium silver - 63x63	1740-83	1	piece
2CKA001710A3748	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button stainless steel - Pure Stainless Steel	1740-866	1	piece
2CKA001710A3872	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button studio white matt - 63x63	1740-884	1	piece
2CKA001710A3894	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button black matt - 63x63	1740-885	1	piece

2CKA001710A3843	Cover Plate Blind cap 1 gang with Mounting plate grey metallic - 63x63	1742-803	1	piece
2CKA001710A3612	Cover Plate Blind cap 1 gang with Mounting plate anthracite - 63x63	1742-81	1	piece
2CKA001710A3143	Cover Plate Blind cap 1 gang with Mounting plate ivory white - 63x63	1742-82	1	piece
2CKA001710A3664	Cover Plate Blind cap 1 gang with Mounting plate aluminium silver - 63x63	1742-83	1	piece
2CKA001710A3751	Cover Plate Blind cap 1 gang with Mounting plate stainless steel - Pure Stainless Steel	1742-866	1	piece
2CKA001710A3873	Cover Plate Blind cap 1 gang with Mounting plate studio white matt - 63x63	1742-884	1	piece
2CKA001710A3895	Cover Plate Blind cap 1 gang with Mounting plate black matt - 63x63	1742-885	1	piece
2CKA001724A4364	Cover Plate SAT 4 gang grey metallic - 63x63	1743/10-04- 803	1	piece
2CKA001724A4365	Cover Plate SAT 4 gang anthracite - 63x63	1743/10-04-81	1	piece
2CKA001724A4366	Cover Plate SAT 4 gang ivory white - 63x63	1743/10-04-82	1	piece
2CKA001724A4367	Cover Plate SAT 4 gang aluminium silver - 63x63	1743/10-04-83	1	piece
2CKA001724A4369	Cover Plate SAT 4 gang stainless steel - Pure Stainless Steel	1743/10-04- 866	1	piece
2CKA001724A4370	Cover Plate TV / Radio / 2x SAT 4 gang studio white matt - 63x63	1743/10-04- 884	1	piece
2CKA001724A4371	Cover Plate SAT 4 gang black matt - 63x63	1743/10-04- 885	1	piece
2CKA001724A4373	Cover Plate TV / Radio / 2x SAT 4 gang grey metallic - 63x63	1743-04-803	1	piece
2CKA001724A4374	Cover Plate SAT 4 gang anthracite - 63x63	1743-04-81	1	piece
2CKA001724A4375	Cover Plate TV / Radio / 2x SAT 4 gang ivory white - 63x63	1743-04-82	1	piece
2CKA001724A4376	Cover Plate SAT 4 gang aluminium silver - 63x63	1743-04-83	1	piece
2CKA001724A4378	Cover Plate SAT 4 gang stainless steel - Pure Stainless Steel	1743-04-866	1	piece
2CKA001724A4379	Cover Plate TV / Radio / 2x SAT 4 gang studio white matt - 63x63	1743-04-884	1	piece
2CKA001724A4380	Cover Plate SAT 4 gang black matt - 63x63	1743-04-885	1	piece
2CKA001724A4291	Cover Plate SAT 3 gang grey metallic - 63x63	1743-803	1	piece
2CKA001724A4252	Cover Plate SAT 3 gang anthracite - 63x63	1743-81	1	piece
2CKA001724A2758	Cover Plate SAT 3 gang ivory white - 63x63	1743-82	1	piece
2CKA001724A4262	Cover Plate SAT 3 gang aluminium silver - 63x63	1743-83	1	piece
2CKA001724A4271	Cover Plate SAT 3 gang stainless steel - Pure Stainless Steel	1743-866	1	piece
2CKA001724A4293	Cover Plate SAT 3 gang studio white matt - 63x63	1743-884	1	piece
2CKA001724A4298	Cover Plate SAT 3 gang black matt - 63x63	1743-885	1	piece
2CKA001710A3855	Cover Plate telephone connector boxes (VDo) grey metallic - 63x63	1745-803	1	piece
2CKA001710A3624	Cover Plate telephone connector boxes (VDo) anthracite - 63x63	1745-81	1	piece
2CKA001710A3155	Cover Plate telephone connector boxes (VDo) ivory white - 63x63	1745-82	1	piece
2CKA001710A3675	Cover Plate telephone connector boxes (VDo) aluminium silver - 63x63	1745-83	1	piece
2CKA001710A3766	Cover Plate telephone connector boxes (VDo) stainless steel - Pure Stainless Steel	1745-866	1	piece
2CKA001710A3874	Cover Plate telephone connector boxes (VDo) studio white matt - 63x63	1745-884	1	piece
2CKA001710A3896	Cover Plate telephone connector boxes (VDo) black matt - 63x63	1745-885	1	piece
2CKA001710A3857	Cover Plate Telecommunication inserts 50 x 50 mm grey metallic - 63x63	1746/10-803	1	piece
2CKA001710A3628	Cover Plate Telecommunication inserts 50 x 50 mm anthracite - 63x63	1746/10-81	1	piece
2CKA001710A3521	Cover Plate Telecommunication inserts 50 x 50 mm ivory white - 63x63	1746/10-82	1	piece
2CKA001710A3677	Cover Plate Telecommunication inserts 50 x 50 mm aluminium silver - 63x63	1746/10-83	1	piece

2CKA001710A3768	Cover Plate Telecommunication inserts 50 x 50 mm stainless steel - Pure Stainless Steel	1746/10-866	1	piece
2CKA001710A3875	Cover Plate Telecommunication inserts 50 x 50 mm studio white matt - 63x63	1746/10-884	1	piece
2CKA001710A3897	Cover Plate Telecommunication inserts 50 x 50 mm black matt - 63x63	1746/10-885	1	piece
2CKA001710A3858	Cover Plate with Hinged Lid Telecommunication inserts 50 x 50 mm 1 gang grey metallic - 63x63	1746-803	1	piece
2CKA001710A3618	Cover Plate with Hinged Lid Telecommunication inserts 50 x 50 mm 1 gang anthracite - 63x63	1746-81	1	piece
2CKA001710A3149	Cover Plate with Hinged Lid Telecommunication inserts 50 x 50 mm 1 gang ivory white - 63x63	1746-82	1	piece
2CKA001710A3678	Cover Plate with Hinged Lid Telecommunication inserts 50 x 50 mm 1 gang aluminium silver - 63x63	1746-83	1	piece
2CKA001710A3769	Cover Plate with Hinged Lid Telecommunication inserts 50 x 50 mm 1 gang stainless steel - Pure Stainless Steel	1746-866	1	piece
2CKA001710A3876	Cover Plate with Hinged Lid Telecommunication inserts 50 x 50 mm 1 gang studio white matt - 63x63	1746-884	1	piece
2CKA001710A3898	Cover Plate with Hinged Lid Telecommunication inserts 50 x 50 mm 1 gang black matt - 63x63	1746-885	1	piece
2CKA001710A4092	Intermediate Ring for cover plates Busch-Balance® SI grey metallic - 63x63	1747 BSI-803	1	piece
2CKA001710A4093	Intermediate Ring for cover plates Busch-Balance® SI anthracite - 63x63	1747 BSI-81	1	piece
2CKA001710A4094	Intermediate Ring for cover plates Busch-Balance® SI ivory white - 63x63	1747 BSI-82	1	piece
2CKA001710A4095	Intermediate Ring for cover plates Busch-Balance® SI aluminium silver - 63x63	1747 BSI-83	1	piece
2CKA001710A4097	Intermediate Ring for cover plates Busch-Balance® SI stainless steel - Pure Stainless Steel	1747 BSI-866	1	piece
2CKA001710A4098	Intermediate Ring for cover plates Busch-Balance® SI studio white matt - 63x63	1747 BSI-884	1	piece
2CKA001710A4099	Intermediate Ring for cover plates Busch-Balance® SI black matt - 63x63	1747 BSI-885	1	piece
2CKA001710A3862	Intermediate Ring Cover plates Busch-Duro 2000® SI and Reflex SI ivory white - 63x63	1747 SI-82	1	piece
2CKA001710A3860	Intermediate Ring Cover plates Busch-Duro 2000® SI and Reflex SI ivory white - 63x63	1747-82	1	piece
2CKA001710A3844	Cover Plate Cable outlet with Mounting plate grey metallic - 63x63	1749-803	1	piece
2CKA001710A3614	Cover Plate Cable outlet with Mounting plate anthracite - 63x63	1749-81	1	piece
2CKA001710A3145	Cover Plate Cable outlet with Mounting plate ivory white - 63x63	1749-82	1	piece
2CKA001710A3665	Cover Plate Cable outlet with Mounting plate aluminium silver - 63x63	1749-83	1	piece
2CKA001710A3752	Cover Plate Cable outlet with Mounting plate stainless steel - Pure Stainless Steel	1749-866	1	piece
2CKA001710A3878	Cover Plate Cable outlet with Mounting plate studio white matt - 63x63	1749-884	1	piece
2CKA001710A3900	Cover Plate Cable outlet with Mounting plate black matt - 63x63	1749-885	1	piece
2CKA001710A3679	Cover Plate BNC/TNC 2 gang aluminium silver - 63x63	1750-83	1	piece
2CKA001723A0257	Cover Plate Loudspeaker 2 gang grey metallic - 63x63	1751-803	1	piece
2CKA001723A0253	Cover Plate Loudspeaker 2 gang anthracite - 63x63	1751-81	1	piece
2CKA001723A0239	Cover Plate Loudspeaker 2 gang ivory white - 63x63	1751-82	1	piece
2CKA001723A0254	Cover Plate Loudspeaker 2 gang aluminium silver - 63x63	1751-83	1	piece
2CKA001723A0255	Cover Plate Loudspeaker 2 gang stainless steel - Pure Stainless Steel	1751-866	1	piece

2CKA001723A0260	Cover Plate Loudspeaker 2 gang studio white matt - 63x63	1751-884	1	piece
2CKA001723A0259	Cover Plate Loudspeaker 2 gang black matt - 63x63	1751-885	1	piece
2CKA001710A3841	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key grey metallic - 63x63	1755 SL/PZ-803-101	1	piece
2CKA001710A3626	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key anthracite - 63x63	1755 SL/PZ-81-101	1	piece
2CKA001710A3157	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key ivory white - 63x63	1755 SL/PZ-82-101	1	piece
2CKA001710A3662	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key aluminium silver - 63x63	1755 SL/PZ-83-101	1	piece
2CKA001710A3749	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key stainless steel - Pure Stainless Steel	1755 SL/PZ-866-101	1	piece
2CKA001710A3925	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key studio white matt - 63x63	1755 SL/PZ-884-101	1	piece
2CKA001710A3902	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key black matt - 63x63	1755 SL/PZ-885-101	1	piece
2CKA001724A4292	Cover plate with labelling field For data connection housing 2 gang grey metallic - 63x63	1758-803	1	piece
2CKA001724A4253	Cover plate with labelling field For data connection housing 2 gang anthracite - 63x63	1758-81	1	piece
2CKA001724A2759	Cover plate with labelling field For data connection housing 2 gang ivory white - 63x63	1758-82	1	piece
2CKA001724A4263	Cover plate with labelling field For data connection housing 2 gang aluminium silver - 63x63	1758-83	1	piece
2CKA001724A4272	Cover plate with labelling field For data connection housing 2 gang stainless steel - Pure Stainless Steel	1758-866	1	piece
2CKA001724A4307	Cover plate with labelling field For data connection housing 2 gang studio white matt - 63x63	1758-884	1	piece
2CKA001724A4299	Cover plate with labelling field For data connection housing 2 gang black matt - 63x63	1758-885	1	piece
2CKA001731A3997	Rocker with labelling field Symbol "bell" for Switch/push button, Single push button grey metallic - 63x63	1764 NLI/KI-803	1	piece
2CKA001731A3998	Rocker with labelling field Symbol "bell" for Switch/push button, Single push button anthracite - 63x63	1764 NLI/KI-81	1	piece
2CKA001731A3999	Rocker with labelling field Symbol "bell" for Switch/push button, Single push button ivory white - 63x63	1764 NLI/KI-82	1	piece
2CKA001731A4000	Rocker with labelling field Symbol "bell" for Switch/push button, Single push button aluminium silver - 63x63	1764 NLI/KI-83	1	piece
2CKA001731A4003	Rocker with labelling field Symbol "bell" for Switch/push button, Single push button stainless steel - Pure Stainless Steel	1764 NLI/KI-866	1	piece
2CKA001731A4004	Rocker with labelling field Symbol "bell" for Switch/push button, Single push button studio white matt - 63x63	1764 NLI/KI-884	1	piece
2CKA001731A4005	Rocker with labelling field Symbol "bell" for Switch/push button, Single push button black matt - 63x63	1764 NLI/KI-885	1	piece
2CKA001731A4011	Rocker with labelling field for Switch/push button, Single push button red - 63x63	1764 NLI-12-82-101	1	piece
2CKA001731A4007	Rocker with labelling field for Switch/push button, Single push button green - 63x63	1764 NLI-13-82	1	piece
2CKA001731A1975	Rocker with labelling field for Switch/push button, Single rocker grey metallic - 63x63	1764 NLI-803	1	piece
2CKA001731A1552	Rocker with labelling field for Switch/push button, Single push button anthracite - 63x63	1764 NLI-81	1	piece
2CKA001731A1876	Rocker with labelling field for Switch/push button, Single push button ivory white - 63x63	1764 NLI-82	1	piece
2CKA001731A1948	Rocker with labelling field for Switch/push button, Single push button aluminium silver - 63x63	1764 NLI-83	1	piece

2CKA001731A1953	Rocker with labelling field for Switch/push button, Single push button stainless steel - Pure Stainless Steel	1764 NLI-866	1	piece
2CKA001731A1985	Rocker with labelling field for Switch/push button, Single push button studio white matt - 63x63	1764 NLI-884	1	piece
2CKA001731A1982	Rocker with labelling field for Switch/push button, Single push button black matt - 63x63	1764 NLI-885	1	piece
2CKA001710A3854	Cover Plate TAE 1 gang grey metallic - 63x63	1766-803	1	piece
2CKA001710A3613	Cover Plate TAE 1 gang anthracite - 63x63	1766-81	1	piece
2CKA001710A3144	Cover Plate TAE 1 gang ivory white - 63x63	1766-82	1	piece
2CKA001710A3659	Cover Plate TAE 1 gang aluminium silver - 63x63	1766-83	1	piece
2CKA001710A3765	Cover Plate TAE 1 gang stainless steel - Pure Stainless Steel	1766-866	1	piece
2CKA001710A3926	Cover Plate TAE 1 gang studio white matt - 63x63	1766-884	1	piece
2CKA001710A3903	Cover Plate TAE 1 gang black matt - 63x63	1766-885	1	piece
2CKA001753A0254	Cover Plate 1 ... 15 Min for Time switch, Toggle grey metallic - 63x63	1770-803-103	1	piece
2CKA001753A0255	Cover Plate 1 ... 15 Min for Time switch, Toggle anthracite - 63x63	1770-81-103	1	piece
2CKA001753A0256	Cover Plate 1 ... 15 Min for Time switch, Toggle white - 63x63	1770-82-103	1	piece
2CKA001753A0257	Cover Plate 1 ... 15 Min for Time switch, Toggle aluminium - 63x63	1770-83-103	1	piece
2CKA001753A0259	Cover Plate 1 ... 15 Min for Time switch, Toggle stainless steel - Pure Stainless Steel	1770-866-103	1	piece
2CKA001753A0260	Cover Plate 1 ... 15 Min for Time switch, Toggle studio white matt - 63x63	1770-884-103	1	piece
2CKA001753A0261	Cover Plate 1 ... 15 Min for Time switch, Toggle black matt - 63x63	1770-885-103	1	piece
2CKA001753A0264	Cover Plate Time indication for Time switch, Turn button grey metallic - 63x63	1771-803-103	1	piece
2CKA001753A0265	Cover Plate 10 ... 120 Min for Time switch, Toggle anthracite - 63x63	1771-81-103	1	piece
2CKA001753A0266	Cover Plate 10 ... 120 Min for Time switch, Toggle white - 63x63	1771-82-103	1	piece
2CKA001753A0267	Cover Plate 10 ... 120 Min for Time switch, Toggle aluminium - 63x63	1771-83-103	1	piece
2CKA001753A0302	Cover Plate 10 ... 120 Min for Time switch, Toggle stainless steel - Pure Stainless Steel	1771-866-103	1	piece
2CKA001753A0303	Cover Plate 10 ... 120 Min for Time switch, Toggle studio white matt - 63x63	1771-884-103	1	piece
2CKA001753A0304	Cover Plate 10 ... 120 Min for Time switch, Toggle black matt - 63x63	1771-885-103	1	piece
2CKA001751A2977	Multimedia Devices anthracite	1785 ENO-81	1	piece
2CKA001751A2978	Multimedia Devices ivory white	1785 ENO-82	1	piece
2CKA001751A2979	Multimedia Devices aluminium silver	1785 ENO-83	1	piece
2CKA001751A3101	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker ivory white - carat	1785 JA/02-82	1	piece
2CKA001751A3097	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker aluminium silver - 63x63	1785 JA/02-83	1	piece
2CKA001751A3103	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker studio white matt - 63x63	1785 JA/02-884	1	piece
2CKA001751A3105	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker black matt - 63x63	1785 JA/02-885	1	piece
2CKA001751A3020	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker grey metallic - 63x63	1785 JA-803	1	piece
2CKA001751A2934	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker anthracite - 63x63	1785 JA-81	1	piece
2CKA001751A2748	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker ivory white - 63x63	1785 JA-82	1	piece
2CKA001751A2944	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker aluminium silver - 63x63	1785 JA-83	1	piece
2CKA001751A2964	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker stainless steel - Pure Stainless Steel	1785 JA-866	1	piece
2CKA001751A3022	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker studio white matt - 63x63	1785 JA-884	1	piece

2CKA001751A3036	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker black matt - 63x63	1785 JA-885	1	piece
2CKA001751A3126	Mechanical Controls None for Switch/push button, Two-part rocker aluminium silver - 63x63	1785 K-83-500	1	piece
2CKA001751A3204	Rocker with legend DND, MUR for Switch/push button, Single rocker grey metallic - 63x63	1785/11-803	1	piece
2CKA001751A3205	Rocker with legend DND, MUR for Switch/push button, Two-part rocker anthracite - 63x63	1785/11-81	1	piece
2CKA001751A2991	Rocker with legend DND, MUR for Switch/push button, Two-part rocker ivory white - 63x63	1785/11-82	1	piece
2CKA001751A2995	Rocker with legend DND, MUR for Switch/push button, Two-part rocker aluminium silver - 63x63	1785/11-83	1	piece
2CKA001751A2996	Rocker with legend DND, MUR for Switch/push button, Two-part rocker stainless steel - Pure Stainless Steel	1785/11-866	1	piece
2CKA001751A3023	Rocker with legend DND, MUR for Switch/push button, Two-part rocker studio white matt - 63x63	1785/11-884	1	piece
2CKA001751A3037	Rocker with legend DND, MUR for Switch/push button, Two-part rocker black matt - 63x63	1785/11-885	1	piece
2CKA001751A3018	Rocker for Switch/push button, Two-part rocker grey metallic - 63x63	1785-803	1	piece
2CKA001751A2930	Rocker for Switch/push button, Two-part rocker anthracite - 63x63	1785-81	1	piece
2CKA001751A2744	Rocker for Switch/push button, Two-part rocker ivory white - 63x63	1785-82	1	piece
2CKA001751A2942	Rocker for Switch/push button, Two-part rocker aluminium silver - 63x63	1785-83	1	piece
2CKA001751A3092	Mechanical Controls Without imprint for Switch/push button, Two-part rocker aluminium silver - 63x63	1785-83-500	1	piece
2CKA001751A3087	Mechanical Controls Without imprint for Switch/push button, Two-part rocker stainless steel - Pure Stainless Steel	1785-866-500	1	piece
2CKA001751A3024	Rocker for Switch/push button, Two-part rocker studio white matt - 63x63	1785-884	1	piece
2CKA001751A3038	Rocker for Switch/push button, Two-part rocker black matt - 63x63	1785-885	1	piece
2CKA001751A2965	Multimedia Devices anthracite	1786 ENO-81	1	piece
2CKA001751A2966	Multimedia Devices ivory white	1786 ENO-82	1	piece
2CKA001751A2967	Multimedia Devices aluminium silver	1786 ENO-83	1	piece
2CKA001751A3100	Rocker for Venetian blind, Single rocker ivory white - carat	1786 JA/02-82	1	piece
2CKA001751A3096	Rocker with legend Symbol "arrows" for Switch/push button, aluminium silver - 63x63	1786 JA/02-83	1	piece
2CKA001751A3102	Rocker for Venetian blind, Single rocker studio white matt - 63x63	1786 JA/02-884	1	piece
2CKA001751A3104	Rocker with legend Symbol "arrows" black matt - 63x63	1786 JA/02-885	1	piece
2CKA001751A3207	Rocker DND for Switch/push button, Single rocker anthracite - 63x63	1786/11-81	1	piece
2CKA001751A2997	Rocker DND for Switch/push button, Single rocker ivory white - 63x63	1786/11-82	1	piece
2CKA001751A3001	Rocker DND for Switch/push button, Single rocker aluminium silver - 63x63	1786/11-83	1	piece
2CKA001751A3002	Rocker DND for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1786/11-866	1	piece
2CKA001751A3026	Rocker DND for Switch/push button, Single rocker studio white matt - 63x63	1786/11-884	1	piece
2CKA001751A3040	Rocker DND for Switch/push button, Single rocker black matt - 63x63	1786/11-885	1	piece
2CKA001751A3145	Rocker for Switch/push button, Single rocker red - 63x63	1786-12-82	1	piece
2CKA001751A3093	Mechanical Controls Without imprint for Switch/push button, Single rocker grey metallic - 63x63	1786-803-500	1	piece
2CKA001751A3079	Mechanical Controls Without imprint for Switch/push button, Single rocker anthracite - 63x63	1786-81-500	1	piece

2CKA001751A3083	Mechanical Controls Without imprint for Switch/push button, Single rocker ivory white - 63x63	1786-82-500	1	piece
2CKA001751A3075	Mechanical Controls Without imprint for Switch/push button, Single rocker aluminium silver - 63x63	1786-83-500	1	piece
2CKA001751A3077	Mechanical Controls Without imprint for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1786-866-500	1	piece
2CKA001751A3089	Mechanical Controls Without imprint for Switch/push button, Single rocker studio white matt - 63x63	1786-884-500	1	piece
2CKA001751A3094	Mechanical Controls Without imprint for Switch/push button, Single rocker black matt - 63x63	1786-885-500	1	piece
2CKA001751A3017	Rocker for Switch/push button, Single rocker grey metallic - 63x63	1788-803	1	piece
2CKA001751A2927	Rocker for Switch/push button, Single rocker anthracite - 63x63	1788-81	1	piece
2CKA001751A2742	Rocker for Switch/push button, Single rocker ivory white - 63x63	1788-82	1	piece
2CKA001751A2954	Rocker for Switch/push button, Single rocker aluminium silver - 63x63	1788-83	1	piece
2CKA001751A2961	Rocker for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1788-866	1	piece
2CKA001751A3028	Rocker for Switch/push button, Single rocker studio white matt - 63x63	1788-884	1	piece
2CKA001751A3042	Rocker for Switch/push button, Single rocker black matt - 63x63	1788-885	1	piece
2CKA001751A3019	Rocker with legend Heizung for Switch/push button, Single rocker grey metallic - 63x63	1789 H-803	1	piece
2CKA001751A2929	Rocker with legend Heizung for Switch/push button, Single rocker anthracite - 63x63	1789 H-81	1	piece
2CKA001751A2743	Rocker with legend Heizung for Switch/push button, Single rocker ivory white - 63x63	1789 H-82	1	piece
2CKA001751A2955	Rocker with legend Heizung for Switch/push button, Single rocker aluminium silver - 63x63	1789 H-83	1	piece
2CKA001751A2963	Rocker with legend Heizung for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 H-866	1	piece
2CKA001751A3029	Rocker with legend Heizung for Switch/push button, Single rocker studio white matt - 63x63	1789 H-884	1	piece
2CKA001751A3043	Rocker with legend Heizung for Switch/push button, Single rocker black matt - 63x63	1789 H-885	1	piece
2CKA001751A3015	Rocker for Switch/push button, Single rocker grey metallic - 63x63	1789 KI-803	1	piece
2CKA001751A2932	Rocker with legend Symbol "bell" for Switch/push button, Single rocker anthracite - 63x63	1789 KI-81	1	piece
2CKA001751A2746	Rocker with legend Symbol "bell" for Switch/push button, Single rocker ivory white - 63x63	1789 KI-82	1	piece
2CKA001751A2952	Rocker for Switch/push button, Single rocker aluminium silver - 63x63	1789 KI-83	1	piece
2CKA001751A2959	Rocker for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 KI-866	1	piece
2CKA001751A3030	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white matt - 63x63	1789 KI-884	1	piece
2CKA001751A3044	Rocker with legend Symbol "bell" for Switch/push button, Single rocker black matt - 63x63	1789 KI-885	1	piece
2CKA001751A3014	Rocker with legend Symbol "light" for Switch/push button, Single rocker grey metallic - 63x63	1789 LI-803	1	piece
2CKA001751A2931	Rocker with legend Symbol "light" for Switch/push button, Single rocker anthracite - 63x63	1789 LI-81	1	piece
2CKA001751A2745	Rocker with legend Symbol "light" for Switch/push button, Single rocker ivory white - 63x63	1789 LI-82	1	piece
2CKA001751A2951	Rocker with legend Symbol "light" for Switch/push button, Single rocker aluminium silver - 63x63	1789 LI-83	1	piece
2CKA001751A2958	Rocker with legend Symbol "light" for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 LI-866	1	piece

2CKA001751A3031	Rocker with legend Symbol "light" for Switch/push button, Single rocker studio white matt - 63x63	1789 LI-884	1	piece
2CKA001751A3045	Rocker with legend Symbol "light" for Switch/push button, Single rocker black matt - 63x63	1789 LI-885	1	piece
2CKA001751A3146	Rocker for Switch/push button, Single rocker grey metallic - 63x63	1789 N-803	1	piece
2CKA001751A3147	Rocker for Switch/push button, Single rocker anthracite - 63x63	1789 N-81	1	piece
2CKA001751A3148	Rocker for Switch/push button, Single rocker ivory white - 63x63	1789 N-82	1	piece
2CKA001751A3149	Rocker for Switch/push button, Single rocker aluminium silver - 63x63	1789 N-83	1	piece
2CKA001751A3152	Rocker for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 N-866	1	piece
2CKA001751A3153	Rocker for Switch/push button, Single rocker studio white matt - 63x63	1789 N-884	1	piece
2CKA001751A3154	Rocker for Switch/push button, Single rocker black matt - 63x63	1789 N-885	1	piece
2CKA001751A3156	Rocker for Switch/push button, Single rocker grey metallic - 63x63	1789 ST-803	1	piece
2CKA001751A3157	Rocker for Switch/push button, Single rocker anthracite - 63x63	1789 ST-81	1	piece
2CKA001751A3158	Rocker for Switch/push button, Single rocker ivory white - 63x63	1789 ST-82	1	piece
2CKA001751A3159	Rocker for Switch/push button, Single rocker aluminium silver - 63x63	1789 ST-83	1	piece
2CKA001751A3162	Rocker for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 ST-866	1	piece
2CKA001751A3163	Rocker for Switch/push button, Single rocker studio white matt - 63x63	1789 ST-884	1	piece
2CKA001751A3164	Rocker for Switch/push button, Single rocker black matt - 63x63	1789 ST-885	1	piece
2CKA001751A3016	Rocker for Switch/push button, Single rocker grey metallic - 63x63	1789 TR-803	1	piece
2CKA001751A2933	Rocker for Switch/push button, Single rocker anthracite - 63x63	1789 TR-81	1	piece
2CKA001751A2747	Rocker for Switch/push button, Single rocker ivory white - 63x63	1789 TR-82	1	piece
2CKA001751A2953	Rocker for Switch/push button, Single rocker aluminium silver - 63x63	1789 TR-83	1	piece
2CKA001751A2960	Rocker for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 TR-866	1	piece
2CKA001751A3032	Rocker for Switch/push button, Single rocker studio white matt - 63x63	1789 TR-884	1	piece
2CKA001751A3046	Rocker for Switch/push button, Single rocker black matt - 63x63	1789 TR-885	1	piece
2CKA001751A3013	Rocker for Switch/push button, Single rocker grey metallic - 63x63	1789-803	1	piece
2CKA001751A2928	Rocker for Switch/push button, Single rocker anthracite - 63x63	1789-81	1	piece
2CKA001751A2813	Rocker for Switch/push button, Single rocker ivory white - 63x63	1789-82	1	piece
2CKA001751A2945	Rocker for Switch/push button, Single rocker aluminium silver - 63x63	1789-83	1	piece
2CKA001751A2957	Rocker for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789-866	1	piece
2CKA001751A3033	Rocker for Switch/push button, Single rocker studio white matt - 63x63	1789-884	1	piece
2CKA001751A3047	Rocker for Switch/push button, Single rocker black matt - 63x63	1789-885	1	piece
2CKA001710A4124	Cover plate with legend Card for Switch/push button, Hotel card Hotel card grey metallic - 63x63	1792-803	1	piece
2CKA001710A3639	Cover plate with legend Card for Switch/push button, Hotel card Hotel card anthracite - 63x63	1792-81	1	piece
2CKA001710A3640	Cover plate with legend Card for Switch/push button, Hotel card Hotel card ivory white - 63x63	1792-82	1	piece



2CKA001710A3670	Cover plate with legend Card for Switch/push button, Hotel card Hotel card aluminium silver - 63x63	1792-83	1	piece
2CKA001710A3757	Cover plate with legend Card for Switch/push button, Hotel card Hotel card stainless steel - Pure Stainless Steel	1792-866	1	piece
2CKA001710A3928	Cover plate with legend Card for Switch/push button, Hotel card Hotel card studio white matt - 63x63	1792-884	1	piece
2CKA001710A3905	Cover plate with legend Card for Switch/push button, Hotel card Hotel card black matt - 63x63	1792-885	1	piece
2CKA001710A3849	Cover plate with legend for Thermostat Turn button grey metallic - 63x63	1794 TA-803	1	piece
2CKA001710A3695	Cover plate with legend for Thermostat Turn button anthracite - 63x63	1794 TA-81	1	piece
2CKA001710A3696	Cover plate with legend for Thermostat Turn button ivory white - 63x63	1794 TA-82	1	piece
2CKA001710A3697	Cover plate with legend for Thermostat Turn button aluminium silver - 63x63	1794 TA-83	1	piece
2CKA001710A3761	Cover plate with legend for Thermostat Turn button stainless steel - Pure Stainless Steel	1794 TA-866	1	piece
2CKA001710A3883	Cover plate with legend for Thermostat Turn button studio white matt - 63x63	1794 TA-884	1	piece
2CKA001710A3906	Cover plate with legend for Thermostat Turn button black matt - 63x63	1794 TA-885	1	piece
2CKA001710A3847	Cover plate with legend for Thermostat Turn button grey metallic - 63x63	1794-803	1	piece
2CKA001710A3629	Cover plate with legend for Thermostat Turn button anthracite - 63x63	1794-81	1	piece
2CKA001710A3668	Cover plate with legend for Thermostat Turn button aluminium silver - 63x63	1794-83	1	piece
2CKA001710A3884	Cover Plate for Thermostat Turn button studio white matt - 63x63	1794-884	1	piece
2CKA001710A3907	Cover Plate for Thermostat Turn button black matt - 63x63	1794-885	1	piece
2CKA001710A4012	Cover plate with legend for Thermostat Turn button grey metallic - 63x63	1795 HK-803	1	piece
2CKA001710A4015	Cover plate with legend for Thermostat Turn button ivory white - 63x63	1795 HK-82	1	piece
2CKA001710A4018	Cover plate with legend for Thermostat Turn button stainless steel - Pure Stainless Steel	1795 HK-866	1	piece
2CKA001710A4044	Cover plate with legend for Thermostat Turn button 1 sliding switch grey metallic - 63x63	1795 HKEA-803	1	piece
2CKA001710A4045	Cover plate with legend for Thermostat Turn button 1 sliding switch anthracite - 63x63	1795 HKEA-81	1	piece
2CKA001710A4047	Cover plate with legend for Thermostat Turn button 1 sliding switch ivory white - 63x63	1795 HKEA-82	1	piece
2CKA001710A4048	Cover plate with legend for Thermostat Turn button 1 sliding switch aluminium silver - 63x63	1795 HKEA-83	1	piece
2CKA001710A4050	Cover plate with legend for Thermostat Turn button 1 sliding switch stainless steel - Pure Stainless Steel	1795 HKEA-866	1	piece
2CKA001710A4051	Cover plate with legend for Thermostat Turn button 1 sliding switch studio white matt - 63x63	1795 HKEA-884	1	piece
2CKA001710A4052	Cover plate with legend for Thermostat Turn button 1 sliding switch black matt - 63x63	1795 HKEA-885	1	piece
2CKA001710A3850	Cover plate with legend for Thermostat Turn button 1 sliding switch grey metallic - 63x63	1795 TA-803	1	piece
2CKA001710A3722	Cover plate with legend for Thermostat Turn button 1 sliding switch anthracite - 63x63	1795 TA-81	1	piece
2CKA001710A3723	Cover plate with legend for Thermostat Turn button 1 sliding switch ivory white - 63x63	1795 TA-82	1	piece
2CKA001710A3724	Cover plate with legend for Thermostat Turn button 1 sliding switch aluminium silver - 63x63	1795 TA-83	1	piece
2CKA001710A3762	Cover plate with legend for Thermostat Turn button 1 sliding switch stainless steel - Pure Stainless Steel	1795 TA-866	1	piece
2CKA001710A3885	Cover plate with legend for Thermostat Turn button 1 sliding switch studio white matt - 63x63	1795 TA-884	1	piece

2CKA001710A3908	Cover plate with legend for Thermostat Turn button 1 sliding switch black matt - 63x63	1795 TA-885	1	piece
2CKA001710A3848	Cover plate with legend for Thermostat Turn button 1 sliding switch grey metallic - 63x63	1795-803	1	piece
2CKA001710A3630	Cover plate with legend for Thermostat Turn button 1 sliding switch anthracite - 63x63	1795-81	1	piece
2CKA001710A3568	Cover plate with legend for Thermostat Turn button 1 sliding switch ivory white - 63x63	1795-82	1	piece
2CKA001710A3669	Cover plate with legend for Thermostat Turn button 1 sliding switch aluminium silver - 63x63	1795-83	1	piece
2CKA001710A3756	Cover plate with legend for Thermostat Turn button 1 sliding switch stainless steel - Pure Stainless Steel	1795-866	1	piece
2CKA001710A3886	Cover plate with legend for Thermostat Turn button 1 sliding switch studio white matt - 63x63	1795-884	1	piece
2CKA001710A3909	Cover plate with legend for Thermostat Turn button 1 sliding switch black matt - 63x63	1795-885	1	piece
2CKA001753A0307	Cover Plate Pull cord grey metallic - 63x63	1796-803	1	piece
2CKA001753A0309	Cover Plate Pull cord ivory white - 63x63	1796-82	1	piece
2CKA001753A0310	Cover Plate Pull cord aluminium silver - 63x63	1796-83	1	piece
2CKA001753A0312	Cover Plate Pull cord stainless steel - Pure Stainless Steel	1796-866	1	piece
2CKA001753A0313	Cover Plate Pull cord studio white matt - 63x63	1796-884	1	piece
2CKA001753A0314	Cover Plate Pull cord black matt - 63x63	1796-885	1	piece
2CKA001710A3856	Cover plate with labelling field Modular Jack 2 gang grey metallic - 63x63	1800-803	1	piece
2CKA001710A3627	Cover plate with labelling field Modular Jack 2 gang anthracite - 63x63	1800-81	1	piece
2CKA001710A3158	Cover plate with labelling field Modular Jack 2 gang ivory white - 63x63	1800-82	1	piece
2CKA001710A3676	Cover plate with labelling field Modular Jack 2 gang aluminium silver - 63x63	1800-83	1	piece
2CKA001710A3767	Cover plate with labelling field Modular Jack 2 gang stainless steel - Pure Stainless Steel	1800-866	1	piece
2CKA001710A3887	Cover plate with labelling field Modular Jack 2 gang studio white matt - 63x63	1800-884	1	piece
2CKA001710A3910	Cover plate with labelling field Modular Jack 2 gang black matt - 63x63	1800-885	1	piece
2CKA001710A3853	Cover plate with labelling field UAE/IAE (ISDN) 2 gang grey metallic - 63x63	1803-02-803	1	piece
2CKA001710A3615	Cover plate with labelling field UAE/IAE (ISDN) 2 gang anthracite - 63x63	1803-02-81	1	piece
2CKA001710A3146	Cover plate with labelling field UAE/IAE (ISDN) 2 gang ivory white - 63x63	1803-02-82	1	piece
2CKA001710A3610	Cover plate with labelling field UAE/IAE (ISDN) 2 gang aluminium silver - 63x63	1803-02-83	1	piece
2CKA001710A3764	Cover plate with labelling field UAE/IAE (ISDN) 2 gang stainless steel - Pure Stainless Steel	1803-02-866	1	piece
2CKA001710A3888	Cover plate with labelling field UAE/IAE (ISDN) 2 gang studio white matt - 63x63	1803-02-884	1	piece
2CKA001710A3911	Cover plate with labelling field UAE/IAE (ISDN) 2 gang black matt - 63x63	1803-02-885	1	piece
2CKA001710A3852	Cover plate with labelling field UAE/IAE (ISDN) 1 gang grey metallic - 63x63	1803-803	1	piece
2CKA001710A3616	Cover plate with labelling field UAE/IAE (ISDN) 1 gang anthracite - 63x63	1803-81	1	piece
2CKA001710A3147	Cover plate with labelling field UAE/IAE (ISDN) 1 gang ivory white - 63x63	1803-82	1	piece
2CKA001710A3674	Cover plate with labelling field UAE/IAE (ISDN) 1 gang aluminium silver - 63x63	1803-83	1	piece
2CKA001710A3763	Cover plate with labelling field UAE/IAE (ISDN) 1 gang stainless steel - Pure Stainless Steel	1803-866	1	piece
2CKA001710A3889	Cover plate with labelling field UAE/IAE (ISDN) 1 gang studio white matt - 63x63	1803-884	1	piece
2CKA001710A3912	Cover plate with labelling field UAE/IAE (ISDN) 1 gang black matt - 63x63	1803-885	1	piece

2CKA002013A5404	Busch-Object socket outlet SCHUKO® socket insert Safety Shutter anthracite - 63x63	20 EUAB-81	1	piece
2CKA002013A5405	Busch-Object socket outlet SCHUKO® socket insert Safety Shutter ivory white - 63x63	20 EUAB-82	1	piece
2CKA002013A5406	Busch-Object socket outlet SCHUKO® socket insert Safety Shutter aluminium silver - 63x63	20 EUAB-83	1	piece
2CKA002013A5408	Busch-Object socket outlet SCHUKO® socket insert Safety Shutter stainless steel - Pure Stainless Steel	20 EUAB-866	1	piece
2CKA002013A5409	Busch-Object socket outlet SCHUKO® socket insert Safety Shutter studio white matt - 63x63	20 EUAB-884	1	piece
2CKA002013A5410	Busch-Object socket outlet SCHUKO® socket insert Safety Shutter black matt - 63x63	20 EUAB-885	1	piece
2CKA002011A6260	SCHUKO® Socket insert with print green - 63x63	20 EUC-13-82-101	1	piece
2CKA002011A3723	SCHUKO® Socket insert with print orange - 63x63	20 EUC-14-82	1	piece
2CKA002011A6216	Socket Outlets grey metallic - 63x63	20 EUC-803-500	1	piece
2CKA002011A6215	Socket Outlets anthracite - 63x63	20 EUC-81-500	1	piece
2CKA002011A6214	Socket Outlets ivory white - 63x63	20 EUC-82-500	1	piece
2CKA002011A6213	Socket Outlets aluminium silver - 63x63	20 EUC-83-500	1	piece
2CKA002011A6212	Socket Outlets stainless steel - Pure Stainless Steel	20 EUC-866-500	1	piece
2CKA002011A6208	Socket Outlets studio white matt - 63x63	20 EUC-884-500	1	piece
2CKA002011A6211	Socket Outlets black matt - 63x63	20 EUC-885-500	1	piece
2CKA002013A5472	SCHUKO® Socket insert with print Safety Shutter green - 63x63	20 EUCB-13-82-102	1	piece
2CKA002013A5413	SCHUKO® Socket insert with print Safety Shutter orange - 63x63	20 EUCB-14-82-10	1	piece
2CKA002013A5414	Busch-Service-Socket SCHUKO® socket insert Safety Shutter grey metallic - 63x63	20 EUCBDR-803	1	piece
2CKA002013A5415	Busch-Service-Socket SCHUKO® socket insert Safety Shutter anthracite - 63x63	20 EUCBDR-81	1	piece
2CKA002013A5416	Busch-Service-Socket SCHUKO® socket insert Safety Shutter ivory white - 63x63	20 EUCBDR-82	1	piece
2CKA002013A5417	Busch-Service-Socket SCHUKO® socket insert Safety Shutter aluminium silver - 63x63	20 EUCBDR-83	1	piece
2CKA002013A5419	Busch-Service-Socket SCHUKO® socket insert Safety Shutter stainless steel - Pure Stainless Steel	20 EUCBDR-866	1	piece
2CKA002013A5420	Busch-Service-Socket SCHUKO® socket insert Safety Shutter studio white matt - 63x63	20 EUCBDR-884	1	piece
2CKA002013A5421	Busch-Service-Socket SCHUKO® socket insert Safety Shutter black matt - 63x63	20 EUCBDR-885	1	piece
2CKA002013A5456	SCHUKO® socket insert Safety Shutter withControl light; LED /Green grey metallic - 63x63	20 EUCBL-803	1	piece
2CKA002013A5457	SCHUKO® socket insert Safety Shutter withControl light; LED /Green anthracite - 63x63	20 EUCBL-81	1	piece
2CKA002013A5284	SCHUKO® socket insert Safety Shutter withControl light; LED /Green ivory white - 63x63	20 EUCBL-82	1	piece
2CKA002013A5285	SCHUKO® socket insert Safety Shutter withControl light; LED /Green aluminium silver - 63x63	20 EUCBL-83	1	piece
2CKA002013A5289	SCHUKO® socket insert Safety Shutter withControl light; LED /Green stainless steel - Pure Stainless Steel	20 EUCBL-866	1	piece
2CKA002013A5336	SCHUKO® socket insert Safety Shutter withControl light; LED /Green studio white matt - 63x63	20 EUCBL-884	1	piece
2CKA002013A5330	SCHUKO® socket insert Safety Shutter withControl light; LED /Green black matt - 63x63	20 EUCBL-885	1	piece

2CKA002013A5458	Busch-steplight SCHUKO® socket insert Safety Shutter with Night light; LED /White grey metallic - 63x63	20 EUCBLI-803	1	piece
2CKA002013A5459	Busch-steplight SCHUKO® socket insert Safety Shutter with Night light; LED /White anthracite - 63x63	20 EUCBLI-81	1	piece
2CKA002013A5292	Busch-steplight SCHUKO® socket insert Safety Shutter with Night light; LED /White ivory white - 63x63	20 EUCBLI-82	1	piece
2CKA002013A5293	Busch-steplight SCHUKO® socket insert Safety Shutter with Night light; LED /White aluminium silver - 63x63	20 EUCBLI-83	1	piece
2CKA002013A5460	Busch-steplight SCHUKO® socket insert Safety Shutter with Night light; LED /White stainless steel - Pure Stainless Steel	20 EUCBLI-866	1	piece
2CKA002013A5326	Busch-steplight SCHUKO® socket insert Safety Shutter with Night light; LED /White studio white matt - 63x63	20 EUCBLI-884	1	piece
2CKA002013A5331	Busch-steplight SCHUKO® socket insert Safety Shutter with Night light; LED /White black matt - 63x63	20 EUCBLI-885	1	piece
2CKA002013A5463	SCHUKO® socket insert Safety Shutter red - 63x63	20 EUCKSDV-12-82-101	1	piece
2CKA002013A5462	SCHUKO® Socket insert with print Safety Shutter grey metallic - 63x63	20 EUCKSDV-803	1	piece
2CKA002013A5266	SCHUKO® Socket insert with print Safety Shutter anthracite - 63x63	20 EUCKSDV-81	1	piece
2CKA002013A5267	SCHUKO® Socket insert with print Safety Shutter ivory white - 63x63	20 EUCKSDV-82	1	piece
2CKA002013A5273	SCHUKO® Socket insert with print Safety Shutter aluminium silver - 63x63	20 EUCKSDV-83	1	piece
2CKA002013A5277	SCHUKO® Socket insert with print Safety Shutter stainless steel - Pure Stainless Steel	20 EUCKSDV-866	1	piece
2CKA002013A5327	SCHUKO® Socket insert with print Safety Shutter studio white matt - 63x63	20 EUCKSDV-884	1	piece
2CKA002013A5332	SCHUKO® Socket insert with print Safety Shutter black matt - 63x63	20 EUCKSDV-885	1	piece
2CKA002013A5464	SCHUKO® socket insert Safety Shutter red - 63x63	20 EUCKSDV-82-101	1	piece
2CKA002013A5470	SCHUKO® socket insert Safety Shutter green - 63x63	20 EUCKSDV-13-82-101	1	piece
2CKA002013A5324	SCHUKO® socket insert Safety Shutter orange - 63x63	20 EUCKSDV-14-82	1	piece
2CKA002013A5297	SCHUKO® socket insert Safety Shutter grey metallic - 63x63	20 EUCKSDV-803	1	piece
2CKA002013A5265	SCHUKO® socket insert Safety Shutter anthracite - 63x63	20 EUCKSDV-81	1	piece
2CKA002013A5376	Socket Outlets Safety Shutter ivory white - 63x63	20 EUCKSDV-82-500	1	piece
2CKA002013A5375	Socket Outlets Safety Shutter aluminium silver - 63x63	20 EUCKSDV-83-500	1	piece
2CKA002013A5374	Socket Outlets Safety Shutter stainless steel - Pure Stainless Steel	20 EUCKSDV-866-500	1	piece
2CKA002013A5373	Socket insert Safety Shutter Protective contact (SCHUKO) studio white matt - 63x63	20 EUCKSDV-884-500	1	piece
2CKA002013A5333	SCHUKO® socket insert Safety Shutter Protective contact (SCHUKO) black matt - 63x63	20 EUCKSDV-885	1	piece
2CKA002013A5423	SCHUKO® Socket insert with labelling field Safety Shutter red - 63x63	20 EUCNB-12-82	1	piece
2CKA002013A5424	SCHUKO® Socket insert with labelling field Safety Shutter green - 63x63	20 EUCNB-13-82	1	piece
2CKA002013A5425	SCHUKO® Socket insert with labelling field Safety Shutter orange - 63x63	20 EUCNB-14-82	1	piece
2CKA002013A5426	SCHUKO® Socket insert with labelling field Safety Shutter grey metallic - 63x63	20 EUCNB-803	1	piece
2CKA002013A5427	SCHUKO® Socket insert with labelling field Safety Shutter anthracite - 63x63	20 EUCNB-81	1	piece
2CKA002013A5428	SCHUKO® Socket insert with labelling field Safety Shutter ivory white - 63x63	20 EUCNB-82	1	piece

2CKA002013A5429	SCHUKO® Socket insert with labelling field Safety Shutter aluminium silver - 63x63	20 EUCNB-83	1	piece
2CKA002013A5432	SCHUKO® Socket insert with labelling field Safety Shutter stainless steel - Pure Stainless Steel	20 EUCNB-866	1	piece
2CKA002013A5433	SCHUKO® Socket insert with labelling field Safety Shutter studio white matt - 63x63	20 EUCNB-884	1	piece
2CKA002013A5434	SCHUKO® Socket insert with labelling field Safety Shutter black matt - 63x63	20 EUCNB-885	1	piece
2CKA002013A5436	SCHUKO® socket insert Safety Shutter Protective contact (SCHUKO) grey metallic - 63x63	20 EUCRB-803	1	piece
2CKA002013A5437	SCHUKO® socket insert Safety Shutter anthracite - 63x63	20 EUCRB-81	1	piece
2CKA002013A5438	SCHUKO® socket insert Safety Shutter ivory white - 63x63	20 EUCRB-82	1	piece
2CKA002013A5439	SCHUKO® socket insert Safety Shutter aluminium silver - 63x63	20 EUCRB-83	1	piece
2CKA002013A5442	SCHUKO® socket insert Safety Shutter stainless steel - Pure Stainless Steel	20 EUCRB-866	1	piece
2CKA002013A5443	SCHUKO® socket insert Safety Shutter studio white matt - 63x63	20 EUCRB-884	1	piece
2CKA002013A5444	SCHUKO® socket insert Safety Shutter black matt - 63x63	20 EUCRB-885	1	piece
2CKA002018A1493	SCHUKO® socket insert with Hinged Lid grey metallic - 63x63	20 EUK-803	1	piece
2CKA002018A1486	SCHUKO® socket insert with Hinged Lid anthracite - 63x63	20 EUK-81	1	piece
2CKA002018A1465	SCHUKO® socket insert with Hinged Lid ivory white - 63x63	20 EUK-82	1	piece
2CKA002018A1487	SCHUKO® socket insert with Hinged Lid aluminium silver - 63x63	20 EUK-83	1	piece
2CKA002018A1490	SCHUKO® socket insert with Hinged Lid stainless steel - Pure Stainless Steel	20 EUK-866	1	piece
2CKA002018A1494	SCHUKO® socket insert with Hinged Lid studio white matt - 63x63	20 EUK-884	1	piece
2CKA002018A1495	SCHUKO® socket insert with Hinged Lid black matt - 63x63	20 EUK-885	1	piece
2CKA002018A1516	SCHUKO® socket insert Safety Shutter with Hinged Lid grey metallic - 63x63	20 EUKB-803	1	piece
2CKA002018A1517	SCHUKO® socket insert Safety Shutter with Hinged Lid anthracite - 63x63	20 EUKB-81	1	piece
2CKA002018A1518	SCHUKO® socket insert Safety Shutter with Hinged Lid ivory white - 63x63	20 EUKB-82	1	piece
2CKA002018A1519	SCHUKO® socket insert Safety Shutter with Hinged Lid aluminium silver - 63x63	20 EUKB-83	1	piece
2CKA002018A1521	SCHUKO® socket insert Safety Shutter with Hinged Lid stainless steel - Pure Stainless Steel	20 EUKB-866	1	piece
2CKA002018A1522	SCHUKO® socket insert Safety Shutter with Hinged Lid studio white matt - 63x63	20 EUKB-884	1	piece
2CKA002018A1523	SCHUKO® socket insert Safety Shutter with Hinged Lid black matt - 63x63	20 EUKB-885	1	piece
2CKA002018A1525	SCHUKO® socket insert Safety Shutter with Hinged Lid grey metallic - 63x63	20 EUKBR-803	1	piece
2CKA002018A1526	SCHUKO® socket insert Safety Shutter with Hinged Lid anthracite - 63x63	20 EUKBR-81	1	piece
2CKA002018A1527	SCHUKO® socket insert Safety Shutter with Hinged Lid ivory white - 63x63	20 EUKBR-82	1	piece
2CKA002018A1528	SCHUKO® socket insert Safety Shutter with Hinged Lid aluminium silver - 63x63	20 EUKBR-83	1	piece
2CKA002018A1530	SCHUKO® socket insert Safety Shutter with Hinged Lid studio white matt - 63x63	20 EUKBR-884	1	piece
2CKA002018A1531	SCHUKO® socket insert Safety Shutter with Hinged Lid black matt - 63x63	20 EUKBR-885	1	piece
2CKA002018A1533	SCHUKO® socket insert Safety Shutter with Hinged Lid red - 63x63	20 EUKNB-12- 82	1	piece
2CKA002018A1534	SCHUKO® socket insert Safety Shutter with Hinged Lid green - 63x63	20 EUKNB-13- 82	1	piece

2CKA002018A1535	SCHUKO® socket insert Safety Shutter with Hinged Lid orange - 63x63	20 EUKNB-14-82	1	piece
2CKA002018A1536	SCHUKO® socket insert Safety Shutter with Hinged Lid grey metallic - 63x63	20 EUKNB-803	1	piece
2CKA002018A1537	SCHUKO® socket insert Safety Shutter with Hinged Lid anthracite - 63x63	20 EUKNB-81	1	piece
2CKA002018A1538	SCHUKO® socket insert Safety Shutter with Hinged Lid ivory white - 63x63	20 EUKNB-82	1	piece
2CKA002018A1539	SCHUKO® socket insert Safety Shutter with Hinged Lid aluminium silver - 63x63	20 EUKNB-83	1	piece
2CKA002018A1541	SCHUKO® socket insert Safety Shutter with Hinged Lid studio white matt - 63x63	20 EUKNB-884	1	piece
2CKA002018A1542	SCHUKO® socket insert Safety Shutter with Hinged Lid black matt - 63x63	20 EUKNB-885	1	piece
2CKA002018A1544	SCHUKO® socket insert Safety Shutter with Hinged Lid red - 63x63	20 EUKNBL-12-82	1	piece
2CKA002018A1545	SCHUKO® socket insert Safety Shutter with Hinged Lid green - 63x63	20 EUKNBL-13-82	1	piece
2CKA002018A1546	SCHUKO® socket insert Safety Shutter with Hinged Lid orange - 63x63	20 EUKNBL-14-82	1	piece
2CKA002018A1547	SCHUKO® socket insert Safety Shutter with Hinged Lid grey metallic - 63x63	20 EUKNBL-803	1	piece
2CKA002018A1548	SCHUKO® socket insert Safety Shutter with Hinged Lid anthracite - 63x63	20 EUKNBL-81	1	piece
2CKA002018A1552	SCHUKO® socket insert Safety Shutter with Hinged Lid studio white matt - 63x63	20 EUKNBL-884	1	piece
2CKA002018A1553	SCHUKO® socket insert Safety Shutter with Hinged Lid black matt - 63x63	20 EUKNBL-885	1	piece
2CKA002018A1557	SCHUKO® socket insert Safety Shutter with Hinged Lid and lock; Different locking anthracite - 63x63	20 EUKNBSL-81	1	piece
2CKA002018A1558	SCHUKO® socket insert Safety Shutter with Hinged Lid and lock; Simultaneous locking anthracite - 63x63	20 EUKNBSL-81-101	1	piece
2CKA002018A1559	SCHUKO® socket insert Safety Shutter with Hinged Lid and lock; Different locking ivory white - 63x63	20 EUKNBSL-82	1	piece
2CKA002018A1560	SCHUKO® socket insert Safety Shutter with Hinged Lid and lock; Simultaneous locking ivory white - 63x63	20 EUKNBSL-82-101	1	piece
2CKA002018A1561	SCHUKO® socket insert Safety Shutter with Hinged Lid and lock; Different locking aluminium silver - 63x63	20 EUKNBSL-83	1	piece
2CKA002018A1562	SCHUKO® socket insert Safety Shutter with Hinged Lid and lock; Simultaneous locking aluminium silver - 63x63	20 EUKNBSL-83-101	1	piece
2CKA002018A1565	SCHUKO® socket insert Safety Shutter with Hinged Lid and lock; Different locking studio white matt - 63x63	20 EUKNBSL-884	1	piece
2CKA002018A1566	SCHUKO® socket insert Safety Shutter with Hinged Lid and lock; Simultaneous locking studio white matt - 63x63	20 EUKNBSL-884-101	1	piece
2CKA002018A1567	SCHUKO® socket insert Safety Shutter with Hinged Lid and lock; Different locking black matt - 63x63	20 EUKNBSL-885	1	piece
2CKA002018A1568	SCHUKO® socket insert Safety Shutter with Hinged Lid and lock; Simultaneous locking black matt - 63x63	20 EUKNBSL-885-101	1	piece
2CKA002011A3876	SCHUKO® Socket insert with labelling field grey metallic - 63x63	20 EUN-803	1	piece
2CKA002011A3802	SCHUKO® Socket insert with labelling field anthracite - 63x63	20 EUN-81	1	piece
2CKA002011A3726	SCHUKO® Socket insert with labelling field ivory white - 63x63	20 EUN-82	1	piece
2CKA002011A3810	SCHUKO® Socket insert with labelling field aluminium silver - 63x63	20 EUN-83	1	piece
2CKA002011A3851	SCHUKO® Socket insert with labelling field stainless steel - Pure Stainless Steel	20 EUN-866	1	piece

2CKA002011A3881	SCHUKO® Socket insert with labelling field studio white matt - 63x63	20 EUN-884	1	piece
2CKA002011A3884	SCHUKO® Socket insert with labelling field black matt - 63x63	20 EUN-885	1	piece
2CKA002495A0084	Socket insert Equipotential compensation Socket outlet 2-position anthracite - 63x63	2095 UC-81	1	piece
2CKA002495A0085	Socket insert Equipotential compensation Socket outlet 2-position ivory white - 63x63	2095 UC-82	1	piece
2CKA002495A0089	Socket insert Equipotential compensation Socket outlet 2-position aluminium silver - 63x63	2095 UC-83	1	piece
2CKA002495A0090	Socket insert Equipotential compensation Socket outlet 2-position stainless steel - Pure Stainless Steel	2095 UC-866	1	piece
2CKA002495A0091	Socket insert Equipotential compensation Socket outlet 2-position studio white matt - 63x63	2095 UC-884	1	piece
2CKA002495A0092	Socket insert Equipotential compensation Socket outlet 2-position black matt - 63x63	2095 UC-885	1	piece
2CKA002190A0213	Socket Outlets British Standard ivory - carat	2190 EUC-82	1	piece
2CKA002013A5475	SCHUKO® socket insert Safety Shutter ivory white - 63x63	23 EUCB-82	1	piece
2CKA002013A5449	SCHUKO® socket insert Safety Shutter ivory white - 63x63	2300 EUCB-82	1	piece
2CKA002113A0510	Socket Outlets Safety Shutter ivory white - 63x63	2300 UCRKS-82-503	1	piece
2CKA002011A3831	Busch-Protector® SCHUKO® socket insert ivory white - 63x63	2310 EUGL/VA-82-11	1	piece
2CKA002099A0197	2397 UCKS-82-505 Center PI, SF for 2300	2397 UCKS-82-505	1	piece
2CKA002013A5359	2398 CKS-82 Cover plate shuttered	2398 CKS-82	1	piece
2CKA002099A0211	Socket Outlets Safety Shutter ivory white - 63x63	2399 UCKS-82	1	piece
2CKA002099A0191	Socket Outlets Safety Shutter ivory white - 63x63	2399 UCKS-82-505	1	piece
2CKA001719A0218	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring ivory white - 63x63	2518-WD-82	1	piece
2CKA001751A3177	Rocker with legend Symbol "bell" for Switch/push button, Single rocker ivory white - 63x63	2520 KI-82	1	piece
2CKA001751A3187	Rocker for Switch/push button, Single rocker ivory white - 63x63	2520 LI-82	1	piece
2CKA001724A4255	Cover Plate Bore hole 1 gang ivory white - 63x63	2533-82	1	piece
2CKA001710A3645	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button ivory white - 63x63	2542 DR/01-82	1	piece
2CKA001710A3650	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button ivory white - 63x63	2542 DR/02-82	1	piece
2CKA001724A4400	Cover Plate XLR 1 gang ivory white - 63x63	2553-82	1	piece
2CKA001753A0392	Cover Plate Modular Jack ivory white - 63x63	2561-02-82	1	piece
2CKA001753A0401	Cover Plate Modular Jack 1 gang ivory white - 63x63	2561-82	1	piece
2CKA003116A0661	FI-Schukomat SCHUKO® socket insert Safety Shutter ivory white - 63x63	3120 EUCB-82	1	piece
2CKA003117A0005	Buschmat RCD - Insert RCD 30 mA ivory white - 63x63	3151 UC-82	1	piece
2CKA006115A0484	6108/61-82-500 Coverplate f. CE	6108/61-82-500	1	piece
2CKA006155A0061	6109/03-82-500 Coverplate f. RTC	6109/03-82-500	1	piece
2CKA006132A0377	6122/10-82-500 BW standard	6122/10-82-500	1	piece
2CKA006115A0206	6125/01-82-500 Control element 1g w. BAU	6125/01-82-500	1	piece
2CKA006115A0217	6125/02-82-500 Control element 1/2gang	6125/02-82-500	1	piece
2CKA006116A0196	6126/01-82-500 Control element 2g w. BAU	6126/01-82-500	1	piece
2CKA006116A0207	6126/02-82-500 Control element 2/4gang	6126/02-82-500	1	piece

2CKA006117A0222	6127/01-82-500 Control element 4g w. BAU	6127/01-82-500	1	piece
2CKA006117A0233	6127/02-82-500 Control element 4/8gang	6127/02-82-500	1	piece
2CKA006134A0332	6128/28-82-500 RTC Control element 2/4g	6128/28-82-500	1	piece
2CKA006135A0157	6129/01-82-500 Control element 3/6g w. IR	6129/01-82-500	1	piece
2CKA006430A0327	Control Element for Venetian blind ivory white - 63x63	6430-82-102	1	piece
2CKA006430A0304	Cover plate with legend for Time switch Central cover plate ivory white - 63x63	6435-82	1	piece
2CKA006470A0003	Cover Plate for Proximity switch ivory white - 63x63	6476-82	1	piece
2CKA006400A0057	Cover Plate PowerDock 1 gang white - 63x63	6477-82	1	piece
2CKA006599A2951	Cover Plate for Dimmer Turn button with Neon lamp ivory white - 63x63	6540-82-102	1	piece
2CKA006599A2832	Cover Plate for Cooling Central cover plate ivory white - 63x63	6541-82	1	piece
2CKA006599A2831	Control Element for Switch/dimmer Single push button ivory white - 63x63	6543-82-101	1	piece
2CKA006599A2907	Control Element for Dimmer Two-part button with Neon lamp ivory white - 63x63	6545-82	1	piece
2CKA006730A0032	Electronic Controls 1 channel Radio Control ivory white - 63x63	6731-82-500	1	piece
2CKA006730A0033	Electronic Controls 2 channel Radio Control ivory white - 63x63	6732-82-500	1	piece
2CKA006730A0034	Electronic Controls 4 channel Radio Control ivory white - 63x63	6733-82-500	1	piece
2CKA006730A0134	Control Element for Dimmer Two-part button beige - 63x63	6736 FoH-82	1	piece
2CKA006800A2830	Electronic Controls ivory white - solo	6815-82-101-500	1	piece
2CKA008200A0079	Cover Plate Loudspeaker ivory white - 63x63	8253-82	1	piece
2CKA006220A0532	CP-FCC-82 C-plate Fan Coil	CP-FCC-82	1	piece
2CKA006220A0529	CP-RTC-82 C-plate RT sensor unit	CP-RTC-82	1	piece
2CKA006220A0530	MD-F-1.0.1-82 Movement detector	MD-F-1.0.1-82	1	piece
2CKA006200A0084	MSA-F-1.1.1-82-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-82-WL	1	piece
2CKA006220A0516	Electronic Controls free@home (TP) ivory white - solo	SR-1-82	1	piece
2CKA006220A0521	Electronic Controls free@home (TP) ivory white - solo	SR-2-82	1	piece
2CKA006220A0518	Electronic Controls free@home (TP) ivory white - solo	SRB-1-82	1	piece
2CKA006220A0523	Electronic Controls free@home (TP) ivory white - solo	SRB-2-82	1	piece
2CKA006220A0520	Electronic Controls free@home (TP) ivory white - solo	SRD-1-82	1	piece
2CKA006220A0525	Electronic Controls free@home (TP) ivory white - solo	SRD-2-L-82	1	piece
2CKA006220A0526	Electronic Controls free@home (TP) ivory white - solo	SRD-2-R-82	1	piece
2CKA006220A0517	Electronic Controls free@home (TP) ivory white - solo	SRL-1-82	1	piece
2CKA006220A0522	Electronic Controls free@home (TP) ivory white - solo	SRL-2-L-82	1	piece
2CKA006220A0527	Electronic Controls free@home (TP) ivory white - solo	SRL-2-R-82	1	piece
2CKA006220A0519	Electronic Controls free@home (TP) ivory white - solo	SRS-1-82	1	piece
2CKA006220A0524	Electronic Controls free@home (TP) ivory white - solo	SRS-2-L-82	1	piece
2CKA006220A0528	Electronic Controls free@home (TP) ivory white - solo	SRS-2-R-82	1	piece
2CKA002190A0224	Socket Outlets British Standard grey metallic - Busch-axcent	2190 EUC-803	1	piece



2CKA002190A0216	Socket Outlets British Standard anthracite - 63x63	2190 EUC-81	1	piece
2CKA002190A0214	Socket Outlets British Standard aluminium silver - 63x63	2190 EUC-83	1	piece
2CKA002190A0217	Socket Outlets British Standard stainless steel - Pure Stainless Steel	2190 EUC-866	1	piece
2CKA002190A0218	Socket Outlets British Standard studio white matt - 63x63	2190 EUC-884	1	piece
2CKA002013A5474	SCHUKO® socket insert Safety Shutter anthracite - 63x63	23 EUCB-81	1	piece
2CKA002013A5476	SCHUKO® socket insert Safety Shutter aluminium silver - 63x63	23 EUCB-83	1	piece
2CKA002013A5478	SCHUKO® socket insert Safety Shutter stainless steel - Pure Stainless Steel	23 EUCB-866	1	piece
2CKA002013A5479	SCHUKO® socket insert Safety Shutter studio white matt - 63x63	23 EUCB-884	1	piece
2CKA002013A5480	SCHUKO® socket insert Safety Shutter black matt - 63x63	23 EUCB-885	1	piece
2CKA002013A5447	SCHUKO® socket insert Safety Shutter grey metallic - 63x63	2300 EUCB- 803	1	piece
2CKA002013A5448	SCHUKO® socket insert Safety Shutter anthracite - 63x63	2300 EUCB-81	1	piece
2CKA002013A5450	SCHUKO® socket insert Safety Shutter aluminium silver - 63x63	2300 EUCB-83	1	piece
2CKA002013A5452	SCHUKO® socket insert Safety Shutter stainless steel - Pure Stainless Steel	2300 EUCB- 866	1	piece
2CKA002013A5453	SCHUKO® socket insert Safety Shutter studio white matt - 63x63	2300 EUCB- 884	1	piece
2CKA002013A5454	SCHUKO® socket insert Safety Shutter black matt - 63x63	2300 EUCB- 885	1	piece
2CKA002113A5339	Socket Outlets Safety Shutter anthracite - 63x63	2300 UCRKS- 81-503	1	piece
2CKA002113A5337	Socket Outlets Safety Shutter studio white matt - 63x63	2300 UCRKS- 884-503	1	piece
2CKA002113A5340	Socket Outlets Safety Shutter black matt - 63x63	2300 UCRKS- 885-503	1	piece
2CKA002011A6257	Busch-Protector® SCHUKO® socket insert red 63x63	2310 EUGL/VA -12-82-101	1	piece
2CKA002011A3830	Busch-Protector® SCHUKO® socket insert anthracite - 63x63	2310 EUGL/VA -81-11	1	piece
2CKA002011A3832	Busch-Protector® SCHUKO® socket insert aluminium silver - 63x63	2310 EUGL/VA -83-11	1	piece
2CKA002011A3877	Busch-Protector® SCHUKO® socket insert grey metallic - 63x63	2310 EUGL/VA- 803-11	1	piece
2CKA002011A3853	Busch-Protector® SCHUKO® socket insert stainless steel - Pure Stainless Steel	2310 EUGL/VA- 866-11	1	piece
2CKA002011A3882	Busch-Protector® SCHUKO® socket insert studio white matt - 63x63	2310 EUGL/VA- 884-11	1	piece
2CKA002011A3885	Busch-Protector® SCHUKO® socket insert black matt - 63x63	2310 EUGL/VA- 885-11	1	piece
2CKA002013A5356	2398 CKS-803 Cover plate shuttered	2398 CKS-803	1	piece
2CKA002013A5357	2398 CKS-81 Cover plate shuttered	2398 CKS-81	1	piece
2CKA002013A5360	2398 CKS-83 Cover plate shuttered	2398 CKS-83	1	piece
2CKA002013A5363	2398 CKS-884 Cover plate shuttered	2398 CKS-884	1	piece
2CKA002013A5364	2398 CKS-885 Cover plate shuttered	2398 CKS-885	1	piece
2CKA002099A0253	Socket Outlets Safety Shutter grey metallic - 63x63	2399 UCKS- 803	1	piece
2CKA002099A0216	Socket Outlets Safety Shutter anthracite - 63x63	2399 UCKS-81	1	piece
2CKA002099A0241	Socket Outlets Safety Shutter aluminium silver - 63x63	2399 UCKS-83	1	piece
2CKA002099A0243	Socket Safety Shutter stainless steel - Pure Stainless Steel	2399 UCKS- 866	1	piece
2CKA002099A0255	Socket Outlets Safety Shutter studio white matt - 63x63	2399 UCKS- 884	1	piece
2CKA001751A3175	Rocker with legend Symbol "bell" for Switch/push button, Single rocker grey metallic - 63x63	2520 KI-803	1	piece

2CKA001751A3176	Rocker with legend Symbol "bell" for Switch/push button, Single rocker anthracite - 63x63	2520 KI-81	1	piece
2CKA001751A3178	Rocker with legend Symbol "bell" for Switch/push button, Single rocker aluminium silver - 63x63	2520 KI-83	1	piece
2CKA001751A3181	Rocker with legend Symbol "bell" for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	2520 KI-866	1	piece
2CKA001751A3182	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white matt - 63x63	2520 KI-884	1	piece
2CKA001751A3183	Rocker with legend Symbol "bell" for Switch/push button, Single rocker black matt - 63x63	2520 KI-885	1	piece
2CKA001751A3185	Rocker for Switch/push button, Single rocker grey metallic - 63x63	2520 LI-803	1	piece
2CKA001751A3186	Rocker for Switch/push button, Single rocker anthracite - 63x63	2520 LI-81	1	piece
2CKA001751A3188	Rocker for Switch/push button, Single rocker aluminium silver - 63x63	2520 LI-83	1	piece
2CKA001751A3191	Rocker for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	2520 LI-866	1	piece
2CKA001751A3192	Rocker for Switch/push button, Single rocker studio white matt - 63x63	2520 LI-884	1	piece
2CKA001751A3193	Rocker for Switch/push button, Single rocker black matt - 63x63	2520 LI-885	1	piece
2CKA001751A3195	Rocker for Switch/push button, Single rocker grey metallic - 63x63	2520 TR-803	1	piece
2CKA001751A3196	Rocker for Switch/push button, Single rocker anthracite - 63x63	2520 TR-81	1	piece
2CKA001751A3197	Rocker for Switch/push button, Single rocker ivory white - 63x63	2520 TR-82	1	piece
2CKA001751A3198	Rocker for Switch/push button, Single rocker aluminium silver - 63x63	2520 TR-83	1	piece
2CKA001751A3200	Rocker for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	2520 TR-866	1	piece
2CKA001751A3201	Rocker for Switch/push button, Single rocker studio white matt - 63x63	2520 TR-884	1	piece
2CKA001751A3202	Rocker for Switch/push button, Single rocker black matt - 63x63	2520 TR-885	1	piece
2CKA001724A4407	Cover Plate Bore hole grey metallic - 63x63	2533-803	1	piece
2CKA001724A4254	Cover Plate Bore hole 1 gang anthracite - 63x63	2533-81	1	piece
2CKA001724A4382	Cover Plate Bore hole 1 gang yellow - 63x63	2533-82-15	1	piece
2CKA001724A4261	Cover Plate Bore hole 1 gang aluminium silver - 63x63	2533-83	1	piece
2CKA001724A4270	Cover Plate Bore hole 1 gang stainless steel - Pure Stainless Steel	2533-866	1	piece
2CKA001724A4296	Cover Plate Bore hole 1 gang studio white matt - 63x63	2533-884	1	piece
2CKA001724A4301	Cover Plate Bore hole 1 gang black matt - 63x63	2533-885	1	piece
2CKA001710A4125	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button grey metallic - 63x63	2542 DR/01-803	1	piece
2CKA001710A3644	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button anthracite - 63x63	2542 DR/01-81	1	piece
2CKA001710A3671	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button aluminium silver - 63x63	2542 DR/01-83	1	piece
2CKA001710A3758	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button stainless steel - Pure Stainless Steel	2542 DR/01-866	1	piece
2CKA001710A3890	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button studio white matt - 63x63	2542 DR/01-884	1	piece
2CKA001710A3913	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button black matt - 63x63	2542 DR/01-885	1	piece
2CKA001710A4126	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button grey metallic - 63x63	2542 DR/02-803	1	piece
2CKA001710A3649	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button anthracite - 63x63	2542 DR/02-81	1	piece
2CKA001710A3672	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button aluminium silver - 63x63	2542 DR/02-83	1	piece

2CKA001710A3759	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button stainless steel - Pure Stainless Steel	2542 DR/02-866	1	piece
2CKA001710A3891	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button studio white matt - 63x63	2542 DR/02-884	1	piece
2CKA001710A3914	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button black matt - 63x63	2542 DR/02-885	1	piece
2CKA001724A4398	Cover Plate XLR grey metallic - 63x63	2553-803	1	piece
2CKA001724A4399	Cover Plate XLR 1 gang anthracite - 63x63	2553-81	1	piece
2CKA001724A4401	Cover Plate XLR 1 gang aluminium silver - 63x63	2553-83	1	piece
2CKA001724A4403	Cover Plate XLR 1 gang stainless steel - Pure Stainless Steel	2553-866	1	piece
2CKA001724A4404	Cover Plate XLR 1 gang studio white matt - 63x63	2553-884	1	piece
2CKA001724A4405	Cover Plate XLR 1 gang black matt - 63x63	2553-885	1	piece
2CKA001753A0316	Cover Plate Modular Jack 2 gang grey metallic - 63x63	2561-02-803	1	piece
2CKA001753A0317	Cover Plate Modular Jack 2 gang anthracite - 63x63	2561-02-81	1	piece
2CKA001753A0393	Cover Plate Modular Jack 2 gang aluminium silver - 63x63	2561-02-83	1	piece
2CKA001753A0395	Cover Plate Modular Jack 2 gang stainless steel - Pure Stainless Steel	2561-02-866	1	piece
2CKA001753A0396	Cover Plate Modular Jack 2 gang studio white matt - 63x63	2561-02-884	1	piece
2CKA001753A0397	Cover Plate Modular Jack 2 gang black matt - 63x63	2561-02-885	1	piece
2CKA001753A0399	Cover Plate Modular Jack 1 gang grey metallic - 63x63	2561-803	1	piece
2CKA001753A0400	Cover Plate Modular Jack 1 gang anthracite - 63x63	2561-81	1	piece
2CKA001753A0402	Cover Plate Modular Jack 1 gang aluminium silver - 63x63	2561-83	1	piece
2CKA001753A0404	Cover Plate Modular Jack 1 gang stainless steel - Pure Stainless Steel	2561-866	1	piece
2CKA001753A0405	Cover Plate Modular Jack 1 gang studio white matt - 63x63	2561-884	1	piece
2CKA001753A0406	Cover Plate Modular Jack 1 gang black matt - 63x63	2561-885	1	piece
2CKA003116A0666	FI-Schukomat SCHUKO® socket insert Protective Contact (SCHUKO) 30 mA grey metallic - 63x63	3120 EUCB-803	1	piece
2CKA003116A0667	FI-Schukomat SCHUKO® socket insert Safety Shutter anthracite - 63x63	3120 EUCB-81	1	piece
2CKA003116A0668	FI-Schukomat SCHUKO® socket insert Protective Contact (SCHUKO) 30 mA aluminium silver - 63x63	3120 EUCB-83	1	piece
2CKA003116A0669	FI-Schukomat SCHUKO® socket insert Protective Contact (SCHUKO) 30 mA stainless steel - Pure Stainless Steel	3120 EUCB-866	1	piece
2CKA003116A0670	FI-Schukomat SCHUKO® socket insert Protective Contact (SCHUKO) 30 mA studio white matt - 63x63	3120 EUCB-884	1	piece
2CKA003116A0671	FI-Schukomat SCHUKO® socket insert Protective Contact (SCHUKO) 30 mA black matt - 63x63	3120 EUCB-885	1	piece
2CKA003117A0008	Buschmat RCD - Insert RCD 30 mA grey metallic - 63x63	3151 UC-803	1	piece
2CKA003117A0009	Buschmat RCD - Insert RCD 30 mA anthracite - 63x63	3151 UC-81	1	piece
2CKA003117A0010	Buschmat RCD - Insert RCD 30 mA aluminium silver - 63x63	3151 UC-83	1	piece
2CKA003117A0011	Buschmat RCD - Insert RCD 30 mA stainless steel - Pure Stainless Steel	3151 UC-866	1	piece
2CKA003117A0012	Buschmat RCD - Insert RCD 30 mA studio white matt - 63x63	3151 UC-884	1	piece
2CKA003117A0013	Buschmat RCD - Insert RCD 30 mA black matt - 63x63	3151 UC-885	1	piece
2CKA006115A0489	6108/61-803-500 Coverplate f. CE	6108/61-803-500	1	piece

2CKA006115A0483	6108/61-81-500 Coverplate f. CE	6108/61-81-500	1	piece
2CKA006115A0485	6108/61-83-500 Coverplate f. CE	6108/61-83-500	1	piece
2CKA006115A0492	6108/61-866-500 Coverplate f. CE	6108/61-866-500	1	piece
2CKA006115A0487	6108/61-884-500 Coverplate f. CE	6108/61-884-500	1	piece
2CKA006115A0488	6108/61-885-500 Coverplate f. CE	6108/61-885-500	1	piece
2CKA006155A0066	6109/03-803-500 Coverplate f. RTC	6109/03-803-500	1	piece
2CKA006155A0060	6109/03-81-500 Coverplate f. RTC	6109/03-81-500	1	piece
2CKA006155A0062	6109/03-83-500 Coverplate f. RTC	6109/03-83-500	1	piece
2CKA006155A0069	6109/03-866-500 Coverplate f. RTC	6109/03-866-500	1	piece
2CKA006155A0064	6109/03-884-500 Coverplate f. RTC	6109/03-884-500	1	piece
2CKA006155A0065	6109/03-885-500 Coverplate f. RTC	6109/03-885-500	1	piece
2CKA006132A0382	6122/10-803-500 BW standard	6122/10-803-500	1	piece
2CKA006132A0376	6122/10-81-500 BW standard	6122/10-81-500	1	piece
2CKA006132A0378	6122/10-83-500 BW standard	6122/10-83-500	1	piece
2CKA006132A0385	6122/10-866-500 BW standard	6122/10-866-500	1	piece
2CKA006132A0380	6122/10-884-500 BW standard	6122/10-884-500	1	piece
2CKA006132A0381	6122/10-885-500 BW standard	6122/10-885-500	1	piece
2CKA006115A0212	6125/01-803-500 Control element 1g w. BAU	6125/01-803-500	1	piece
2CKA006115A0205	6125/01-81-500 Control element 1g w. BAU	6125/01-81-500	1	piece
2CKA006115A0207	6125/01-83-500 Control element 1g w. BAU	6125/01-83-500	1	piece
2CKA006115A0211	6125/01-866-500 Control element 1g w. BAU	6125/01-866-500	1	piece
2CKA006115A0214	6125/01-884-500 Control element 1g w. BAU	6125/01-884-500	1	piece
2CKA006115A0215	6125/01-885-500 Control element 1g w. BAU	6125/01-885-500	1	piece
2CKA006115A0224	6125/02-803-500 Control element 1/2gang	6125/02-803-500	1	piece
2CKA006115A0216	6125/02-81-500 Control element 1/2gang	6125/02-81-500	1	piece
2CKA006115A0218	6125/02-83-500 Control element 1/2gang	6125/02-83-500	1	piece
2CKA006115A0223	6125/02-866-500 Control element 1/2gang	6125/02-866-500	1	piece
2CKA006115A0226	6125/02-884-500 Control element 1/2gang	6125/02-884-500	1	piece
2CKA006115A0227	6125/02-885-500 Control element 1/2gang	6125/02-885-500	1	piece
2CKA006116A0202	6126/01-803-500 Control element 2g w. BAU	6126/01-803-500	1	piece
2CKA006116A0195	6126/01-81-500 Control element 2g w. BAU	6126/01-81-500	1	piece
2CKA006116A0197	6126/01-83-500 Control element 2g w. BAU	6126/01-83-500	1	piece
2CKA006116A0201	6126/01-866-500 Control element 2g w. BAU	6126/01-866-500	1	piece
2CKA006116A0204	6126/01-884-500 Control element 2g w. BAU	6126/01-884-500	1	piece

2CKA006116A0205	6126/01-885-500 Control element 2g w. BAU	6126/01-885-500	1	piece
2CKA006116A0214	6126/02-803-500 Control element 2/4gang	6126/02-803-500	1	piece
2CKA006116A0206	6126/02-81-500 Control element 2/4gang	6126/02-81-500	1	piece
2CKA006116A0208	6126/02-83-500 Control element 2/4gang	6126/02-83-500	1	piece
2CKA006116A0213	6126/02-866-500 Control element 2/4gang	6126/02-866-500	1	piece
2CKA006116A0216	6126/02-884-500 Control element 2/4gang	6126/02-884-500	1	piece
2CKA006116A0217	6126/02-885-500 Control element 2/4gang	6126/02-885-500	1	piece
2CKA006117A0228	6127/01-803-500 Control element 4g w. BAU	6127/01-803-500	1	piece
2CKA006117A0221	6127/01-81-500 Control element 4g w. BAU	6127/01-81-500	1	piece
2CKA006117A0223	6127/01-83-500 Control element 4g w. BAU	6127/01-83-500	1	piece
2CKA006117A0227	6127/01-866-500 Control element 4g w. BAU	6127/01-866-500	1	piece
2CKA006117A0230	6127/01-884-500 Control element 4g w. BAU	6127/01-884-500	1	piece
2CKA006117A0231	6127/01-885-500 Control element 4g w. BAU	6127/01-885-500	1	piece
2CKA006117A0240	6127/02-803-500 Control element 4/8gang	6127/02-803-500	1	piece
2CKA006117A0232	6127/02-81-500 Control element 4/8gang	6127/02-81-500	1	piece
2CKA006117A0234	6127/02-83-500 Control element 4/8gang	6127/02-83-500	1	piece
2CKA006117A0239	6127/02-866-500 Control element 4/8gang	6127/02-866-500	1	piece
2CKA006117A0242	6127/02-884-500 Control element 4/8gang	6127/02-884-500	1	piece
2CKA006117A0243	6127/02-885-500 Control element 4/8gang	6127/02-885-500	1	piece
2CKA006134A0336	6128/28-803-500 RTC Control element 2/4g	6128/28-803-500	1	piece
2CKA006134A0331	6128/28-81-500 RTC Control element 2/4g	6128/28-81-500	1	piece
2CKA006134A0333	6128/28-83-500 RTC Control element 2/4g	6128/28-83-500	1	piece
2CKA006134A0335	6128/28-866-500 RTC Control element 2/4g	6128/28-866-500	1	piece
2CKA006134A0338	6128/28-884-500 RTC Control element 2/4g	6128/28-884-500	1	piece
2CKA006134A0339	6128/28-885-500 RTC Control element 2/4g	6128/28-885-500	1	piece
2CKA006135A0163	6129/01-803-500 Control element 3/6g w. IR	6129/01-803-500	1	piece
2CKA006135A0156	6129/01-81-500 Control element 3/6g w. IR	6129/01-81-500	1	piece
2CKA006135A0158	6129/01-83-500 Control element 3/6g w. IR	6129/01-83-500	1	piece
2CKA006135A0162	6129/01-866-500 Control element 3/6g w. IR	6129/01-866-500	1	piece
2CKA006135A0165	6129/01-884-500 Control element 3/6g w. IR	6129/01-884-500	1	piece
2CKA006135A0166	6129/01-885-500 Control element 3/6g w. IR	6129/01-885-500	1	piece
2CKA006430A0350	Control Element for Venetian blind grey metallic - 63x63	6430-803-102	1	piece
2CKA006430A0326	Control Element for Venetian blind anthracite - 63x63	6430-81-102	1	piece
2CKA006430A0328	Control Element for Venetian blind aluminium silver - 63x63	6430-83-102	1	piece

2CKA006430A0343	Control Element for Venetian blind stainless steel - Pure Stainless Steel	6430-866-102	1	piece
2CKA006430A0385	Control Element for Venetian blind studio white matt - 63x63	6430-884-102	1	piece
2CKA006430A0386	Control Element for Venetian blind black matt - 63x63	6430-885-102	1	piece
2CKA006430A0351	Cover plate with legend for Time switch Central cover plate grey metallic - 63x63	6435-803	1	piece
2CKA006430A0303	Cover plate with legend for Time switch Central cover plate anthracite - 63x63	6435-81	1	piece
2CKA006430A0305	Cover plate with legend for Time switch Central cover plate aluminium silver - 63x63	6435-83	1	piece
2CKA006430A0344	Cover plate with legend for Time switch Central cover plate stainless steel - Pure Stainless Steel	6435-866	1	piece
2CKA006430A0388	Cover plate with legend for Time switch Central cover plate studio white matt - 63x63	6435-884	1	piece
2CKA006430A0389	Cover plate with legend for Time switch Central cover plate black matt - 63x63	6435-885	1	piece
2CKA006470A0006	Cover Plate for Proximity switch grey metallic - 63x63	6476-803	1	piece
2CKA006470A0008	Cover Plate for Proximity switch aluminium silver - 63x63	6476-83	1	piece
2CKA006470A0009	Cover Plate for Proximity switch stainless steel - Pure Stainless Steel	6476-866	1	piece
2CKA006470A0010	Cover Plate for Proximity switch studio white matt - 63x63	6476-884	1	piece
2CKA006470A0011	Cover Plate for Proximity switch black matt - 63x63	6476-885	1	piece
2CKA006400A0060	Cover Plate PowerDock 1 gang grey metallic - 63x63	6477-803	1	piece
2CKA006400A0056	Cover Plate PowerDock 1 gang anthracite - 63x63	6477-81	1	piece
2CKA006400A0058	Cover Plate PowerDock 1 gang aluminium silver - 63x63	6477-83	1	piece
2CKA006400A0064	Cover Plate PowerDock 1 gang stainless steel - Pure Stainless Steel	6477-866	1	piece
2CKA006400A0062	Cover Plate PowerDock 1 gang studio white matt - 63x63	6477-884	1	piece
2CKA006400A0063	Cover Plate PowerDock 1 gang black matt - 63x63	6477-885	1	piece
2CKA006599A2980	Cover Plate for Dimmer Turn button with Neon lamp grey metallic - 63x63	6540-803-102	1	piece
2CKA006599A2950	Cover Plate for Dimmer Turn button with Neon lamp anthracite - 63x63	6540-81-102	1	piece
2CKA006599A2952	Cover Plate for Dimmer Turn button with Neon lamp aluminium silver - 63x63	6540-83-102	1	piece
2CKA006599A2959	Cover Plate for Dimmer Turn button with Neon lamp stainless steel - Pure Stainless Steel	6540-866-102	1	piece
2CKA006599A2961	Cover Plate for Dimmer Turn button with Neon lamp studio white matt - 63x63	6540-884-102	1	piece
2CKA006599A2966	Cover Plate for Dimmer Turn button with Neon lamp black matt - 63x63	6540-885-102	1	piece
2CKA006599A2882	Cover Plate for Cooling Central cover plate anthracite - 63x63	6541-81	1	piece
2CKA006599A2885	Cover Plate for Cooling Central cover plate aluminium silver - 63x63	6541-83	1	piece
2CKA006599A2924	Cover Plate for Cooling Central cover plate stainless steel - Pure Stainless Steel	6541-866	1	piece
2CKA006599A2962	Cover Plate for Cooling Central cover plate studio white matt - 63x63	6541-884	1	piece
2CKA006599A2967	Cover Plate for Cooling Central cover plate black matt - 63x63	6541-885	1	piece
2CKA006599A2881	Control Element for Switch/dimmer Single push button anthracite - 63x63	6543-81-101	1	piece
2CKA006599A2887	Control Element for Switch/dimmer Single push button aluminium silver - 63x63	6543-83-101	1	piece
2CKA006599A2926	Control Element for Switch/dimmer Single push button stainless steel - Pure Stainless Steel	6543-866-101	1	piece

2CKA006599A2963	Control Element for Switch/dimmer Single push button studio white matt - 63x63	6543-884-101	1	piece
2CKA006599A2968	Control Element for Switch/dimmer Single push button black matt - 63x63	6543-885-101	1	piece
2CKA006599A2943	Control Element for Dimmer Two-part button with Neon lamp grey metallic - 63x63	6545-803	1	piece
2CKA006599A2906	Control Element for Dimmer Two-part button with Neon lamp anthracite - 63x63	6545-81	1	piece
2CKA006599A2914	Control Element for Dimmer Two-part button with Neon lamp aluminium silver - 63x63	6545-83	1	piece
2CKA006599A2927	Control Element for Dimmer Two-part button with Neon lamp stainless steel - Pure Stainless Steel	6545-866	1	piece
2CKA006599A2964	Control Element for Dimmer Two-part button with Neon lamp studio white matt - 63x63	6545-884	1	piece
2CKA006599A2969	Control Element for Dimmer Two-part button with Neon lamp black matt - 63x63	6545-885	1	piece
2CKA006730A0035	Electronic Controls 1 channel Radio Control aluminium silver - 63x63	6731-83-500	1	piece
2CKA006730A0041	WaveLine Electronic Controls 1 channel Radio Control stainless steel - Pure Stainless Steel	6731-866-500	1	piece
2CKA006730A0036	Electronic Controls 2 channel Radio Control aluminium silver - 63x63	6732-83-500	1	piece
2CKA006730A0042	Wall sensor 2 channel Radio Control stainless steel - Pure Stainless Steel	6732-866-500	1	piece
2CKA006730A0037	Electronic Controls 4 channel Radio Control aluminium silver - 63x63	6733-83-500	1	piece
2CKA006730A0043	Electronic Controls 4 channel Radio Control stainless steel - Pure Stainless Steel	6733-866-500	1	piece
2CKA006730A0141	Control Element for Dimmer Two-part button black matt - 63x63	6736 FoH-885	1	piece
2CKA006800A2832	Electronic Controls aluminium silver - 63x63	6815-83-101-500	1	piece
2CKA006800A2843	Electronic Controls stainless steel - Pure Stainless Steel	6815-866-101-500	1	piece
2CKA006800A2840	Electronic Controls Movement sensor black matt - 63x63	6815-885-101-500	1	piece
2CKA008200A0115	Cover Plate Loudspeaker grey metallic - 63x63	8253-803	1	piece
2CKA008200A0078	Cover Plate Loudspeaker anthracite - 63x63	8253-81	1	piece
2CKA008200A0080	Cover Plate Loudspeaker aluminium silver - 63x63	8253-83	1	piece
2CKA008200A0087	Cover Plate Loudspeaker stainless steel - Pure Stainless Steel	8253-866	1	piece
2CKA008200A0123	Cover Plate Loudspeaker studio white matt - 63x63	8253-884	1	piece
2CKA008200A0126	Cover Plate Loudspeaker black matt - 63x63	8253-885	1	piece
2CKA008300A0226	83260-81-515 Cover plates, Indoor St.	83260-81-515	1	piece
2CKA006220A0566	CP-FCC-803 C-plate Fan Coil	CP-FCC-803	1	piece
2CKA006220A0242	CP-FCC-81 C-plate Fan Coil	CP-FCC-81	1	piece
2CKA006220A0243	CP-FCC-83 C-plate Fan Coil	CP-FCC-83	1	piece
2CKA006220A0549	CP-FCC-866 C-plate Fan Coil	CP-FCC-866	1	piece
2CKA006220A0617	CP-FCC-884 C-plate Fan Coil	CP-FCC-884	1	piece
2CKA006220A0634	CP-FCC-885 C-plate Fan Coil	CP-FCC-885	1	piece
2CKA006220A0563	CP-RTC-803 C-plate RT sensor unit	CP-RTC-803	1	piece
2CKA006220A0179	CP-RTC-81 C-plate RT sensor unit	CP-RTC-81	1	piece
2CKA006220A0180	CP-RTC-83 C-plate RT sensor unit	CP-RTC-83	1	piece
2CKA006220A0546	CP-RTC-866 C-plate RT sensor unit	CP-RTC-866	1	piece
2CKA006220A0614	CP-RTC-884 C-plate RT sensor unit	CP-RTC-884	1	piece
2CKA006220A0631	CP-RTC-885 C-plate RT sensor unit	CP-RTC-885	1	piece
2CKA006220A0564	MD-F-1.0.1-803 Movement detector	MD-F-1.0.1-803	1	piece
2CKA006220A0212	MD-F-1.0.1-81 Movement detector	MD-F-1.0.1-81	1	piece
2CKA006220A0213	MD-F-1.0.1-83 Movement detector	MD-F-1.0.1-83	1	piece
2CKA006220A0547	MD-F-1.0.1-866 Movement detector	MD-F-1.0.1-866	1	piece

2CKA006220A0615	MD-F-1.0.1-884 Movement detector	MD-F-1.0.1-884	1	piece
2CKA006220A0632	MD-F-1.0.1-885 Movement detector	MD-F-1.0.1-885	1	piece
2CKA006220A0565	MSA-F-1.1.1-803 Mov. detector/actuator 1g	MSA-F-1.1.1-803	1	piece
2CKA006220A0215	MSA-F-1.1.1-81 Mov. detector/actuator 1g	MSA-F-1.1.1-81	1	piece
2CKA006220A0083	MSA-F-1.1.1-81-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-81-WL	1	piece
2CKA006220A0216	MSA-F-1.1.1-83 Mov. detector/actuator 1g	MSA-F-1.1.1-83	1	piece
2CKA006220A0085	MSA-F-1.1.1-83-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-83-WL	1	piece
2CKA006220A0548	MSA-F-1.1.1-866 Mov. detector/actuator 1g	MSA-F-1.1.1-866	1	piece
2CKA006220A0616	MSA-F-1.1.1-884 Mov. detector/actuator 1g	MSA-F-1.1.1-884	1	piece
2CKA006220A0097	MSA-F-1.1.1-884-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-884-WL	1	piece
2CKA006220A0633	MSA-F-1.1.1-885 Mov. detector/actuator 1g	MSA-F-1.1.1-885	1	piece
2CKA006220A0098	MSA-F-1.1.1-885-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-885-WL	1	piece
2CKA006220A0550	Electronic Controls free@home (TP) grey metallic - 63x63	SR-1-803	1	piece
2CKA006220A0137	Electronic Controls free@home (TP) anthracite - 63x63	SR-1-81	1	piece
2CKA006220A0138	Electronic Controls free@home (TP) aluminium silver - 63x63	SR-1-83	1	piece
2CKA006220A0533	Electronic Controls free@home (TP) stainless steel - solo	SR-1-866	1	piece
2CKA006220A0601	Electronic Controls free@home (TP) studio white matt - 63x63	SR-1-884	1	piece
2CKA006220A0618	Electronic Controls free@home (TP) black matt - 63x63	SR-1-885	1	piece
2CKA006220A0555	Electronic Controls free@home (TP) grey metallic - 63x63	SR-2-803	1	piece
2CKA006220A0152	Electronic Controls free@home (TP) anthracite - 63x63	SR-2-81	1	piece
2CKA006220A0153	Electronic Controls free@home (TP) aluminium silver - 63x63	SR-2-83	1	piece
2CKA006220A0538	Electronic Controls free@home (TP) stainless steel - solo	SR-2-866	1	piece
2CKA006220A0606	Electronic Controls free@home (TP) studio white matt - 63x63	SR-2-884	1	piece
2CKA006220A0623	Electronic Controls free@home (TP) black matt - 63x63	SR-2-885	1	piece
2CKA006220A0552	Electronic Controls free@home (TP) grey metallic - 63x63	SRB-1-803	1	piece
2CKA006220A0143	Electronic Controls free@home (TP) anthracite - 63x63	SRB-1-81	1	piece
2CKA006220A0144	Electronic Controls free@home (TP) aluminium silver - 63x63	SRB-1-83	1	piece
2CKA006220A0535	Electronic Controls free@home (TP) stainless steel - solo	SRB-1-866	1	piece
2CKA006220A0603	Electronic Controls free@home (TP) studio white matt - 63x63	SRB-1-884	1	piece
2CKA006220A0620	Electronic Controls free@home (TP) black matt - 63x63	SRB-1-885	1	piece
2CKA006220A0557	Electronic Controls free@home (TP) grey metallic - 63x63	SRB-2-803	1	piece
2CKA006220A0158	Electronic Controls free@home (TP) anthracite - 63x63	SRB-2-81	1	piece
2CKA006220A0159	Electronic Controls free@home (TP) aluminium silver - 63x63	SRB-2-83	1	piece
2CKA006220A0540	Electronic Controls free@home (TP) stainless steel - solo	SRB-2-866	1	piece



2CKA006220A0608	Electronic Controls free@home (TP) studio white matt - 63x63	SRB-2-884	1	piece
2CKA006220A0625	Electronic Controls free@home (TP) black matt - 63x63	SRB-2-885	1	piece
2CKA006220A0554	Electronic Controls free@home (TP) grey metallic - 63x63	SRD-1-803	1	piece
2CKA006220A0149	Electronic Controls free@home (TP) anthracite - 63x63	SRD-1-81	1	piece
2CKA006220A0150	Electronic Controls free@home (TP) aluminium silver - 63x63	SRD-1-83	1	piece
2CKA006220A0537	Electronic Controls free@home (TP) stainless steel - solo	SRD-1-866	1	piece
2CKA006220A0605	Electronic Controls free@home (TP) studio white matt - 63x63	SRD-1-884	1	piece
2CKA006220A0622	Electronic Controls free@home (TP) black matt - 63x63	SRD-1-885	1	piece
2CKA006220A0559	Electronic Controls free@home (TP) grey metallic - 63x63	SRD-2-L-803	1	piece
2CKA006220A0164	Electronic Controls free@home (TP) anthracite - 63x63	SRD-2-L-81	1	piece
2CKA006220A0165	Electronic Controls free@home (TP) aluminium silver - 63x63	SRD-2-L-83	1	piece
2CKA006220A0542	Electronic Controls free@home (TP) stainless steel - solo	SRD-2-L-866	1	piece
2CKA006220A0610	Electronic Controls free@home (TP) studio white matt - 63x63	SRD-2-L-884	1	piece
2CKA006220A0627	Electronic Controls free@home (TP) black matt - 63x63	SRD-2-L-885	1	piece
2CKA006220A0560	Electronic Controls free@home (TP) grey metallic - 63x63	SRD-2-R-803	1	piece
2CKA006220A0258	Electronic Controls free@home (TP) anthracite - 63x63	SRD-2-R-81	1	piece
2CKA006220A0259	Electronic Controls free@home (TP) aluminium silver - 63x63	SRD-2-R-83	1	piece
2CKA006220A0543	Electronic Controls free@home (TP) stainless steel - solo	SRD-2-R-866	1	piece
2CKA006220A0611	Electronic Controls free@home (TP) studio white matt - 63x63	SRD-2-R-884	1	piece
2CKA006220A0628	Electronic Controls free@home (TP) black matt - 63x63	SRD-2-R-885	1	piece
2CKA006220A0551	Electronic Controls free@home (TP) grey metallic - 63x63	SRL-1-803	1	piece
2CKA006220A0140	Electronic Controls free@home (TP) anthracite - 63x63	SRL-1-81	1	piece
2CKA006220A0141	Electronic Controls free@home (TP) aluminium silver - 63x63	SRL-1-83	1	piece
2CKA006220A0534	Electronic Controls free@home (TP) stainless steel - solo	SRL-1-866	1	piece
2CKA006220A0602	Electronic Controls free@home (TP) studio white matt - 63x63	SRL-1-884	1	piece
2CKA006220A0619	Electronic Controls free@home (TP) black matt - 63x63	SRL-1-885	1	piece
2CKA006220A0556	Electronic Controls free@home (TP) grey metallic - 63x63	SRL-2-L-803	1	piece
2CKA006220A0155	Electronic Controls free@home (TP) anthracite - 63x63	SRL-2-L-81	1	piece
2CKA006220A0156	Electronic Controls free@home (TP) aluminium silver - 63x63	SRL-2-L-83	1	piece
2CKA006220A0539	Electronic Controls free@home (TP) stainless steel - solo	SRL-2-L-866	1	piece
2CKA006220A0607	Electronic Controls free@home (TP) studio white matt - 63x63	SRL-2-L-884	1	piece
2CKA006220A0624	Electronic Controls free@home (TP) black matt - 63x63	SRL-2-L-885	1	piece
2CKA006220A0561	Electronic Controls free@home (TP) grey metallic - 63x63	SRL-2-R-803	1	piece
2CKA006220A0167	Electronic Controls free@home (TP) anthracite - 63x63	SRL-2-R-81	1	piece

2CKA006220A0168	Electronic Controls free@home (TP) aluminium silver - 63x63	SRL-2-R-83	1	piece
2CKA006220A0544	Electronic Controls free@home (TP) stainless steel - solo	SRL-2-R-866	1	piece
2CKA006220A0612	Electronic Controls free@home (TP) studio white matt - 63x63	SRL-2-R-884	1	piece
2CKA006220A0629	Electronic Controls free@home (TP) black matt - 63x63	SRL-2-R-885	1	piece
2CKA006220A0553	Electronic Controls free@home (TP) grey metallic - 63x63	SRS-1-803	1	piece
2CKA006220A0146	Electronic Controls free@home (TP) anthracite - 63x63	SRS-1-81	1	piece
2CKA006220A0147	Electronic Controls free@home (TP) aluminium silver - 63x63	SRS-1-83	1	piece
2CKA006220A0536	Electronic Controls free@home (TP) stainless steel - solo	SRS-1-866	1	piece
2CKA006220A0604	Electronic Controls free@home (TP) studio white matt - 63x63	SRS-1-884	1	piece
2CKA006220A0621	Electronic Controls free@home (TP) black matt - 63x63	SRS-1-885	1	piece
2CKA006220A0558	Electronic Controls free@home (TP) grey metallic - 63x63	SRS-2-L-803	1	piece
2CKA006220A0161	Electronic Controls free@home (TP) anthracite - 63x63	SRS-2-L-81	1	piece
2CKA006220A0162	Electronic Controls free@home (TP) aluminium silver - 63x63	SRS-2-L-83	1	piece
2CKA006220A0541	Electronic Controls free@home (TP) stainless steel - solo	SRS-2-L-866	1	piece
2CKA006220A0609	Electronic Controls free@home (TP) studio white matt - 63x63	SRS-2-L-884	1	piece
2CKA006220A0626	Electronic Controls free@home (TP) black matt - 63x63	SRS-2-L-885	1	piece
2CKA006220A0562	Electronic Controls free@home (TP) grey metallic - 63x63	SRS-2-R-803	1	piece
2CKA006220A0173	Electronic Controls free@home (TP) anthracite - 63x63	SRS-2-R-81	1	piece
2CKA006220A0174	Electronic Controls free@home (TP) aluminium silver - 63x63	SRS-2-R-83	1	piece
2CKA006220A0545	Electronic Controls free@home (TP) stainless steel - solo	SRS-2-R-866	1	piece
2CKA006220A0613	Electronic Controls free@home (TP) studio white matt - 63x63	SRS-2-R-884	1	piece
2CKA006220A0630	Electronic Controls free@home (TP) black matt - 63x63	SRS-2-R-885	1	piece
2CKA001731A1922	Cover Busch-Infolicht® ivory white - 63x63	1716-82	1	piece
2CKA001753A0308	Cover Plate Pull cord anthracite - 63x63	1796-81	1	piece
2CKA001799A0895	Mounting Box 1 gang anthracite - future linear	1701-81	1	piece
2CKA001799A0896	Mounting Box 1 gang ivory white - future linear	1701-82	1	piece
2CKA001799A0905	Mounting Box 1 gang aluminium silver - future linear	1701-83	1	piece
2CKA001799A0921	Mounting Box 1 gang studio white matt - future linear	1701-884	1	piece
2CKA001799A0923	Mounting Box 1 gang black matt - future linear	1701-885	1	piece
2CKA001799A0900	Mounting Box 2 gang anthracite - future linear	1702-81	1	piece
2CKA001799A0901	Mounting Box 2 gang ivory white - future linear	1702-82	1	piece
2CKA001799A0906	Mounting Box 2 gang aluminium silver - future linear	1702-83	1	piece
2CKA001799A0922	Mounting Box 2 gang studio white matt - future linear	1702-884	1	piece
2CKA001799A0924	Mounting Box 2 gang black matt - future linear	1702-885	1	piece
2CKA001799A0915	Mounting Box 3 gang anthracite - future linear	1703-81	1	piece
2CKA001799A0916	Mounting Box 3 gang ivory white - future linear	1703-82	1	piece
2CKA001799A0917	Mounting Box 3 gang aluminium silver - future linear	1703-83	1	piece
2CKA001799A0955	Mounting Box 3 gang studio white matt - future linear	1703-884	1	piece

2CKA001799A0956	Mounting Box 3 gang black matt - future linear	1703-885	1	piece
2CKA001751A3122	Mechanical Controls None for Switch/push button, Two-part rocker anthracite - 63x63	1785 K-81-500	1	piece
2CKA001751A3124	Mechanical Controls None for Switch/push button, Two-part rocker ivory white - carat	1785 K-82-500	1	piece
2CKA001751A3135	Mechanical Controls None for Switch/push button, Two-part rocker studio white matt - 63x63	1785 K-884-500	1	piece
2CKA001751A3137	Mechanical Controls None for Switch/push button, Two-part rocker black matt - 63x63	1785 K-885-500	1	piece
2CKA001751A3215	Rocker with legend for Switch/push button Two-part rocker 1gang grey metallic - 63x63	1785/11 K-803	1	piece
2CKA001751A3212	Rocker with legend for Switch/push button Two-part rocker 1gang anthracite - 63x63	1785/11 K-81	1	piece
2CKA001751A3214	Rocker with legend for Switch/push button Two-part rocker 1gang ivory white - 63x63	1785/11 K-82	1	piece
2CKA001751A3210	Rocker with legend for Switch/push button Two-part rocker 1gang aluminium silver - 63x63	1785/11 K-83	1	piece
2CKA001751A3216	Rocker with legend for Switch/push button Two-part rocker 1gang stainless steel - Pure Stainless Steel	1785/11 K-866	1	piece
2CKA001751A3211	Rocker with legend for Switch/push button Two-part rocker 1gang studio white matt - 63x63	1785/11 K-884	1	piece
2CKA001751A3213	Rocker with legend for Switch/push button Two-part rocker 1gang black matt - 63x63	1785/11 K-885	1	piece
2CKA001751A3206	Rocker DND for Switch/push button, Single rocker grey metallic - 63x63	1786/11-803	1	piece
2CKA001710A4133	Cover plate with legend for RFID Hotel card grey metallic - 63x63	1792 RFID-803	1	piece
2CKA001710A4130	Cover plate with legend for RFID Hotel card anthracite - 63x63	1792 RFID-81	1	piece
2CKA001710A4132	Cover plate with legend for RFID Hotel card ivory white - 63x63	1792 RFID-82	1	piece
2CKA001710A4128	Cover plate with legend for RFID Hotel card aluminium silver - 63x63	1792 RFID-83	1	piece
2CKA001710A4134	Cover plate with legend for RFID Hotel card stainless steel - Pure Stainless Steel	1792 RFID-866	1	piece
2CKA001710A4129	Cover plate with legend for RFID Hotel card studio white matt - 63x63	1792 RFID-884	1	piece
2CKA001710A4131	Cover plate with legend for RFID Hotel card black matt - 63x63	1792 RFID-885	1	piece
2CKA001710A4198	Cover plate with legend for Thermostat Turn button anthracite - 63x63	1794 R-81	1	piece
2CKA001710A4199	Cover plate with legend for Thermostat Turn button white - 63x63	1794 R-82	1	piece
2CKA001710A4200	Cover plate with legend for Thermostat Turn button aluminium - future linear	1794 R-83	1	piece
2CKA001710A4203	Cover plate with legend for Thermostat Turn button stainless steel - Pure Stainless Steel	1794 R-866	1	piece
2CKA001710A4204	Cover plate with legend for Thermostat Turn button studio white matt - 63x63	1794 R-884	1	piece
2CKA001710A4205	Cover plate with legend for Thermostat Turn button black matt - 63x63	1794 R-885	1	piece
2CKA002018A1549	SCHUKO® socket insert Safety Shutter with Hinged Lid ivory white - 63x63	20 EUKNBL-82	1	piece
2CKA002018A1550	SCHUKO® socket insert Safety Shutter with Hinged Lid aluminium silver - 63x63	20 EUKNBL-83	1	piece
2CKA002018A1555	SCHUKO® socket insert Safety Shutter with Hinged Lid and lock; Different locking grey metallic - 63x63	20 EUKNBSL-803	1	piece
2CKA002018A1556	SCHUKO® socket insert Safety Shutter with Hinged Lid and lock; Simultaneous locking grey metallic - 63x63	20 EUKNBSL-803-101	1	piece
2CKA001751A3166	Bell push-switch DND / MUR insert DND, MUR Single push button Push button 1 pole, 1NO grey metallic - 63x63	2029 UC-803	1	piece
2CKA001751A3167	Bell push-switch DND / MUR insert DND, MUR Single push button Push button 1 pole, 1NO anthracite - 63x63	2029 UC-81	1	piece

2CKA001751A3168	Bell push-switch DND / MUR insert DND, MUR Single push button Push button 1 pole, 1NO ivory white - 63x63	2029 UC-82	1	piece
2CKA001751A3169	Bell push-switch DND / MUR insert DND, MUR Single push button Push button 1 pole, 1NO aluminium silver - 63x63	2029 UC-83	1	piece
2CKA001751A3171	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button Push button 1 pole, 1NO stainless steel - Pure Stainless Steel	2029 UC-866	1	piece
2CKA001751A3172	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button Push button 1 pole, 1NO studio white matt - 63x63	2029 UC-884	1	piece
2CKA001751A3173	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button Push button 1 pole, 1NO black matt - 63x63	2029 UC-885	1	piece
2CKA001751A3237	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button Push button 1 pole, grey metallic - 63x63	2029/12 UC- 803	1	piece
2CKA001751A3234	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button Push button 1 pole, anthracite - 63x63	2029/12 UC-81	1	piece
2CKA001751A3236	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button Push button 1 pole, ivory white - 63x63	2029/12 UC-82	1	piece
2CKA001751A3232	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button Push button 1 pole, aluminium silver - 63x63	2029/12 UC-83	1	piece
2CKA001751A3238	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button Push button 1 pole, stainless steel - Pure Stainless Steel	2029/12 UC- 866	1	piece
2CKA001751A3233	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button Push button 1 pole, studio white matt - 63x63	2029/12 UC- 884	1	piece
2CKA001751A3235	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button Push button 1 pole, black matt - 63x63	2029/12 UC- 885	1	piece
2CKA001751A3226	Rocker with legend for Switch/push button Two- part rocker grey metallic - solo	2058-24-803	1	piece
2CKA001751A3223	Rocker with legend for Switch/push button Two- part rocker anthracite - 63x63	2058-24-81	1	piece
2CKA001751A3225	Rocker with legend for Switch/push button Two- part rocker ivory white - 63x63	2058-24-82	1	piece
2CKA001751A3221	Rocker with legend for Switch/push button Two- part rocker aluminium silver - 63x63	2058-24-83	1	piece
2CKA001751A3227	Rocker with legend for Switch/push button Two- part rocker stainless steel - Pure Stainless Steel	2058-24-866	1	piece
2CKA001751A3222	Rocker with legend for Switch/push button Two- part rocker studio white matt - 63x63	2058-24-884	1	piece
2CKA001751A3224	Rocker with legend for Switch/push button Two- part rocker black matt - 63x63	2058-24-885	1	piece
2CKA001751A3246	Bell push-switch DND / MUR insert for Switch/push button Single push button with LED 3gang grey metallic - solo	2059 UC-803	1	piece
2CKA001751A3243	Bell push-switch DND / MUR insert for Switch/push button Single push button with LED 3gang anthracite - 63x63	2059 UC-81	1	piece
2CKA001751A3245	Bell push-switch DND / MUR insert for Switch/push button Single push button with LED 3gang ivory white - 63x63	2059 UC-82	1	piece
2CKA001751A3241	Bell push-switch DND / MUR insert for Switch/push button Single push button with LED 3gang aluminium silver - 63x63	2059 UC-83	1	piece
2CKA001751A3247	Bell push-switch DND / MUR insert for Switch/push button Single push button with LED 3gang stainless steel - Pure Stainless Steel	2059 UC-866	1	piece
2CKA001751A3242	Bell push-switch DND / MUR insert for Switch/push button Single push button with LED 3gang studio white matt - 63x63	2059 UC-884	1	piece
2CKA001751A3244	Bell push-switch DND / MUR insert for Switch/push button Single push button with LED 3gang black matt - 63x63	2059 UC-885	1	piece

2CKA001761A1493	Cable Entry anthracite - future linear	2087-81	1	piece
2CKA001761A1494	Cable Entry ivory white - future linear	2087-82	1	piece
2CKA001761A1504	Cable Entry aluminium silver - future linear	2087-83	1	piece
2CKA001761A1498	Cable Entry anthracite - future linear	2088-81	1	piece
2CKA001761A1499	Cable Entry ivory white - future linear	2088-82	1	piece
2CKA001761A1505	Cable Entry aluminium silver - future linear	2088-83	1	piece
2CKA002495A0097	Socket insert Equipotential compensation Socket outlet 2-position grey metallic - 63x63	2095 UC-803	1	piece
2CKA002013A5473	SCHUKO® socket insert Safety Shutter grey metallic - 63x63	23 EUCB-803	1	piece
2CKA001719A0216	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring grey metallic - 63x63	2518-WD-803	1	piece
2CKA001719A0217	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring anthracite - 63x63	2518-WD-81	1	piece
2CKA001719A0219	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring aluminium silver - 63x63	2518-WD-83	1	piece
2CKA001719A0221	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring stainless steel - Pure Stainless Steel	2518-WD-866	1	piece
2CKA001719A0222	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring studio white matt - 63x63	2518-WD-884	1	piece
2CKA001719A0223	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring black matt - 63x63	2518-WD-885	1	piece
2CKA001751A3264	Rocker for Switch/push button Single rocker grey metallic - solo	2570-10-803	1	piece
2CKA001751A3261	Rocker for Switch/push button Single rocker anthracite - 63x63	2570-10-81	1	piece
2CKA001751A3263	Rocker for Switch/push button Single rocker ivory white - 63x63	2570-10-82	1	piece
2CKA001751A3259	Rocker for Switch/push button Single rocker aluminium silver - 63x63	2570-10-83	1	piece
2CKA001751A3265	Rocker for Switch/push button Single rocker stainless steel - Pure Stainless Steel	2570-10-866	1	piece
2CKA001751A3260	Rocker for Switch/push button Single rocker studio white matt - 63x63	2570-10-884	1	piece
2CKA001751A3262	Rocker for Switch/push button Single rocker black matt - 63x63	2570-10-885	1	piece
2CKA001751A3275	Rocker for Switch/push button Two-part rocker grey metallic	2570-20-803	1	piece
2CKA001751A3272	Rocker for Switch/push button Two-part rocker anthracite - 63x63	2570-20-81	1	piece
2CKA001751A3274	Rocker for Switch/push button Two-part rocker ivory white - 63x63	2570-20-82	1	piece
2CKA001751A3270	Rocker for Switch/push button Two-part rocker aluminium silver - 63x63	2570-20-83	1	piece
2CKA001751A3276	Rocker for Switch/push button Two-part rocker stainless steel - Pure Stainless Steel	2570-20-866	1	piece
2CKA001751A3271	Rocker for Switch/push button Two-part rocker studio white matt - 63x63	2570-20-884	1	piece
2CKA001751A3273	Rocker for Switch/push button Two-part rocker black matt - 63x63	2570-20-885	1	piece
2CKA001751A3286	Rocker for Switch/push button Three-part rocker grey metallic - solo	2570-30-803	1	piece
2CKA001751A3283	Rocker for Switch/push button Three-part rocker anthracite - 63x63	2570-30-81	1	piece
2CKA001751A3285	Rocker for Switch/push button Three-part rocker ivory white - 63x63	2570-30-82	1	piece
2CKA001751A3281	Rocker for Switch/push button Three-part rocker aluminium silver - 63x63	2570-30-83	1	piece
2CKA001751A3287	Rocker for Switch/push button Three-part rocker stainless steel - Pure Stainless Steel	2570-30-866	1	piece
2CKA001751A3282	Rocker for Switch/push button Three-part rocker studio white matt - 63x63	2570-30-884	1	piece

2CKA001751A3284	Rocker for Switch/push button Three-part rocker black matt - 63x63	2570-30-885	1	piece
2CKA006132A0256	6122/01-815 Watchdog 180 Standard FM	6122/01-815	1	piece
2CKA006132A0280	6122/01-815-500 Watchdog 180 Standard FM	6122/01-815-500	1	piece
2CKA006132A0290	6122/02-803-500 Watchdog 180 comfort FM	6122/02-803-500	1	piece
2CKA006132A0269	6122/02-815 Watchdog 180 comfort FM	6122/02-815	1	piece
2CKA006132A0283	6122/02-81-500 Watchdog 180 comfort FM	6122/02-81-500	1	piece
2CKA006132A0291	6122/02-815-500 Watchdog 180 comfort FM	6122/02-815-500	1	piece
2CKA006132A0284	6122/02-82-500 Watchdog 180 comfort FM	6122/02-82-500	1	piece
2CKA006132A0285	6122/02-83-500 Watchdog 180 comfort FM	6122/02-83-500	1	piece
2CKA006132A0289	6122/02-866-500 Watchdog 180 comfort FM	6122/02-866-500	1	piece
2CKA006132A0292	6122/02-884-500 Watchdog 180 comfort FM	6122/02-884-500	1	piece
2CKA006132A0293	6122/02-885-500 Watchdog 180 comfort FM	6122/02-885-500	1	piece
2CKA006132A0371	6122/10-896 BW standard	6122/10-896	1	piece
2CKA006134A0253	6124/01-803 Room Thermostat	6124/01-803	1	piece
2CKA006134A0280	6124/01-803-500 Room Thermostat	6124/01-803-500	1	piece
2CKA006134A0244	6124/01-81 Room Thermostat	6124/01-81	1	piece
2CKA006134A0254	6124/01-815 Room Thermostat	6124/01-815	1	piece
2CKA006134A0295	6124/01-81-500 Room Thermostat	6124/01-81-500	1	piece
2CKA006134A0281	6124/01-815-500 Room Thermostat	6124/01-815-500	1	piece
2CKA006134A0245	6124/01-82 Room Thermostat	6124/01-82	1	piece
2CKA006134A0274	6124/01-82-500 Room Thermostat	6124/01-82-500	1	piece
2CKA006134A0275	6124/01-83-500 Room Thermostat	6124/01-83-500	1	piece
2CKA006134A0279	6124/01-866-500 Room Thermostat	6124/01-866-500	1	piece
2CKA006134A0255	6124/01-884 Room Thermostat	6124/01-884	1	piece
2CKA006134A0256	6124/01-885 Room Thermostat	6124/01-885	1	piece
2CKA006134A0283	6124/01-885-500 Room Thermostat	6124/01-885-500	1	piece
2CKA006134A0303	6124/01-896 Room Thermostat	6124/01-896	1	piece
2CKA006134A0304	6124/01-896-500 Room Thermostat	6124/01-896-500	1	piece
2CKA006134A0221	6124-83-101 Room Thermostat with Display	6124-83-101	1	piece
2CKA006134A0229	6124-866-101 Room Thermostat with Display	6124-866-101	1	piece
2CKA006134A0226	6124-87-101 Room Thermostat with Display	6124-87-101	1	piece
2CKA006134A0291	6128/01-803-500 RTC Control element 2/4g	6128/01-803-500	1	piece
2CKA006134A0257	6128/01-81 RTC Control element 2/4g	6128/01-81	1	piece
2CKA006134A0267	6128/01-815 RTC Control element 2/4g	6128/01-815	1	piece
2CKA006134A0284	6128/01-81-500 RTC Control element 2/4g	6128/01-81-500	1	piece
2CKA006134A0292	6128/01-815-500 RTC Control element 2/4g	6128/01-815-500	1	piece
2CKA006134A0258	6128/01-82 RTC Control element 2/4g	6128/01-82	1	piece
2CKA006134A0286	6128/01-83-500 RTC Control element 2/4g	6128/01-83-500	1	piece
2CKA006134A0293	6128/01-884-500 RTC Control element 2/4g	6128/01-884-500	1	piece
2CKA006134A0269	6128/01-885 RTC Control element 2/4g	6128/01-885	1	piece
2CKA006134A0294	6128/01-885-500 RTC Control element 2/4g	6128/01-885-500	1	piece

2CKA006134A0305	6128/01-896 RTC Control element 2/4g	6128/01-896	1	piece
2CKA006134A0306	6128/01-896-500 RTC Control element 2/4g	6128/01-896-500	1	piece
2CKA006134A0208	6128-81-101 RoomThermostat/Switch Sensor	6128-81-101	1	piece
2CKA006134A0209	6128-82-101 RoomThermostat/Switch Sensor	6128-82-101	1	piece
2CKA006134A0218	6128-866-101 RoomThermostat/Switch Sensor	6128-866-101	1	piece
2CKA006135A0152	6129/01-815 Control element 3/6g w. IR	6129/01-815	1	piece
2CKA006135A0164	6129/01-815-500 Control element 3/6g w. IR	6129/01-815-500	1	piece
2CKA006135A0169	6129/01-896 Control element 3/6g w. IR	6129/01-896	1	piece
2CKA006220A0479	6215/1.1-896 Mov. detector/actuator 1g	6215/1.1-896	1	piece
2CKA006220A0478	6225/1.0-896 Movement detector	6225/1.0-896	1	piece
2CKA006710A0015	Control element insert Smart switch 4 chan. Bluetooth white - 63x63	6716 UBT	1	piece
2CKA006730A0155	Smart switch set 4 channel Bluetooth black matt - future linear	6716/01 UJ-885	1	piece
2CKA006730A0157	Kits 4 channel Bluetooth black matt - future linear	6716/01 UJ-885-500	1	piece
2CKA006730A0159	Kits 4 channel Bluetooth black matt - future linear	6716/01 UJ-885-510	1	piece
2CKA006730A0142	Rocker for Dimmer Single rocker anthracite - 63x63	6735 BT-81	1	piece
2CKA006730A0143	Rocker for Dimmer Single rocker beige - 63x63	6735 BT-82	1	piece
2CKA006730A0144	Rocker for Dimmer Single rocker aluminium - 63x63	6735 BT-83	1	piece
2CKA006730A0148	Rocker for Dimmer Single rocker stainless steel - Pure Stainless Steel	6735 BT-866	1	piece
2CKA006730A0149	Rocker for Dimmer Single rocker studio white matt - 63x63	6735 BT-884	1	piece
2CKA006730A0150	Rocker for Dimmer Single rocker black matt - 63x63	6735 BT-885	1	piece
2CKA006730A0117	Wall sensor for ZigBee Light Link 1 channel 1gang Radio Control grey metallic - 63x63	6735/01-803	1	piece
2CKA006730A0079	Wall sensor for ZigBee Light Link 1 channel 1gang Radio Control anthracite - 63x63	6735/01-81	1	piece
2CKA006730A0080	Wall sensor for ZigBee Light Link 1 channel 1gang Radio Control ivory white - 63x63	6735/01-82	1	piece
2CKA006730A0081	Wall sensor for ZigBee Light Link 1 channel 1gang Radio Control aluminium silver - 63x63	6735/01-83	1	piece
2CKA006730A0116	Wall sensor for ZigBee Light Link 1 channel 1gang Radio Control stainless steel - Pure Stainless Steel	6735/01-866	1	piece
2CKA006730A0118	Wall sensor for ZigBee Light Link 1 channel 1gang Radio Control studio white matt - 63x63	6735/01-884	1	piece
2CKA006730A0119	Wall sensor for ZigBee Light Link 1 channel 1gang Radio Control black matt - 63x63	6735/01-885	1	piece
2CKA006730A0099	Control Element for Switch/dimmer Zigbee 1gang Radio Control grey metallic - 63x63	6735-803	1	piece
2CKA006730A0067	Control Element for Switch/dimmer Zigbee 1gang Radio Control anthracite - 63x63	6735-81	1	piece
2CKA006730A0068	Control Element for Switch/dimmer Zigbee 1gang Radio Control ivory white - 63x63	6735-82	1	piece
2CKA006730A0069	Control Element for Switch/dimmer Zigbee 1gang Radio Control aluminium silver - 63x63	6735-83	1	piece
2CKA006730A0098	Control Element for Switch/dimmer Zigbee 1gang Radio Control stainless steel - Pure Stainless Steel	6735-866	1	piece
2CKA006730A0100	Control Element for Switch/dimmer Zigbee 1gang Radio Control studio white matt - 63x63	6735-884	1	piece
2CKA006730A0101	Control Element for Switch/dimmer Zigbee 1gang Radio Control black matt - 63x63	6735-885	1	piece
2CKA006730A0137	Control Element for Dimmer Two-part button grey metallic - 63x63	6736 FoH-803	1	piece
2CKA006730A0133	Control Element for Dimmer Two-part button anthracite - 63x63	6736 FoH-81	1	piece
2CKA006730A0135	Control Element for Dimmer Two-part button aluminium - 63x63	6736 FoH-83	1	piece

2CKA006730A0139	Control Element for Dimmer Two-part button stainless steel - Pure Stainless Steel	6736 FoH-866	1	piece
2CKA006730A0140	Control Element for Dimmer Two-part button studio white matt - 63x63	6736 FoH-884	1	piece
2CKA006730A0121	Wall sensor Zigbee 2 channel 2gang Radio Control grey metallic - 63x63	6736/01-803	1	piece
2CKA006730A0083	Wall sensor Zigbee 2 channel 2gang Radio Control anthracite - 63x63	6736/01-81	1	piece
2CKA006730A0084	Wall sensor Zigbee 2 channel 2gang Radio Control ivory white - 63x63	6736/01-82	1	piece
2CKA006730A0085	Wall sensor Zigbee 2 channel 2gang Radio Control aluminium silver - 63x63	6736/01-83	1	piece
2CKA006730A0122	Wall sensor Zigbee 2 channel 2gang Radio Control stainless steel - Pure Stainless Steel	6736/01-866	1	piece
2CKA006730A0124	Wall sensor Zigbee 2 channel 2gang Radio Control studio white matt - 63x63	6736/01-884	1	piece
2CKA006730A0125	Wall sensor Zigbee 2 channel 2gang Radio Control black matt - 63x63	6736/01-885	1	piece
2CKA006730A0105	Control Element for Switch/dimmer Zigbee 2gang Radio Control grey metallic - 63x63	6736-803	1	piece
2CKA006730A0071	Control Element for Switch/dimmer Zigbee 2gang Radio Control anthracite - 63x63	6736-81	1	piece
2CKA006730A0072	Control Element for Switch/dimmer Zigbee 2gang Radio Control ivory white - 63x63	6736-82	1	piece
2CKA006730A0073	Control Element for Switch/dimmer Zigbee 2gang Radio Control aluminium silver - 63x63	6736-83	1	piece
2CKA006730A0104	Control Element for Switch/dimmer Zigbee 2gang Radio Control stainless steel - Pure Stainless Steel	6736-866	1	piece
2CKA006730A0106	Control Element for Switch/dimmer Zigbee 2gang Radio Control studio white matt - 63x63	6736-884	1	piece
2CKA006730A0107	Control Element for Switch/dimmer Zigbee 2gang Radio Control black matt - 63x63	6736-885	1	piece
2CKA006730A0127	Wall sensor for ZigBee Light Link 4 channel 4gang Radio Control grey metallic - 63x63	6737/01-803	1	piece
2CKA006730A0087	Wall sensor for ZigBee Light Link 4 channel 4gang Radio Control anthracite - 63x63	6737/01-81	1	piece
2CKA006730A0088	Wall sensor for ZigBee Light Link 4 channel 4gang Radio Control ivory white - 63x63	6737/01-82	1	piece
2CKA006730A0089	Wall sensor for ZigBee Light Link 4 channel 4gang Radio Control aluminium silver - 63x63	6737/01-83	1	piece
2CKA006730A0128	Wall sensor for ZigBee Light Link 4 channel 4gang Radio Control stainless steel - Pure Stainless Steel	6737/01-866	1	piece
2CKA006730A0130	Wall sensor for ZigBee Light Link 4 channel 4gang Radio Control studio white matt - 63x63	6737/01-884	1	piece
2CKA006730A0131	Wall sensor for ZigBee Light Link 4 channel 4gang Radio Control black matt - 63x63	6737/01-885	1	piece
2CKA006730A0111	Control Element for Switch/dimmer Zigbee 4gang Radio Control grey metallic - 63x63	6737-803	1	piece
2CKA006730A0075	Control Element for Switch/dimmer Zigbee 4gang Radio Control anthracite - 63x63	6737-81	1	piece
2CKA006730A0076	Control Element for Switch/dimmer Zigbee 4gang Radio Control ivory white - 63x63	6737-82	1	piece
2CKA006730A0077	Control Element for Switch/dimmer Zigbee 4gang Radio Control aluminium silver - 63x63	6737-83	1	piece
2CKA006730A0110	Control Element for Switch/dimmer Zigbee 4gang Radio Control stainless steel - Pure Stainless Steel	6737-866	1	piece
2CKA006730A0112	Control Element for Switch/dimmer Zigbee 4gang Radio Control studio white matt - 63x63	6737-884	1	piece
2CKA006730A0113	Control Element for Switch/dimmer Zigbee 4gang Radio Control black matt - 63x63	6737-885	1	piece
2CKA006800A2325	Electronic Controls aluminium silver - solo	6800-83-104	1	piece
2CKA006800A2327	6800-83-104M Watchdog Comfort Sensor 180	6800-83-104M	1	piece
2CKA006800A2343	Electronic Controls stainless steel - Pure Stainless Steel	6800-866-104	1	piece




2CKA006800A2498	Electronic Controls studio white matt	6800-884-104M	1	piece
2CKA006800A2506	6800-885-104 Watchdog Comfort Sensor 180	6800-885-104	1	piece
2CKA006800A2342	Electronic Controls Movement sensor aluminium silver	6815-83	1	piece
2CKA008200A0230	Cover Plate Multimedia 3 gang grey metallic - solo	8256-803	1	piece
2CKA008200A0227	Cover Plate Multimedia 3 gang anthracite - 63x63	8256-81	1	piece
2CKA008200A0229	Cover Plate Multimedia 3 gang ivory white - 63x63	8256-82	1	piece
2CKA008200A0225	Cover Plate Multimedia 3 gang aluminium silver - 63x63	8256-83	1	piece
2CKA008200A0231	Cover Plate Multimedia 3 gang stainless steel - Pure Stainless Steel	8256-866	1	piece
2CKA008200A0226	Cover Plate Multimedia 3 gang studio white matt - 63x63	8256-884	1	piece
2CKA008200A0228	Cover Plate Multimedia 3 gang black matt - 63x63	8256-885	1	piece

---

## Categories

---

Low Voltage Products and Systems → Wiring Accessories - Light Switch Ranges → Frames

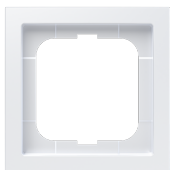

360°