

PRODUCT-DETAILS

8571 WN

Frame 1gang Wood - Sky Niessen



Informations générales

Extension du type de produit	8571 WN
Code de produit	2CLA857100A2101
EAN	8427238138251
Description courte	Frame 1gang Wood - Sky Niessen
Description longue	Color: Natural Wengué Size (height x width): 86 x 86 mm Surface: natural wengué

Installation

Instructions et manuels	2CLX850009A1001
-------------------------	-----------------

Downloads Préférés

Marketing Video	9AKK106930A1594 9AKK108468A9590
-----------------	------------------------------------

Technique

Fiche produit, informations techniques	9AKK107046A0356
Number of Gangs	1
Design Range	Sky Niessen
Type of Fastening	Clamp
Sens de montage	Horizontal Vertical
Finition de surface	Untreated Matt
Matériau	Wood
Label Space Provided	No
Couleur	Wood

Environnement

Température de l'air ambiant	Operation -5 ... +35 °C Storage -5 ... +35 °C
Indice de protection	IP20
Statut RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Informations RoHS	2CLC857100A2101
REACH Declaration	9AKK108467A7464
Conflict Minerals Reporting Template (CMRT)	9AKK108468A3363

Dimensions

Produit Largeur Net	86 mm
Produit Hauteur Net	86 mm
Produit Longueur Net	8.5 mm
Poids net	0.048 kg

Commande

ID du produit remplacé	2CL0857121
------------------------	------------

Certificats et Déclarations (Numéro de document)

Déclaration de Conformité - CE	No declaration needed
--------------------------------	-----------------------

Classifications

ETIM 8	EC000007 - Cover frame for domestic switching devices
ETIM 9	EC000007 - Cover frame for domestic switching devices
Catégorie DEEE	Product Not in WEEE Scope
CN8	85389099
UNSPSC	39121704

Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
2CLA810100A1001	Switch 1-way Off switch 1-pole with LED exchangeable	8101	1	piece
2CLA850100A1301	Rocker switch None for Switch/push button, Single rocker Silver - Sky Niessen	8501 PL	1	piece
2CLA810200A1001	Switch 2-way Two-way switch with LED exchangeable	8102	1	piece
2CLA811000A1001	Intermediate switch Intermediate switch with LED exchangeable	8110	1	piece
2CLA810400A1001	Push button 1 NO 0 NC 1 CO	8104	1	piece
2CLA850400A1301	Rocker push button Symbol "bell" for Switch/push button, Single rocker Silver - Sky Niessen	8504 PL	1	piece
2CLA811100A1001	Switch 1-way Series switch	8111	1	piece
2CLA851100A1301	Rocker switch None for Switch/push button, Two-part rocker Silver - Sky Niessen	8511 PL	1	piece
2CLA812200A1001	Switch 2-way Alternating-/alternating switch	8122	1	piece
2CLA818800A1001	Socket outlet Protective contact (SCHUKO) No color - Platform 8100	8188	1	piece
2CLA858800A1301	Cover socket outlet Socket outlet Central cover plate Silver - Sky Niessen	8588 PL	1	piece
2CLA811700A1001	Phone outlet For data connection housing 1gang No color	8117	1	piece
2CLA851700A1301	Cover data Data connection 1 gang Silver - Sky Niessen	8517 PL	1	piece
2CLA815170A1001	TV/SAT outlet End socket No color	8151.7	1	piece
2CLA855010A1301	Cover TV-R/SAT SAT 2 gang Silver - Sky Niessen	8550.1 PL	1	piece
2CLA811900A1001	Buzzer No color - Platform 8100	8119	1	piece
2CLA852900A1301	Cover buzzer Loudspeaker Central cover plate Silver - Sky Niessen	8529 PL	1	piece
2CLA850000A1301	Blank cover Blind plate None Silver - Sky Niessen	8500 PL	1	piece
2CLA810450A1001	Push button 1 NO 0 NC 1 CO	8104.5	1	piece
2CLA850440A1301	Rocker push button Symbol "light" for Switch/push button, Single rocker Silver - Sky Niessen	8504.4 PL	1	piece
2CLA814410A1001	Blind switch	8144.1	1	piece
2CLA854400A1301	Rocker blind switch for Venetian blind Two-part rocker Silver - Sky Niessen	8544 PL	1	piece
2CLA814400A1001	Push button	8144	1	piece
2CLA201860A1001	Prise informatique RJ45 1 gang - Zenit	2018.6	1	piece
2CLA851810A1301	Cover data Data connection 1 gang Silver - Sky Niessen	8518.1 PL	1	piece
2CLA851820A1301	Cover data Data connection 2 gang Silver - Sky Niessen	8518.2 PL	1	piece
2CLA856020A1301	Cover dimmer for Dimmer Turn button Silver - Sky Niessen	8560.2 PL	1	piece
2CLA818500A1001	USB charger Breakout cable with USB AA No color	8185	1	piece
2CLA858500A1301	Cover USB charger USB 1 gang Silver - Sky Niessen	8585 PL	1	piece
2CLA850100A1501	Rocker switch None for Switch/push button, Single rocker Black - Sky Niessen	8501 NS	1	piece
2CLA850400A1501	Rocker push button Symbol "bell" for Switch/push button, Single rocker Black - Sky Niessen	8504 NS	1	piece
2CLA851100A1501	Rocker switch None for Switch/push button, Two-part rocker Black - Sky Niessen	8511 NS	1	piece
2CLA858800A1501	Cover socket outlet Socket outlet Central cover plate Black - Sky Niessen	8588 NS	1	piece

2CLA851700A1501	Phone outlet Data connection 1 gang Black - Sky Niessen	8517 NS	1	piece
2CLA855010A1501	Cover TV-R/SAT SAT 2 gang Black - Sky Niessen	8550.1 NS	1	piece
2CLA852900A1501	Cover buzzer Loudspeaker Central cover plate Black - Sky Niessen	8529 NS	1	piece
2CLA850000A1501	Blank cover Blind plate None Black - Sky Niessen	8500 NS	1	piece
2CLA850440A1501	Rocker push button Symbol "light" for Switch/push button, Single rocker Black - Sky Niessen	8504.4 NS	1	piece
2CLA854400A1501	Rocker blind switch for Venetian blind Two-part rocker Black - Sky Niessen	8544 NS	1	piece
2CLA851810A1501	Cover data Data connection 1 gang Black - Sky Niessen	8518.1 NS	1	piece
2CLA851820A1501	Cover data Data connection 2 gang Black - Sky Niessen	8518.2 NS	1	piece
2CLA856020A1501	Cover dimmer for Dimmer Turn button Black - Sky Niessen	8560.2 NS	1	piece
2CLA858500A1501	Cover USB charger USB 1 gang Black - Sky Niessen	8585 NS	1	piece

Catégories

Produits basse tension → Wiring Accessories - Light Switch Ranges → Frames

