

---

PRODUCT-DETAILS

# 8574 FR

## Frame 4gang Wood - Sky Niessen



---

### Informations générales

Extension du type de produit	8574 FR
Code de produit	2CLA857400A2001
EAN	8427238139029
Description courte	Frame 4gang Wood - Sky Niessen
Description longue	Color: Ash Size (height x width): 86 x 299 mm Surface: tinted ash

---

### Installation

Instructions et manuels	2CLX850009A1001
-------------------------	-----------------

---

### Downloads Préférés

Marketing Video	9AKK106930A1594 9AKK108468A9590
-----------------	------------------------------------

---

## Technique

---

Fiche produit, informations techniques	9AKK107046A0356
Number of Gangs	4
Design Range	Sky Niessen
Type of Fastening	Clamp
Sens de montage	Horizontal Vertical
Finition de surface	Untreated Matt
Matériau	Wood
Label Space Provided	No
Couleur	Wood

---



---

## Environnement

---

Température de l'air ambiant	Operation -5 ... +35 °C Storage -5 ... +35 °C
Indice de protection	IP20
Statut RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Informations RoHS	2CLC857400A2001
REACH Declaration	9AKK108467A7464
Conflict Minerals Reporting Template (CMRT)	9AKK108468A3363

---



---

## Dimensions

---

Produit Largeur Net	299 mm
Produit Hauteur Net	86 mm
Produit Longueur Net	8.5 mm
Poids net	0.14 kg

---



---

## Commande

---

ID du produit remplacé	2CL0857420
------------------------	------------

---



---

## Certificats et Déclarations (Numéro de document)

---

Déclaration de Conformité - CE	No declaration needed
--------------------------------	-----------------------

---



---

## Classifications

---

ETIM 8	EC000007 - Cover frame for domestic switching devices
ETIM 9	EC000007 - Cover frame for domestic switching devices

Catégorie DEEE	Product Not in WEEE Scope
CN8	85389099
UNSPSC	39121704

---

Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
2CLA810100A1001	Switch 1-way Off switch 1-pole with LED exchangeable	8101	1	piece
2CLA850100A1101	Rocker switch None for Switch/push button, Single rocker White - Sky Niessen	8501 BL	1	piece
2CLA810200A1001	Switch 2-way Two-way switch with LED exchangeable	8102	1	piece
2CLA811000A1001	Intermediate switch Intermediate switch with LED exchangeable	8110	1	piece
2CLA810400A1001	Push button 1 NO 0 NC 1 CO	8104	1	piece
2CLA850400A1101	Rocker push button Symbol "bell" for Switch/push button, Single rocker White - Sky Niessen	8504 BL	1	piece
2CLA811100A1001	Switch 1-way Series switch	8111	1	piece
2CLA851100A1101	Rocker switch None for Switch/push button, Two-part rocker White - Sky Niessen	8511 BL	1	piece
2CLA812200A1001	Switch 2-way Alternating-/alternating switch	8122	1	piece
2CLA818800A1001	Socket outlet Protective contact (SCHUKO) No color - Platform 8100	8188	1	piece
2CLA858800A1101	Cover socket outlet Socket outlet Central cover plate White - Sky Niessen	8588 BL	1	piece
2CLA811700A1001	Phone outlet For data connection housing 1gang No color	8117	1	piece
2CLA851700A1101	Cover data Data connection 1 gang White - Sky Niessen	8517 BL	1	piece
2CLA815170A1001	TV/SAT outlet End socket No color	8151.7	1	piece
2CLA855010A1101	Cover TV-R/SAT SAT 2 gang White - Sky Niessen	8550.1 BL	1	piece
2CLA811900A1001	Buzzer No color - Platform 8100	8119	1	piece
2CLA852900A1101	Cover buzzer Loudspeaker Central cover plate White - Sky Niessen	8529 BL	1	piece
2CLA850000A1101	Blank cover Blind plate None White - Sky Niessen	8500 BL	1	piece
2CLA810450A1001	Push button 1 NO 0 NC 1 CO	8104.5	1	piece
2CLA850440A1101	Rocker push button Symbol "light" for Switch/push button, Single rocker White - Sky Niessen	8504.4 BL	1	piece
2CLA814410A1001	Blind switch	8144.1	1	piece
2CLA854400A1101	Rocker blind switch for Venetian blind Two-part rocker White - Sky Niessen	8544 BL	1	piece
2CLA814400A1001	Push button	8144	1	piece
2CLA201860A1001	Prise informatique RJ45 1 gang - Zenit	2018.6	1	piece
2CLA851810A1101	Cover data Data connection 1 gang White - Sky Niessen	8518.1 BL	1	piece
2CLA851820A1101	Cover data Data connection 2 gang White - Sky Niessen	8518.2 BL	1	piece
2CLA856020A1101	Cover dimmer for Dimmer Turn button White - Sky Niessen	8560.2 BL	1	piece
2CLA818500A1001	USB charger Breakout cable with USB AA No color - Platform 8100	8185	1	piece
2CLA858500A1101	Cover USB charger USB 1 gang(s) White - Sky Niessen	8585 BL	1	piece

---

## Catégories

---

Produits basse tension → Wiring Accessories - Light Switch Ranges → Frames

