

PRODUCT-DETAILS

8571 WN

Frame 1gang Wood - Sky Niessen



Informazioni generali

| | |
|----------------------|---|
| Tipo | 8571 WN |
| ID prodotto | 2CLA857100A2101 |
| EAN | 8427238138251 |
| Descrizione catalogo | Frame 1gang Wood - Sky Niessen |
| Descrizione | Color: Natural Wengué Size (height x width): 86 x 86 mm Surface: natural wengué |

Installation

| | |
|----------------------|-----------------|
| Istruzioni e manuali | 2CLX850009A1001 |
|----------------------|-----------------|

Download Piu' Usati

| | |
|-----------------|------------------------------------|
| Marketing Video | 9AKK106930A1594 9AKK108468A9590 |
|-----------------|------------------------------------|

Dati tecnici

| | |
|----------------|-----------------|
| Scheda tecnica | 9AKK107046A0356 |
|----------------|-----------------|

| | |
|----------------------|------------------------|
| Number of Gangs | 1 |
| Design Range | Sky Niessen |
| Type of Fastening | Clamp |
| Mounting Orientation | Horizontal Vertical |
| Finitura superficie | Untreated Matt |
| Materiale | Wood |
| Label Space Provided | No |
| Colore | Wood |

Dati ambientali

| | |
|---|--|
| Temperatura ambiente | In funzione -5 ... +35 °C In magazzino -5 ... +35 °C |
| Grado di protezione | IP20 |
| Dichiarazione RoHS | Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019 |
| Informazioni RoHS | 2CLC857100A2101 |
| REACH Declaration | 9AKK108467A7464 |
| Conflict Minerals Reporting Template (CMRT) | 9AKK108468A3363 |

Dimensioni

| | |
|---------------------|----------|
| Larghezza prodotto | 86 mm |
| Altezza prodotto | 86 mm |
| Profondità prodotto | 8.5 mm |
| Peso netto prodotto | 0.048 kg |

Ordinazione

| | |
|----------------------------------|------------|
| ID prodotto sostituito (VECCHIO) | 2CL0857121 |
|----------------------------------|------------|

Certificati e dichiarazioni (numero del documento)

| | |
|----------------------------------|-----------------------|
| Dichiarazione di conformità - CE | No declaration needed |
|----------------------------------|-----------------------|

Classificazioni

| | |
|------------------------|---|
| ETIM 8 | EC000007 - Cover frame for domestic switching devices |
| ETIM 9 | EC000007 - Cover frame for domestic switching devices |
| Categoria RAEE | Prodotto non in ambito RAEE |
| Tipo di oggetto design | 85389099 |
| UNSPSC | 39121704 |

Accessories

| Identifier | Description | Type | Quantity | Unit Of Measure |
|------------|-------------|------|----------|-----------------|
|------------|-------------|------|----------|-----------------|

| | | | | |
|-----------------|--|-----------|---|-----------|
| 2CLA810100A1001 | Switch 1-way Off switch 1-pole with LED exchangeable | 8101 | 1 | pezzo (i) |
| 2CLA850100A1301 | Rocker switch None for Switch/push button, Single rocker Silver - Sky Niessen | 8501 PL | 1 | pezzo (i) |
| 2CLA810200A1001 | Switch 2-way Two-way switch with LED exchangeable | 8102 | 1 | pezzo (i) |
| 2CLA811000A1001 | Intermediate switch Intermediate switch with LED exchangeable | 8110 | 1 | pezzo (i) |
| 2CLA810400A1001 | Push button 1 NO 0 NC 1 CO | 8104 | 1 | pezzo (i) |
| 2CLA850400A1301 | Rocker push button Symbol "bell" for Switch/push button, Single rocker Silver - Sky Niessen | 8504 PL | 1 | pezzo (i) |
| 2CLA811100A1001 | Switch 1-way Series switch | 8111 | 1 | pezzo (i) |
| 2CLA851100A1301 | Rocker switch None for Switch/push button, Two-part rocker Silver - Sky Niessen | 8511 PL | 1 | pezzo (i) |
| 2CLA812200A1001 | Switch 2-way Alternating-/alternating switch | 8122 | 1 | pezzo (i) |
| 2CLA818800A1001 | Socket outlet Protective contact (SCHUKO) No color - Platform 8100 | 8188 | 1 | pezzo (i) |
| 2CLA858800A1301 | Cover socket outlet Socket outlet Central cover plate Silver - Sky Niessen | 8588 PL | 1 | pezzo (i) |
| 2CLA811700A1001 | Phone outlet For data connection housing 1gang No color | 8117 | 1 | pezzo (i) |
| 2CLA851700A1301 | Cover data Data connection 1 gang Silver - Sky Niessen | 8517 PL | 1 | pezzo (i) |
| 2CLA815170A1001 | TV/SAT outlet End socket No color | 8151.7 | 1 | pezzo (i) |
| 2CLA855010A1301 | Cover TV-R/SAT SAT 2 gang Silver - Sky Niessen | 8550.1 PL | 1 | pezzo (i) |
| 2CLA811900A1001 | Buzzer No color - Platform 8100 | 8119 | 1 | pezzo (i) |
| 2CLA852900A1301 | Cover buzzer Loudspeaker Central cover plate Silver - Sky Niessen | 8529 PL | 1 | pezzo (i) |
| 2CLA850000A1301 | Blank cover Blind plate None Silver - Sky Niessen | 8500 PL | 1 | pezzo (i) |
| 2CLA810450A1001 | Push button 1 NO 0 NC 1 CO | 8104.5 | 1 | pezzo (i) |
| 2CLA850440A1301 | Rocker push button Symbol "light" for Switch/push button, Single rocker Silver - Sky Niessen | 8504.4 PL | 1 | pezzo (i) |
| 2CLA814410A1001 | Blind switch | 8144.1 | 1 | pezzo (i) |
| 2CLA854400A1301 | Rocker blind switch for Venetian blind Two-part rocker Silver - Sky Niessen | 8544 PL | 1 | pezzo (i) |
| 2CLA814400A1001 | Push button | 8144 | 1 | pezzo (i) |
| 2CLA851810A1301 | Cover data Data connection 1 gang Silver - Sky Niessen | 8518.1 PL | 1 | pezzo (i) |
| 2CLA851820A1301 | Cover data Data connection 2 gang Silver - Sky Niessen | 8518.2 PL | 1 | pezzo (i) |
| 2CLA856020A1301 | Cover dimmer for Dimmer Turn button Silver - Sky Niessen | 8560.2 PL | 1 | pezzo (i) |
| 2CLA818500A1001 | USB charger Breakout cable with USB AA No color | 8185 | 1 | pezzo (i) |
| 2CLA858500A1301 | Cover USB charger USB 1 gang Silver - Sky Niessen | 8585 PL | 1 | pezzo (i) |
| 2CLA850100A1501 | Rocker switch None for Switch/push button, Single rocker Black - Sky Niessen | 8501 NS | 1 | pezzo (i) |
| 2CLA850400A1501 | Rocker push button Symbol "bell" for Switch/push button, Single rocker Black - Sky Niessen | 8504 NS | 1 | pezzo (i) |
| 2CLA851100A1501 | Rocker switch None for Switch/push button, Two-part rocker Black - Sky Niessen | 8511 NS | 1 | pezzo (i) |
| 2CLA858800A1501 | Cover socket outlet Socket outlet Central cover plate Black - Sky Niessen | 8588 NS | 1 | pezzo (i) |
| 2CLA851700A1501 | Phone outlet Data connection 1 gang Black - Sky Niessen | 8517 NS | 1 | pezzo (i) |

| | | | | |
|-----------------|---|-----------|---|-----------|
| 2CLA855010A1501 | Cover TV-R/SAT SAT 2 gang Black - Sky Niessen | 8550.1 NS | 1 | pezzo (i) |
| 2CLA852900A1501 | Cover buzzer Loudspeaker Central cover plate Black - Sky Niessen | 8529 NS | 1 | pezzo (i) |
| 2CLA850000A1501 | Blank cover Blind plate None Black - Sky Niessen | 8500 NS | 1 | pezzo (i) |
| 2CLA850440A1501 | Rocker push button Symbol "light" for Switch/push button, Single rocker Black - Sky Niessen | 8504.4 NS | 1 | pezzo (i) |
| 2CLA854400A1501 | Rocker blind switch for Venetian blind Two-part rocker Black - Sky Niessen | 8544 NS | 1 | pezzo (i) |
| 2CLA851810A1501 | Cover data Data connection 1 gang Black - Sky Niessen | 8518.1 NS | 1 | pezzo (i) |
| 2CLA851820A1501 | Cover data Data connection 2 gang Black - Sky Niessen | 8518.2 NS | 1 | pezzo (i) |
| 2CLA856020A1501 | Cover dimmer for Dimmer Turn button Black - Sky Niessen | 8560.2 NS | 1 | pezzo (i) |
| 2CLA858500A1501 | Cover USB charger USB 1 gang Black - Sky Niessen | 8585 NS | 1 | pezzo (i) |

Categorie

Prodotti di bassa tensione → Wiring Accessories - Light Switch Ranges → Frames

