

PRODUCT-DETAILS

## 8574 WN

### Frame 4gang Wood - Sky Niessen



#### Informazioni generali

Tipo	8574 WN
ID prodotto	2CLA857400A2101
EAN	8427238138282
Descrizione catalogo	Frame 4gang Wood - Sky Niessen
Descrizione	Color: Natural Wengué Size (height x width): 86 x 299 mm Surface: natural wengué

#### Installation

Istruzioni e manuali	2CLX850009A1001
----------------------	-----------------

#### Download Piu' Usati

Marketing Video	9AKK106930A1594 9AKK108468A9590
-----------------	------------------------------------

#### Dati tecnici

Scheda tecnica	9AKK107046A0356
----------------	-----------------

Number of Gangs	4
Design Range	Sky Niessen
Type of Fastening	Clamp
Mounting Orientation	Horizontal Vertical
Finitura superficie	Untreated Matt
Materiale	Wood
Label Space Provided	No
Colore	Wood

## Dati ambientali

Temperatura ambiente	In funzione -5 ... +35 °C In magazzino -5 ... +35 °C
Grado di protezione	IP20
Dichiarazione RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Informazioni RoHS	2CLC857400A2101
REACH Declaration	9AKK108467A7464
Conflict Minerals Reporting Template (CMRT)	9AKK108468A3363

## Dimensioni

Larghezza prodotto	299 mm
Altezza prodotto	86 mm
Profondità prodotto	8.5 mm
Peso netto prodotto	0.138 kg

## Certificati e dichiarazioni (numero del documento)

Dichiarazione di conformità - CE	No declaration needed
----------------------------------	-----------------------

## Classificazioni

ETIM 8	EC000007 - Cover frame for domestic switching devices
ETIM 9	EC000007 - Cover frame for domestic switching devices
Categoria RAEE	Prodotto non in ambito RAEE
Tipo di oggetto design	85389099
UNSPSC	39121704

## Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
2CLA810100A1001	Switch 1-way Off switch 1-pole with LED exchangeable	8101	1	pezzo (i)
2CLA850100A1301	Rocker switch None for Switch/push button, Single rocker Silver - Sky Niessen	8501 PL	1	pezzo (i)
2CLA810200A1001	Switch 2-way Two-way switch with LED exchangeable	8102	1	pezzo (i)

2CLA811000A1001	Intermediate switch Intermediate switch with LED exchangeable	8110	1	pezzo (i)
2CLA810400A1001	Push button 1 NO 0 NC 1 CO	8104	1	pezzo (i)
2CLA850400A1301	Rocker push button Symbol "bell" for Switch/push button, Single rocker Silver - Sky Niessen	8504 PL	1	pezzo (i)
2CLA811100A1001	Switch 1-way Series switch	8111	1	pezzo (i)
2CLA851100A1301	Rocker switch None for Switch/push button, Two-part rocker Silver - Sky Niessen	8511 PL	1	pezzo (i)
2CLA812200A1001	Switch 2-way Alternating-/alternating switch	8122	1	pezzo (i)
2CLA818800A1001	Socket outlet Protective contact (SCHUKO) No color - Platform 8100	8188	1	pezzo (i)
2CLA858800A1301	Cover socket outlet Socket outlet Central cover plate Silver - Sky Niessen	8588 PL	1	pezzo (i)
2CLA811700A1001	Phone outlet For data connection housing 1gang No color	8117	1	pezzo (i)
2CLA851700A1301	Cover data Data connection 1 gang Silver - Sky Niessen	8517 PL	1	pezzo (i)
2CLA815170A1001	TV/SAT outlet End socket No color	8151.7	1	pezzo (i)
2CLA855010A1301	Cover TV-R/SAT SAT 2 gang Silver - Sky Niessen	8550.1 PL	1	pezzo (i)
2CLA811900A1001	Buzzer No color - Platform 8100	8119	1	pezzo (i)
2CLA852900A1301	Cover buzzer Loudspeaker Central cover plate Silver - Sky Niessen	8529 PL	1	pezzo (i)
2CLA850000A1301	Blank cover Blind plate None Silver - Sky Niessen	8500 PL	1	pezzo (i)
2CLA810450A1001	Push button 1 NO 0 NC 1 CO	8104.5	1	pezzo (i)
2CLA850440A1301	Rocker push button Symbol "light" for Switch/push button, Single rocker Silver - Sky Niessen	8504.4 PL	1	pezzo (i)
2CLA814410A1001	Blind switch	8144.1	1	pezzo (i)
2CLA854400A1301	Rocker blind switch for Venetian blind Two-part rocker Silver - Sky Niessen	8544 PL	1	pezzo (i)
2CLA814400A1001	Push button	8144	1	pezzo (i)
2CLA851810A1301	Cover data Data connection 1 gang Silver - Sky Niessen	8518.1 PL	1	pezzo (i)
2CLA851820A1301	Cover data Data connection 2 gang Silver - Sky Niessen	8518.2 PL	1	pezzo (i)
2CLA856020A1301	Cover dimmer for Dimmer Turn button Silver - Sky Niessen	8560.2 PL	1	pezzo (i)
2CLA818500A1001	USB charger Breakout cable with USB AA No color - Platform 8100	8185	1	pezzo (i)
2CLA858500A1301	Cover USB charger USB 1 gang(s) Silver - Sky Niessen	8585 PL	1	pezzo (i)
2CLA850100A1501	Rocker switch None for Switch/push button, Single rocker Black - Sky Niessen	8501 NS	1	pezzo (i)
2CLA850400A1501	Rocker push button Symbol "bell" for Switch/push button, Single rocker Black - Sky Niessen	8504 NS	1	pezzo (i)
2CLA851100A1501	Rocker switch None for Switch/push button, Two-part rocker Black - Sky Niessen	8511 NS	1	pezzo (i)
2CLA858800A1501	Cover socket outlet Socket outlet Central cover plate Black - Sky Niessen	8588 NS	1	pezzo (i)
2CLA851700A1501	Phone outlet Data connection 1 gang Black - Sky Niessen	8517 NS	1	pezzo (i)
2CLA855010A1501	Cover TV-R/SAT SAT 2 gang Black - Sky Niessen	8550.1 NS	1	pezzo (i)
2CLA852900A1501	Cover buzzer Loudspeaker Central cover plate Black - Sky Niessen	8529 NS	1	pezzo (i)
2CLA850000A1501	Blank cover Blind plate None Black - Sky Niessen	8500 NS	1	pezzo (i)

2CLA850440A1501	Rocker push button Symbol "light" for Switch/push button, Single rocker Black - Sky Niessen	8504.4 NS	1	pezzo (i)
2CLA854400A1501	Rocker blind switch for Venetian blind Two-part rocker Black - Sky Niessen	8544 NS	1	pezzo (i)
2CLA851810A1501	Cover data Data connection 1 gang Black - Sky Niessen	8518.1 NS	1	pezzo (i)
2CLA851820A1501	Cover data Data connection 2 gang Black - Sky Niessen	8518.2 NS	1	pezzo (i)
2CLA856020A1501	Cover dimmer for Dimmer Turn button Black - Sky Niessen	8560.2 NS	1	pezzo (i)
2CLA858500A1501	Cover USB charger USB 1 gang(s) Black - Sky Niessen	8585 NS	1	pezzo (i)

---

## Categorie

---

Prodotti di bassa tensione → Wiring Accessories - Light Switch Ranges → Frames

