

PRODUCT-DETAILS

8573 WN

Frame 3gang Wood - Sky Niessen



Informações gerais

Tipo de produto alargado	8573 WN
ID do produto	2CLA857300A2101
EAN	8427238138275
Descrição do catálogo	Frame 3gang Wood - Sky Niessen
Descrição longa	Color: Natural Wengué Size (height x width): 86 x 228 mm Surface: natural wengué

Installation

Instruções e Manuais	2CLX850009A1001
----------------------	-----------------

Popular Downloads

Marketing Video	9AKK106930A1594 9AKK108468A9590
-----------------	------------------------------------

Technical

Ficha de dados, informação técnica	9AKK107046A0356
---------------------------------------	-----------------

Number of Gangs	3
Design Range	Sky Niessen
Type of Fastening	Clamp
Mounting Orientation	Horizontal Vertical
Acabamento de superfície	Untreated Matt
Material	Wood
Label Space Provided	No
Color	Wood

Environmental

Temperatura do ar ambiente	Operation -5 ... +35 °C Storage -5 ... +35 °C
Grau de proteção	IP20
Estado RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Informação RoHS	2CLC857300A2101
REACH Declaration	9AKK108467A7464
Conflict Minerals Reporting Template (CMRT)	9AKK108468A3363

Dimensions

Largura Líquida do Produto	228 mm
Altura Líquida do Produto	86 mm
Profundidade/Comprimento Líquidos do Produto	8.5 mm
Peso Líquido do Produto	0.107 kg

Certificates and Declarations

Declaração de conformidade -CE	No declaration needed
--------------------------------	-----------------------

Classifications

ETIM 8	EC000007 - Cover frame for domestic switching devices
ETIM 9	EC000007 - Cover frame for domestic switching devices
Categoria REEE	Product Not in WEEE Scope
CN8	85389099
UNSPSC	39121704

Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
2CLA810100A1001	Switch 1-way Off switch 1-pole with LED exchangeable	8101	1	piece
2CLA850100A1301	Rocker switch None for Switch/push button, Single rocker Silver - Sky Niessen	8501 PL	1	piece
2CLA810200A1001	Switch 2-way Two-way switch with LED exchangeable	8102	1	piece
2CLA811000A1001	Intermediate switch Intermediate switch with LED exchangeable	8110	1	piece
2CLA810400A1001	Push button 1 NO 0 NC 1 CO	8104	1	piece

2CLA850400A1301	Rocker push button Symbol "bell" for Switch/push button, Single rocker Silver - Sky Niessen	8504 PL	1	piece
2CLA811100A1001	Switch 1-way Series switch	8111	1	piece
2CLA851100A1301	Rocker switch None for Switch/push button, Two-part rocker Silver - Sky Niessen	8511 PL	1	piece
2CLA812200A1001	Switch 2-way Alternating-/alternating switch	8122	1	piece
2CLA818800A1001	Socket outlet Protective contact (SCHUKO) No color - Platform 8100	8188	1	piece
2CLA858800A1301	Cover socket outlet Socket outlet Central cover plate Silver - Sky Niessen	8588 PL	1	piece
2CLA811700A1001	Phone outlet For data connection housing 1gang No color	8117	1	piece
2CLA851700A1301	Cover data Data connection 1 gang Silver - Sky Niessen	8517 PL	1	piece
2CLA815170A1001	TV/SAT outlet End socket No color	8151.7	1	piece
2CLA855010A1301	Cover TV-R/SAT SAT 2 gang Silver - Sky Niessen	8550.1 PL	1	piece
2CLA811900A1001	Buzzer No color - Platform 8100	8119	1	piece
2CLA852900A1301	Cover buzzer Loudspeaker Central cover plate Silver - Sky Niessen	8529 PL	1	piece
2CLA060250A1001	Socket outlet White - Various	6025	1	piece
2CLA850000A1301	Blank cover Blind plate None Silver - Sky Niessen	8500 PL	1	piece
2CLA810450A1001	Push button 1 NO 0 NC 1 CO	8104.5	1	piece
2CLA850440A1301	Rocker push button Symbol "light" for Switch/push button, Single rocker Silver - Sky Niessen	8504.4 PL	1	piece
2CLA814410A1001	Blind switch	8144.1	1	piece
2CLA854400A1301	Rocker blind switch for Venetian blind Two-part rocker Silver - Sky Niessen	8544 PL	1	piece
2CLA814400A1001	Push button	8144	1	piece
2CLA201860A1001	Tomada informática RJ45 1 gang - Zenit	2018.6	1	piece
2CLA851810A1301	Cover data Data connection 1 gang Silver - Sky Niessen	8518.1 PL	1	piece
2CLA851820A1301	Cover data Data connection 2 gang Silver - Sky Niessen	8518.2 PL	1	piece
2CLA856020A1301	Cover dimmer for Dimmer Turn button Silver - Sky Niessen	8560.2 PL	1	piece
2CLA818500A1001	USB charger Breakout cable with USB AA No color - Platform 8100	8185	1	piece
2CLA858500A1301	Cover USB charger USB 1 gang(s) Silver - Sky Niessen	8585 PL	1	piece
2CLA850100A1501	Rocker switch None for Switch/push button, Single rocker Black - Sky Niessen	8501 NS	1	piece
2CLA850400A1501	Rocker push button Symbol "bell" for Switch/push button, Single rocker Black - Sky Niessen	8504 NS	1	piece
2CLA851100A1501	Rocker switch None for Switch/push button, Two-part rocker Black - Sky Niessen	8511 NS	1	piece
2CLA858800A1501	Cover socket outlet Socket outlet Central cover plate Black - Sky Niessen	8588 NS	1	piece
2CLA851700A1501	Phone outlet Data connection 1 gang Black - Sky Niessen	8517 NS	1	piece
2CLA855010A1501	Cover TV-R/SAT SAT 2 gang Black - Sky Niessen	8550.1 NS	1	piece
2CLA852900A1501	Cover buzzer Loudspeaker Central cover plate Black - Sky Niessen	8529 NS	1	piece
2CLA850000A1501	Blank cover Blind plate None Black - Sky Niessen	8500 NS	1	piece
2CLA850440A1501	Rocker push button Symbol "light" for Switch/push button, Single rocker Black - Sky Niessen	8504.4 NS	1	piece
2CLA854400A1501	Rocker blind switch for Venetian blind Two-part rocker Black - Sky Niessen	8544 NS	1	piece
2CLA851810A1501	Cover data Data connection 1 gang Black - Sky Niessen	8518.1 NS	1	piece
2CLA851820A1501	Cover data Data connection 2 gang Black - Sky Niessen	8518.2 NS	1	piece
2CLA856020A1501	Cover dimmer for Dimmer Turn button Black - Sky Niessen	8560.2 NS	1	piece
2CLA858500A1501	Cover USB charger USB 1 gang(s) Black - Sky Niessen	8585 NS	1	piece

Categorias

Produtos e Sistemas de Baixa Tensão → Wiring Accessories - Light Switch Ranges → Frames

