
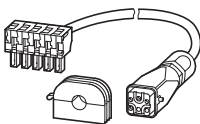
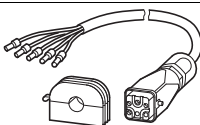

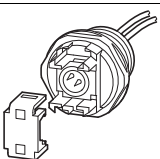







| Description | Length m | For use with | Part no. Article no. | Price see price list | Std. pack | Instructions |
|--|-------------|--|-----------------------------------|-------------------------|--------------|---------------------------------|
| Blanking plug for closing off unused housing openings | | | | | | |
|  Enclosure seal, closed, EPDM, silicon free and halogen free, IP65 | | RA-C4-PB65 | RA-C4-DO 116960 | | 10 off | One set with 10 blanking plugs. |
| Power connection cable for connecting the device with the round cable junction | | | | | | |
|  Cable 5 x 1.5 mm ² , halogen-free, with RA-C4-PPB plug for round cable junction, power plug and gasket IP65 | 1.5 | RAMO RASP RA-C4-PB65 | RA-C4-PPB/C3-1M5 116962 | | 1 off | - |
| Power connection cable for user assembly for connecting the device with the round cable junction | | | | | | |
|  Cable 5 x 1.5 mm ² halogen free, with ferrules, power plug and IP65 gasket | 1.5 | RAMO RASP RA-C4-PB65 | RA-C4-X/C3-1M5 116961 | | 1 off | - |
| Plug connectors for wiring the power connection cable for user assembly | | | | | | |
|  Plug with spring-cage terminal 0.5 - 4 mm ² , printed with 1; N/4; 2; h; 3. | | RA-C4-PB65 | RA-C4-PPB 116906 | | 10 off | - |
| AS-Interface connection and sensors | | | | | | |
| Connection clip for AS-Interface flat cable to AS-Interface incomer/outgoer for connection modules | | | | | | |
|  with integrated AS-Interface overvoltage protection, protection against interference on switch operations or short-circuit, cable termination with insulation displacement | | RA-C1-AM-7 RA-C1-AM/C3-1M5 RA-C1-VP-AM-2 | RA-C1-AZPG 112978 | | 1 off | - |
| AS-Interface link M12 connection socket for AS-Interface connection cable | | | | | | |
|  IDC termination | | RASP | ZB2-100-AZ1 082667 | | 1 off | - |
| 24V/AS-Interface connection cable for supplying the device with 24 V/AS-Interface | | | | | | |
|  with M12 socket and double outgoer for AS-Interface and 24 V, cable termination with insulation displacement | 1 | RASP RASP | RA-XAZ2-1M 292253 | | 1 off | - |
| AS-Interface connection cable for connecting the device with AS-Interface junction | | | | | | |
|  with M12 socket and M12 plug, 3-pole | 1 | RAMO RASP | RA-XM12-1M 272057 | | 1 off | Pins 1, 3, 4 are assigned |
| Y connector for connecting up to 4 sensors | | | | | | |
|  - | | RASP | RA-XM12-Y 290424 | | 1 off | - |
| AS-Interface connection and sensors | | | | | | |
| Spare keys for AUTO - OFF/RESET - HAND key-switches | | | | | | |
|  Lock mechanism MS1 | | RAMO RASP | M22-ES-MS1 216416 | | 5 off | - |