ENGINEERING TOMORROW



Data Sheet

Solenoid valve Type **EV225B**

Servo diaphragm operated for steam applications



EV225B is a servo-operated 2/2-way solenoid valve for use in steam applications.

The design is based on a PTFE diaphragm concept, ensuring highly reliable function when used in connection with contaminated steam.

Each valve body is made of dezincification resistant brass and the valve seats are made of stainless steel.

This ensures a long life even in when used with highly aggressive steam.

Features and versions

- Specifically designed for steam applications, $160\,^{\circ}\text{C}$ or $185\,^{\circ}\text{C}$
- · Clip on coil
- Ambient temperature: up to 40 °C
- Coil enclosure: up to IP65
- EV225B used with BQ coil: AC voltage up to 185 °C
- EV225B used with BN coil: DC voltage up to 160 °C
- EV225B used with BB coil: AC voltage up to 160 °C DC voltage up to 140 °C
- Connection: ISO 228/1



1 Portfolio overview

Table 1: Portfolio overview

Features	EV225B						
		Carles Carles	7 And 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1				
Body material	DZR brass	DZR brass	DZR brass				
DN [mm]	6-25	10-25	10-25				
Connection	G1/4" - G1"	G1/2"-G1"	G1/2"-G1"				
Sealing material	PTFE	PTFE	PTFE				
Function	NC	NC	NC				
K _v [m ³ /h]	0.9 - 6.0	2.2 - 6.0	2.2 - 6.0				
Differential pressure range [bar]	0.2 - 10	0.2-10	0.2 - 5				
Temperature range [°C]	0 - 185	0 - 185	0 - 160				



2 Functions

2.1 Function NC


Coil voltage disconnected (closed)

When the voltage is disconnected, the valve plate (2) is pressed down against the pilot orifice (3) by the armature spring (4). The pressure across the diaphragm (6) is built up via the equalizing orifice (5). The diaphragm/piston closes the main orifice (7) as soon as the pressure across the diaphragm/piston is equivalent to the inlet pressure. The valve will be closed for as long as the voltage to the coil is disconnected.

Coil voltage connected (open)

When voltage is applied to the coil (1), the pilot orifice (3) is opened. As the pilot orifice is larger than the equalizing orifice (5), the pressure across the diaphragm (6) drops and therefore it is lifted clear of the main orifice (7). The valve is now open for unimpeded flow and will be open for as long as the minimum differential pressure across the valve is maintained, and for as long as there is voltage to the coil.

Table 2: Function NC

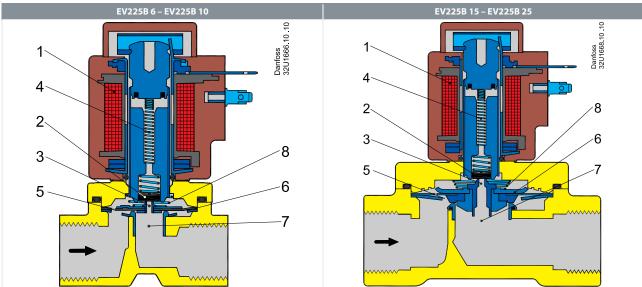


- 1. Coil
- 2. Valve plate
- 3. Pilot orifice
- 4. Armature spring
- **Equalizing orifice**
- 6. Diaphragm
- 7. Main orifice
- 8. Closing spring



3 Applications


It is recommended to use a filter in front of the valve. Recommended filter 50 mesh (297 microns).

Figure 1: Filter

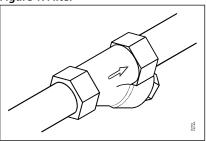

In water applications, exercise the valves at least once every 24 hours, meaning change the state of the valve. The valve exercise will minimize the risk of the valve sticking due to calcium carbonate, zinc or iron oxide build-up.

Figure 2: Exercise: Valve on/off

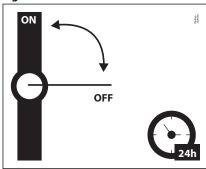

To minimize scaling, and corrosion attack it is recommended that the water passing the valve have the following values:

- Hardness 6-18 °dH to avoid scaling (chalk / lime stone build up).
- Conductivity $50 800 \,\mu\text{S/cm}$ to avoid brass dezincification and corrosion.
- Above 25°C media temperature avoid stagnant water inside the valve to avoid dezincification and corrosion attack.



4 Product specification

4.1 Technical data

Table 3: Technical data


Media	PTFE	Steam 160°C or 185°C	
Media temperature [°C] (Depending on which type of coil you used)	AC coil	0-185℃	
wedia temperature [C] (Depending on which type of con you used)	DC coil	0-160°C	
Ambient temperature [°C]	Max. 40 °C at a medium tempera	ature of 185 °C	
	DN6	0.9 m ³ /h	
	DN10	2.2 m ³ /h	
K _v value [m³/h]	DN15	3.0 m ³ /h	
	DN20	5.0 m ³ /h	
	DN25	6.0 m ³ /h	
Min. Opening differential pressure [bar]	0.2 bar		
Max. Opening differential pressure [bar]	Up to 10 bar		
Max. working pressure [bar]	Up to 10 bar (Equal to max. differential pressure)		
Max. test pressure [bar]	25 bar (UL 429: 24.1 bar)		
Viscosity [cSt]	Max. 50 cSt		

Steam capacity diagrams

Example:

Capacity for EV225 10BD inlet pressure (p1) of 6 bar absolute, at differential pressure at 1 bar. Approx. 100kg/h/80kW



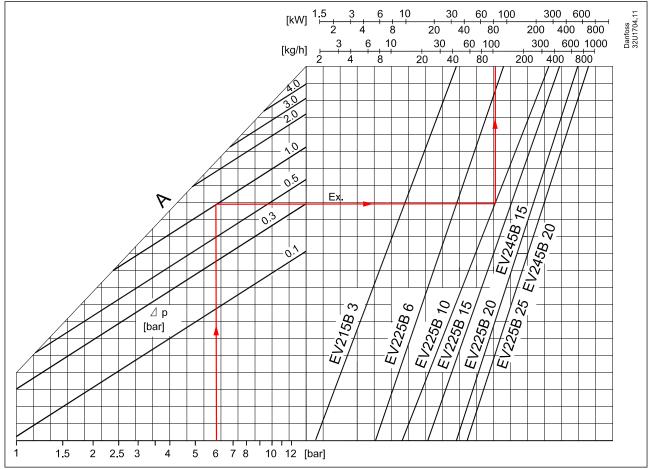



Differential pressure range, NC

Table 4: Differential pressure range

Connection	Coil type BQ AC	Coil type BN DC	Coil type BB AC	Coil type BB DC
ISO228/1	[Bar]	[Bar]	[Bar]	[Bar]
G1/4 - G1	0.2 - 10	0.2 - 5	0.2 - 5	0.2 - 3.6

Time to open/close

Table 5: Time to open/close

Main type	EV225B 6 – EV225B 25
Time to open [ms] (1)	Max. 0.2 s
Time to close [ms] ⁽¹⁾	Max. 0.2 s

 $^{^{(1)}}$ The times are indicative. The exact times will depend on the pressure conditions.

Materials

Table 6: Materials


Components	Materials	Specifications
Valve body	DZR brass	
Armature/armature stop	Stainless steel	W. no. 1.4105 / AISI 430FR
Spring	Stainless steel	W. no. 1.4306 / AISI 304L
Armature tube	Stainless steel	W. no. 1.4310 / AISI 301
Diaphragm	PTFE	
Valve plate	PTFE	
Valve seat	Stainless steel	
External gaskets	O-ring: AFLAS	

4.2 Dimension and weight

Table 7: Dimension and weight

Туре	L	В	н	Н,	H ₂	Weight gross valve body with coil BQ, BB	Weight gross valve body with coil BN
	[mm]	[mm]	[mm]	[mm]	[mm]	[kg]	[kg]
EV225B 6 BD	62	46	98	13	85	0.75	1.03
EV225B 10 BD	62	46	98	13	85	0.72	1.00
EV225B 15 BD	81	56	102	15	87	0.86	1.14
EV225B 20 BD	98	72	110	18	92	1.4	1.68
EV225B 25 BD	106	72	117	21	96	1.7	1.98


Figure 4: Dimension

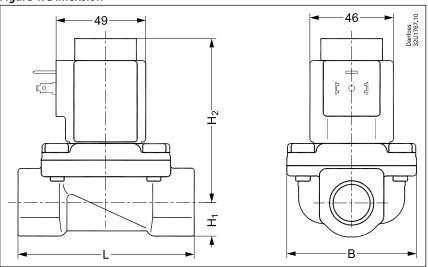



4.3 Mounting

Figure 5: Mounting angle

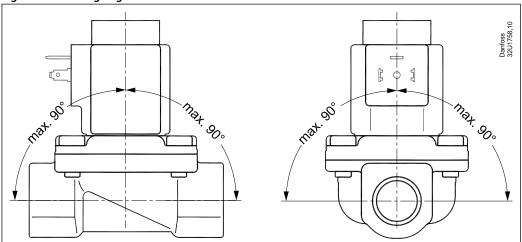



5 Ordering

5.1 Parts program

Table 8: DZR brass, valve body NC

able o. Dan bruss, varie body ne										
	Orifice	K _v value	Seal material		Code no. valve body with coil and power connector					
ISO228/1 connection	[mm]	[m³/h]	PTFE	Code no. without coil	Coil type BQ024CS 24 V 60 Hz 24 V 50 Hz	Coil type BQ120BS 110-120 V 60 Hz	Coil type BQ024 CS 208-240 V 60 Hz 230 V 50 Hz	Coil type BN024DS 24V DC		
G1/4	6	0.9		032U3802						
G3/8	10	2.2		032U3803						
G1/2	10	2.2	PTFE	032U3804	032U380416	032U380420	032U380431	032U380402		
G1/2	15	3.0	FIFE	032U3805	032U380516	032U380520	032U380531	032U380502		
G3/4	20	5.0		032U3806	032U380616	032U380620	032U380631	032U380602		
G1	25	6.0		032U3807	032U380716	032U380720	032U380731	032U380702		

5.2 Accessories

Coil

Coil type BQ AC Steam coil to 185 $^{\circ}\text{C}$

Figure 6: Coil type BQ AC



Table 9: Coil type BQ AC Steam coil to 185 °C

Toma	Tambient	Supply voltage	Voltage	Frequency	Power cor	sumption	0	Code no.	
Type	[°C]	[V]	variation	[Hz]	[W]	[VA]	Approval	Code no.	
BQ024CS	-40 – 40	24	-15%, 10%	50	10	17		018F4517	
BQ024C3	-40 – 40	24	-15%, 10%	60	9.0	16	c FL °us	01004517	
BQ120BS	40 – 40	110/120	-15%, 6%	60	13.5	19	c SU °us	018F4519	
BQ240CS	40 40	230	-15%, 6%	50	10	17		018F4511	
DQ240C3	CS -40 – 40	3Q240CS -40 – 40	208 / 240	-6%, 6%	60	9.5	16	c FL °us	01054311

Coil type BN DC Steam coils to 160 $^{\circ}\text{C}$

Figure 7: Coil type BN DC





Table 10: Coil type BN DC Steam coils to 160 $^{\circ}\text{C}$

Tuno	Tambient	Supply voltage	Voltage	Frequency	Power cor	sumption	Approval	Code no.
Type	[°C]	[V]	variation	[Hz]	[W]	[VA]	Approval	Code no.
BN024DS	-40 – 50	24	±10%	DC	20		c W us	018F6968

Coil type BB AC Steam coils to 160 °C

Figure 8: Coil type BB AC



Table 11: Coil type BB AC Steam coils to 160 $^{\circ}\text{C}$

Type	T ambient	Supply voltage	Voltagovaniation	Frequency	Power con	sumption	Code no.
Туре	[°C]	[V]	Voltage variation	[Hz]	[W]	[VA]19	Code no.
BB024AS	-40 – 80	24	-15%, 10%	50	11	018F7358	
BB115AS	-40 – 50	115	-15%, 10%	50	11	19	018F7361
BB230AS	-40 – 80	220 / 230	-15%, 10%	50	11	19	018F7351
BB240AS	-40 – 80	240	-15%, 10%	50	11	19	018F7352
BB440CS	-40 – 80	400	±10%	50	14	24	018F7353
BB440C3	-40 - 80	440	±10%	60	15	24	010F7333
BB024BS	-40 – 80	24	-15%, 10%	60	14	23	018F7365
BB110CS	-40 – 50	110	±10%	50	15	28	018F7360
BBTTOC3	DB110C3 -40 - 30	110	±10%	60	13	22	018F7300
BB230CS	BB230CS -40 – 50	220 / 230	±10%	60	13	24	018F7363
DD230C3	-40 - 30	220 / 230	±10%	50	16	31	01017303

Type BB DC Steam coils to 140 $^{\circ}\text{C}$

Table 12: Type BB DC Steam coils to 140 $^{\circ}\text{C}$

Type	T ambient	Supply voltage	Voltage	Frequency	Power con	sumption	Code no.
Type	[°C]	[V]	variation	[Hz]	[W]	[VA]	Code IIo.
BB012DS	-40 – 50	12	±10%	DC	14	-	018F7396
BB024DS	-40 – 50	24	±10%	DC	16	-	018F7397

Cable plug

Figure 9: Cable plug



Table 13: Cable plug

Cable plug size	Description	Code no
DIN 18	Cable plug IP67	042N1256



Universal electronic multi-timer, Type ET 20 M

Figure 10: Type ET 20 M



Table 14: Universal electronic multi-timer, Type ET 20 M

Туре	Voltage	- Suitable for coil types	Code no.
	[V]		
BA024A	24 - 240	AL, AM, AS, AZ, BA, BD, BB	042N0185

Spare parts

Table 15: Actuator/diaphragm kit

	Actuator/diaphragm kit
Туре	Sealing
	PTFE
EV225B 6 – 10	032U3171
EV225B 15	032U3172
EV225B 20 – 25	032U3173
	1 2 2 3 4
	 Armature with valve plate and spring Closing spring Diaphragm O-ring



6 Online support

Danfoss offers a wide range of support along with our products, including digital product information, software, mobile apps, and expert guidance. See the possibilities below.

The Danfoss Product Store



The Danfoss Product Store is your one-stop shop for everything product related—no matter where you are in the world or what area of the cooling industry you work in. Get quick access to essential information like product specs, code numbers, technical documentation, certifications, accessories,

Start browsing at store.danfoss.com.

Find technical documentation



Find the technical documentation you need to get your project up and running. Get direct access to our official collection of data sheets, certificates and declarations, manuals and guides, 3D models and drawings, case stories, brochures, and much more.

Start searching now at www.danfoss.com/en/service-and-support/documentation.

Danfoss Learning



Danfoss Learning is a free online learning platform. It features courses and materials specifically designed to help engineers, installers, service technicians, and wholesalers better understand the products, applications, industry topics, and trends that will help you do your job better.

Create your Danfoss Learning account for free at www.danfoss.com/en/service-and-support/learning.

Get local information and support



Local Danfoss websites are the main sources for help and information about our company and products. Find product availability, get the latest regional news, or connect with a nearby expert—all in your own language.

Find your local Danfoss website here: www.danfoss.com/en/choose-region.

Spare Parts



Get access to the Danfoss spare parts and service kit catalog right from your smartphone. The app contains a wide range of components for air conditioning and refrigeration applications, such as valves, strainers, pressure switches, and sensors.

Download the Spare Parts app for free at www.danfoss.com/en/service-and-support/downloads.

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.