



At the end of this document you will find links to products related to this catalog. You can go directly to our shop by clicking HERE. <u>HERE</u>





# **Redundancy Unit**

## Contribute to build high reliable systems **Compact and Cost-effective solution** for Back-up applications Easy setup for system reliability requirement

- Redundancy operating LED for the status confirmation
- · A signal output for failure detection of power supplies
- By adjusting the power supply voltage to light up Balance LED, the lifetime of power supplies will be more than twice. \*1
- Wide range input DC5-30V (S8VK-R10), DC10-60V (S8VK-R20)
- Wide operation temperature range: -40 to 70 °C
- Safety standards: UL508/60950-1, CSA C22.2 No. 107.1/60950-1 EN50178, EN60950-1 Lloyd's standards \*2

• EMS: EN61000-6-2 EMI: EN61000-6-3

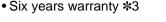

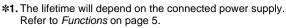

\*2. Scheduled to obtain certification in September, 2013.

\*3. Six years warranty conditions: Rated input voltage, 80% load, Ambient operating temperature: 40°C, Standard mounting.





Refer to Safety Precautions for All Power Supplies and Safety Precautions on page 9.

#### **Model Number Structure**

#### Model Number Legend

Note: Not all combinations are possible. Refer to List of Models in Ordering Information, below.



1. Output current

10: 10 A 20: 20 A

## **Ordering Information**

Note: For details on normal stock models, contact your nearest OMRON representative.

Input voltage	Output current	Model number
DC5-30V	10 A	S8VK-R10
DC10-60V	20 A	S8VK-R20

## S8VK-R

# **Specifications**


## Ratings, Characteristics, and Functions

Item		Output Current	10 A	20 A	
	Voltage		5 to 30 VDC	10 to 60 VDC	
Input	Current		2x 0 to 5 A	2x 0 to 10 A	
			1x 0 to 10 A	1x 0 to 20 A	
0	C	Continuous	10 A	20 A	
Output	Current	Power Boost	12 A (Refer to Engineering Data)	24 A (Refer to Engineering Data)	
Voltage drop	Inhiit to Cilithiit		0.56 V typ. 2x5 A 0.63 V typ. 1x10 A 0.7 V max. (-40°C 1x10 A)	0.67 V typ. 2x10 A 0.78 V typ. 1x20 A 0.9 V max. (-40°C 1x20 A)	
Power losses			6.5 W 2x5 A 7.1 W 1x10 A 0.8 W 0 A	15.8 W 2x10 A 18.0 W 1x20 A 0.8 W 0 A	
	DEDUND ANOV	Indicator	Lighting: Voltage difference between Vin1 and	d Vin2 is less than 2.4 V typ. (color: green)	
Additional	REDUNDANCY OK	Contact	Photo switch contact ON: Voltage difference to	petween Vin1 and Vin2 is less than 2.4 V typ.	
functions		Contact	Contact Ratings: 30 VDC, 50 mA		
BALANCE Indicator Lighting: Voltage difference between Vin1 and Vin				d Vin2 is less than 50 mV typ. (color: green)	
	Ambient operating temperature		-40 to 70°C (Refer to Engineering Data)		
	Storage temperature		-40 to 85°C		
	Ambient operating humidity		0% to 95% (Storage humidity: 0% to 95%)		
	Dielectric strength (detection current: 20 mA)		1.0 kVAC for 1 min. (between all inputs outputs and  , terminal) 0.5 kVAC for 1 min. (between all inputs outputs and Signal contact)		
	Vibration resistar	100	10 to 55 Hz, 0.375-mm single amplitude for 2 h each in X, Y, and Z directions		
	Vibration resistat	ice	10 to 150 Hz, 0.35-mm single amplitude (5 G max.) for 80 min each in X, Y, and Z directions		
	Shock resistance		150 m/s <sup>2</sup> , 3 times each in ±X, ±Y, and ±Z di	rections	
Others	ЕМІ	Conducted Emission	Conforms to EN61204-3 EN55011 Class B and based on FCC Class B		
Others		Radiated Emission	Conforms to EN61204-3 EN55011 Class B		
	EMS		Conforms to EN61000-6-2		
	Approved Standards		UL Listed: UL508 (Listing) UL UR: UL60950-1 (Recognition) cUL: CSA C22.2 No.107.1 cUR: CSA C22.2 No.60950-1 EN: EN50178, EN60950-1 Lloyd's standards *		
	Degree of protect	tion	IP20 by EN/IEC60529		
	Weight	in Cantambar 20	183 g	462 g	

<sup>\*</sup> Scheduled to obtain certification in September, 2013.

## **Connections**


## **Block Diagrams**

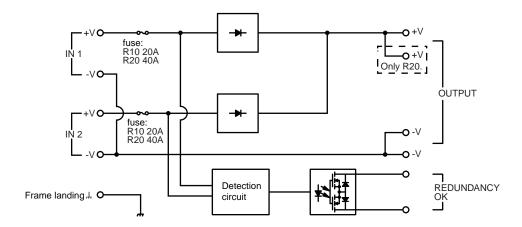


## **Construction and Nomenclature**

#### **Nomenclature**

10 A Models S8VK-R10

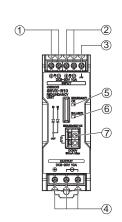

## 20 A Models

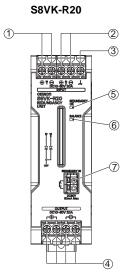


No.	No. Name Function	
1	Input terminal 1	Connect the input 1 lines to these terminals.
2	Input terminal 2	Connect the input 2 lines to these terminals.
3	႕ terminal	Connect the ground line to these terminals.
4	Output terminal	Connect the load lines to these terminals.
5	Status indicator (redundancy OK: Green)	Lighting: Voltage difference between Vin1 and Vin2 is less than 2.4 V typ.
6	Status indicator (voltage balance: Green)	Lighting: Voltage difference between Vin1 and Vin2 is less than 50 mV typ.
7	Status contact (redundancy OK: photo switch)	Photo switch contact ON: Voltage difference between Vin1 and Vin2 is less than 2.4 V typ.

#### S8VK-R

## **Engineering Data**


#### **Derating Curve**

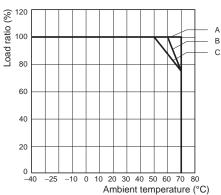

- A: Standard mounting
- B: Standard mounting, when contact mounted with S8VK-G 60°C and over: the derating is 2.5%/°C (when contact mounted with S8VK-G)
- C: Face-up mounting 50°C and over: the derating is 1.25%/°C

#### **Mounting**

(A) Standard (Vertical) mounting

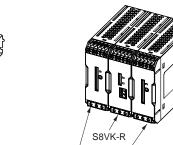

**POWER SUPPLY** 

(S8VK-G)

(C) Face-up mounting



# (B) Contact Mounting

Combinations with the S8VK-G

Power supply	Redundant unit model		
model	Redundancy	Higher capasity	
S8VK-G015□□			
S8VK-G030□□	S8VK-R10	S8VK-R10	
S8VK-G060□□			
S8VK-G12024			
S8VK-G24024		S8VK-R20	
S8VK-G24048	S8VK-R20		
S8VK-G48024			
S8VK-G48048			

#### **Power Boost Function**

This function is possible when used in combination with S8VK-G (All Models).

Power Boost is a function that can output the temporary repeated boost current larger than the rated current.


However, it should meet the following four Boost current conditions.

- 1. Time that the boost current flows: t1
- 2. The maximum value of the boost current: lp
- 3. The average output current: lave
- 4. The time ratio of the boost current flow: Duty

#### Note: Boost current conditions

- t1 ≤ 10 s
- Ip ≤ Rated boost current
- lave ≤ Rated current

Duty=
$$\frac{t1}{t1+t2} \times 100 \, [\%] \le 30\%$$

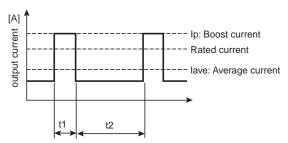

Do not allow the boost current to continue for more than 10 seconds.

Also, do not let the duty cycle exceed the boost current conditions. These conditions may damage the Power supply.

• Ensure that the average current of one cycle of the boost current does not exceed the rated output current.

This may damage the Power Supply.

 Lessen the load of the boost load current by adjusting the ambient temperature and the mounting direction.

## **Functions**


#### **Functions**

Status	Output	Display
Redundancy	Relay switch output: OFF (Normally ON)	Green
Voltage Balance		Green

#### **Status Functions**

Functions	Operation
Redundancy Status (Refer to Chart 1.)	Redundancy OK signal and LED will turn ON and light up when the input voltage difference is 2.4 V typ or less. The signal and LED will detect the failure of a power supply on one side, or connecting errors of power supply voltage.
Voltage Balance Status (Refer to Chart 1.)	Balance LED will light up when the input voltage difference is 50 mV typ or less. By adjusting the input voltage to light up LED, output current of each power supply will be balanced. The lifetime as a power supply system will be more than twice comparing when there is only one power supply. Applicable models: S8VK-G03005, S8VK-G06012, S8VK-G12024, S8VK-G240  S8VK-G480  By adjusting the input voltage to light up LED, the fluctuation of the output voltage will be less when one of the power supply breaks.

Chart 1: Operation Timing

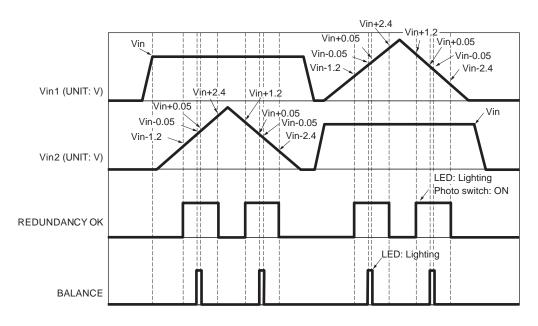

#### **Reference Value**


	Value
Reliability (MTBF)	S8VK-R10: 720,000 hrs. S8VK-R20: 680,000 hrs.
Definition	MTBF stands for Mean Time Between Failures, which is calculated according to the probability of accidental device failures, and indicates reliability of devices.  Therefore, it does not necessarily represent a life of the product.
Life expectancy	10 yrs. Min.
Definition	The life expectancy indicates average operating hours under the ambient temperature of 40°C and a load rate of 50%. Normally this is determined by the life expectancy of the built-in aluminum electrolytic capacitor.

5

Dimensions (Unit: mm)


#### S8VK-R10



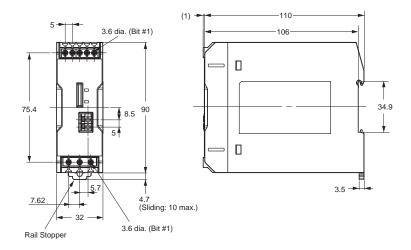

#### **S8VK-R20**



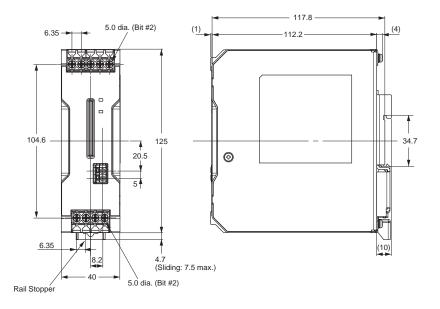


## **DIN Rail (Order Separately)**

Note: All units are in millimeters unless otherwise indicated.

#### **Mounting Rail (Material: Aluminum)**

PFP-100N PFP-50N




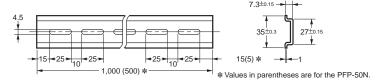

### **Mounting Rail (Material: Aluminum)**


PFP-100N2



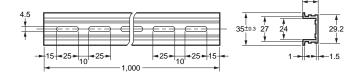

End Plate PFP-M



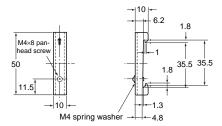

Note: If there is a possibility that the Unit will be subject to vibration or shock, use a steel DIN Rail. Otherwise, metallic filings may result from aluminum abrasion.


## **Mounting Brackets**

Name	Model	
Front-mounting bracket (for S8VK-R10)	S82Y-VS10F	
Front-mounting bracket (for S8VK-R20)	S82Y-VK10F	
Side-mounting bracket (for S8VK-R10)	S82Y-VS10S	
Side-mounting bracket (for S8VK-R20)	S82Y-VK10S	

Туре	Model	Dimensions	Appearance
Front-mounting bracket (for S8VK-R10)	S82Y-VS10F	4.5 dia.±0.1 4.5 dia.±0.1 7.3 40 t = 1.0	
Front-mounting bracket (for S8VK-R20)	S82Y-VK10F	140 <sub>20.1</sub> 0 0 0 150 150 150 150 150 1 150 1 150	
Side-mounting bracket (for S8VK-R10)	S82Y-VS10S	4.5 dia.±0.1 4.5 dia.±0.1 60±0.1 55±0.1 13	Left-side mounting Right-side mounting
Side-mounting bracket (for S8VK-R20)	\$82Y-VK10\$	73 50±0.1 4.5 dia.±0.1 0 0 0 1 125 150 140±0.1 125 150	Left-side mounting  Right-side mounting

## **Safety Precautions**

#### Warning Indications

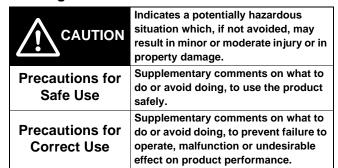

#### **Meaning of Product Safety Symbols**



Used to warn of the risk of minor injury caused by high temperatures.



Used for general mandatory action precautions for which there is no specified symbol.



Use to indicate prohibition when there is a risk of minor injury from electrical shock or other source if the product is disassembled.

#### /!\ CAUTION

Risk of a mild burn on rare occasions. Do not touch the device unit while it is powered on or immediately after the power is turned off.



The ignition may accidentally be caused. Tighten terminal screws to a specified torque 4.43 to 5.31 lb-in (0.5 to 0.6 N-m).



Minor electric shock, fire, or Product failure may occasionally occur. Do not allow any pieces of metal or conductors or any clippings or cuttings resulting from installation work to enter the Product.



Risk of product damage. Do not reverse the polarity of the device input terminals when wiring.



Risk of internal component deterioration and damage. Do not connect an AC power supply.



Minor electric shock, fire, or Product failure may occasionally occur. Do not disassemble, modify, or repair the Product or touch the interior of the Product.



#### **Precautions for Safe Use**

#### Wiring

- Minor fire may possibly occur. Ensure that input and output terminals are wired correctly.
- Increases in the temperature of internal parts resulting from heating of wiring materials may result in deterioration or damage to parts. Use wiring materials suitable to the current being used. The following wiring materials, torque and strip length are recommended to prevent heating and possible fires in wiring materials.

Terminal	Model	Recommend Wire Type		
Terminai		AWG	Solid wire	Twisted wire
Innut	S8VK-R10	AWG14 to 12	2.5 to 4 mm <sup>2</sup>	2.5 mm <sup>2</sup>
Input	S8VK-R20	AWG12 to 10	4 to 6 mm <sup>2</sup>	4 mm <sup>2</sup>
Output	S8VK-R10	AWG14 to 12	2.5 to 4 mm <sup>2</sup>	2.5 mm <sup>2</sup>
	S8VK-R20	AWG12 to 10	4 to 6 mm <sup>2</sup>	4 mm <sup>2</sup>
Status contact	S8VK-R□□	AWG16	1.5 mm <sup>2</sup>	
All terminals	wires to be stripped: 8 mm			

- On rare occasions there is a risk of internal element deterioration and damage if use is continued in a short-circuit or over-current state.
- Do not apply more than 75N force to the terminal block when tightening it.
- Use within a range that does not exceed the output current rating.
  When a load short-circuit occurs, the short-circuit current of two
  power supply units flows. Use output wiring that can handle the
  short-circuit current of two units. If the wiring does not have
  sufficient current capacity, connect a fuse on the output side.
  Recommended fuse S8VK-R10: 15 A, S8VK-R20: 30 A Fastacting type

If the current rating of the output terminal is exceeded on the S8VK-R20, always use multiple terminals simultaneously.

• Risk of damage to internal components. Do not use in a state that exceeds the rated current of the signal output.

#### **Installation Environment**

- Do not use the Redundancy Unit in locations subject to shocks or vibrations. In particular, install the Redundancy Unit as far away as possible from contactors or other devices that are a vibration source.
- Install the Redundancy Unit well away from any sources of strong, high-frequency noise and surge.

#### **Ambient Operating and Storage Environments**

- Store the product with ambient temperature –40 to 85°C, and relative humidity 0 to 95%.
- The internal parts may occasionally be deteriorated or broken. Do not use at a temperature that exceed the operating temperature range for the mounting type.
- Use the product where the relative humidity is 0 to 95%.
- Avoid places where the product is subjected to direct sunlight.
- Avoid places where the product is subjected to penetration of liquid, foreign substance, or corrosive gas.
- Avoid places subject to shock or vibration. A device such as a contact breaker may be a vibration source.
   Set the Redundancy Unit as far as possible from possible sources of shock or vibration.
- If the Redundancy Unit is used in an area with excessive electronic noise or surge, be sure to separate the Redundancy Unit as far as possible from the noise sources.


#### **Precautions for Correct Use**

#### Mounting

The long-term reliability of the S8VK-R can be increased by installing it properly and sufficiently considering heat dissipation.

Install the S8VK-R so that the air flow circulates around it, because the S8VK-R is designed to radiate heat by means of natural air

Can be used in a contact mounting with the S8VK-G (not covered by safety certification). Two S8VK-G units cannot be mounted together in a contact mounting.

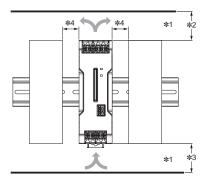

- \*1. Convection of air \*2.75 mm min.
- \*3.75 mm min.
- \*4. 20 mm min.

#### Input Voltage

S8VK-R10: DC5 to 30V S8VK-R20: DC10 to 60V

#### **Input Power Supply Selection**

This product contains an internal fuse. If a power supply other than the S8VK-G is used, the fuse may blow, depending on the state of the load. Do not connect a power supply other than the S8VK-G to this product.

If you are building a redundant system, never use in a state that exceeds the rated current of the power supply. If one of the power supplies goes down, there is a risk that the voltage on the load side cannot be attained.

Use the same model for the power supplies that are connected. On rare occasions internal element deterioration and damage may occur if use is continued in a short-circuit or over-current state. Do not continue use for more than 10 seconds.

Do not use in applications where load rush current or overload may frequently occur. Slight risk of deterioration and damage due to internal loss.

The signal output / status LED may occasionally not operate stably. When using in environments where the temperature is less than -25 °C, always adjust the 5 V power supply to 5.3 V or higher.

#### **Dielectric Strength Test**

The S8VK-R is designed to withstand a voltage test of 1 kV AC between all input/output terminals and the chassis, and 0.5 kV AC between all input/output terminals and the signal output terminal, for one minute.

- 1. The S8VK-R may possibly be damaged from the impulse voltage if a testing device switch is used to abruptly apply or shut off 1 kV AC, 0.5 kV AC. Increase the applied voltage gradually using the voltage adjustment on the testing device.
- 2. When testing, always short-circuit all terminals to prevent damage to the output terminal.

#### Signal output

Photo switch output

Photo switch ON when input voltage difference is 2.4 V typ. or less. 30 VDC max. (LVLC), 50 mA max., residual voltage when ON: 2 V max., leakage current when OFF: 0.1 mA max.

#### Status display LEDs

The status display LEDs show the status of the input power as shown in the table below.

Redundancy OK

Green on: Input voltage difference is 2.4 V typ. or less. Voltage balance

Green on: Input voltage difference is 50 mV typ. or less. The redundancy OK display/signal operates when the voltage difference is no more than 2.4 V typ. When using a 5 V or 12 V power supply, verify that there is no difference in the output voltages of the power supplies.

The voltage balance display does not guarantee current balance. The degree of balance varies by model, and therefore if you require operation with balanced current, check the output current of each power supply unit.

The models below use a voltage balance display, and cannot be used as a current balance.

S8VK-G015□□


S8VK-G03012 S8VK-G03024

S8VK-G06024

When adjusting the voltage based on the voltage balance, adjust the voltage of only one power supply. If you must adjust the voltages of both power supplies, be sure to check the output voltage before use. If you want to use the voltage balance display to ensure that the expected life is obtained, use the same thickness and length of wiring from each S8VK-G to the S8VK-R.

#### **Connections**

It is possible to connect S8VK-R like below.

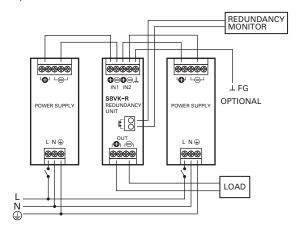

#### Read and Understand this Catalog

Please read and understand this catalog before purchasing the product. Please consult your OMRON representative if you have any questions or comments.

## **Warranty and Limitations of Liability**

#### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

#### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

#### **Application Considerations**

#### SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of the product in the customer's application or use of the product.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used.

Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### **PROGRAMMABLE PRODUCTS**

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

#### **Disclaimers**

#### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons. Consult with your OMRON representative at any time to confirm actual specifications of purchased product.

#### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

#### PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

**OMRON Corporation Industrial Automation Company** 

Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters
OMRON EUROPE B.V.
Wegalaan 67-69-2132 JD Hoofddorp
The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

**OMRON ELECTRONICS LLC** 

One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200 **Authorized Distributor:** 

© OMRON Corporation 2013 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

CSM\_1\_1\_0613 Cat. No. T059-E1-01





Below is a list of articles with direct links to our shop Electric Automation Network where you can see:

- Quote per purchase volume in real time.
- Online documentation and datasheets of all products.
- Estimated delivery time enquiry in real time.
- Logistics systems for the shipment of materials almost anywhere in the world.
- Purchasing management, order record and tracking of shipments.

To access the product, click on the green button.

Product	Code	Reference	Product link
Slim style output relay, SPDT, 1 A, 24 VDC	150200	G7T-112S DC24	Buy on EAN