

The OMRON logo is displayed in a bold, blue, sans-serif font. The letters are thick and rounded, with the 'O' being a simple circle. The entire logo is set against a light yellow rectangular background.

Automatización Eléctrica
Especialistas en Automatización

At the end of this document you will find links to products related to this catalog. You can go directly to our shop by clicking [HERE](#). [HERE](#)



CJ Series
EtherNet/IP™ Connection Guide

OMRON Corporation
Vision System
FH Series

About Intellectual Property Rights and Trademarks

Microsoft product screen shots reprinted with permission from Microsoft Corporation.

Windows is a registered trademark of Microsoft Corporation in the USA and other countries.

ODVA and EtherNet/IP™ are trademarks of ODVA.

Company names and product names in this document are the trademarks or registered trademarks of their respective companies.

Table of Contents

1. Related Manuals	1
2. Terms and Definitions	2
3. Precautions.....	3
4. Overview	4
5. Applicable Devices and Device Configuration	5
5.1. Applicable Devices.....	5
5.2. Device Configuration.....	6
6. EtherNet/IP Settings	8
6.1. EtherNet/IP Communications Parameters	8
6.2. Allocating the Tag Data Links	8
7. EtherNet/IP Connection Procedure.....	10
7.1. Work Flow	10
7.2. Setting Up the FH Sensor Controller.....	11
7.3. Setting Up the PLC	16
7.4. Setting Up the Network	26
7.5. Checking the EtherNet/IP Communications	38
8. Initialization Method	43
8.1. Initializing the PLC	43
8.2. Initializing the FH Sensor Controller.....	44
9. Revision History	45

1. Related Manuals

The table below lists the manuals related to this document.

To ensure system safety, make sure to always read and heed the information provided in all Safety Precautions, Precautions for Safe Use, and Precaution for Correct Use of manuals for each device which is used in the system.

Cat. No.	Model	Manual name
W472	CJ2H-CPU6□-EIP CJ2H-CPU6□ CJ2M-CPU□□	CJ-series CJ2 CPU Unit Hardware User's Manual
W473	CJ2H-CPU6□-EIP CJ2H-CPU6□ CJ2M-CPU□□	CJ-series CJ2 CPU Unit Software User's Manual
W465	CJ1W-EIP21 CJ2H-CPU6□-EIP CJ2M-CPU3□	EtherNet/IP™ Unit Operation Manual
W446	-	CX-Programmer Operation Manual
2285550-0	FH-1□□□/3□□□	Image Processing System Instruction Sheet
Z340	FH-1□□□/3□□□	Vision Sensor FH/FZ5 Series Vision System User's Manual
Z341	FH-1□□□/3□□□	Vision Sensor FH/FZ5 Series Vision System Processing Item Function Reference Manual
Z342	FH-1□□□/3□□□	Vision Sensor FH/FZ5 Series Vision System User's Manual (Communications Settings)

2. Terms and Definitions

Term	Explanation and Definition
Node	<p>Controllers and devices are connected to the EtherNet/IP network via the EtherNet/IP ports. The EtherNet/IP recognizes each EtherNet/IP port connected to the network as one node.</p> <p>When a device with two EtherNet/IP ports is connected to the EtherNet/IP network, the EtherNet/IP recognizes this device as two nodes.</p> <p>The EtherNet/IP achieves the communications between controllers or the communications between controllers and devices by exchanging data between these nodes connected to the network.</p>
Tag	<p>A minimum unit of the data that is exchanged on the EtherNet/IP network is called a tag. The tag is defined as a network variable or as a physical address, and it is allocated to the memory area of each device.</p>
Tag set	<p>In the EtherNet/IP network, a data unit that consists of two or more tags can be exchanged. The data unit consisting of two or more tags for the data exchange is called a tag set. Up to eight tags can be configured per tag set for OMRON controllers.</p>
Tag data link	<p>In the EtherNet/IP, the tag and tag set can be exchanged cyclically between nodes without using the user program. This standard feature on the EtherNet/IP is called a tag data link.</p>
Connection	<p>A connection is used to exchange data as a unit within which data concurrency is maintained. The connection consists of tags or tag sets. Creating the concurrent tag data link between the specified nodes is called a "connection establishment". When the connection is established, the tags or tag sets that configure the connection are exchanged between the specified nodes concurrently.</p>
Originator and Target	<p>To perform tag data links, one node requests the opening of a communications line called a "connection".</p> <p>The node that requests opening the connection is called an "originator", and the node that receives the request is called a "target".</p>
Tag data link parameter	<p>The tag data link parameter is the setting data to perform the tag data link. It includes the data to set tags, tag sets, and connections.</p>

3. Precautions

- (1) Understand the specifications of devices which are used in the system. Allow some margin for ratings and performance. Provide safety measures, such as installing safety circuit in order to ensure safety and minimize risks of abnormal occurrence.
- (2) To ensure system safety, always read and heed the information provided in all Safety Precautions, Precautions for Safe Use, and Precaution for Correct Use of manuals for each device used in the system.
- (3) The user is encouraged to confirm the standards and regulations that the system must conform to.
- (4) It is prohibited to copy, to reproduce, and to distribute a part or the whole of this document without the permission of OMRON Corporation.
- (5) The information contained in this document is current as of December 2013. It is subject to change without notice for improvement.

The following notation is used in this document.



Caution

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage.



Precautions for Safe Use

Precautions on what to do and what not to do to ensure safe usage of the product.



Precautions for Correct Use

Precautions on what to do and what not to do to ensure proper operation and performance.



Additional Information

Additional information to read as required.

This information is provided to increase understanding or make operation easier.

Symbol



The triangle symbol indicates precautions (including warnings).
The specific operation is shown in the triangle and explained in text.
This example indicates a general precaution.

4. Overview

This document describes the procedure for connecting the Vision System (FH series) of OMRON Corporation (hereinafter referred to as OMRON) with CJ-series Programmable Controller + Ethernet/IP Unit (hereinafter referred to as the PLC), and the procedure to check their connection.

Refer to *Section 6 EtherNet/IP Settings* and *Section 7 EtherNet/IP Connection Procedure* to understand the setting method and key points to operate the tag data link for EtherNet/IP.

In this document, CJ-series EtherNet/IP Unit and the built-in EtherNet/IP port of CJ-series CJ2 CPU Unit are collectively called as the "EtherNet/IP Unit".

5. Applicable Devices and Device Configuration

5.1. Applicable Devices

The applicable devices are as follows:

Manufacturer	Name	Model
OMRON	CJ2 CPU Unit	CJ2[]-CPU[]
OMRON	EtherNet/IP Unit	CJ1W-EIP21 CJ2H-CPU6[]-EIP CJ2M-CPU3[]
OMRON	FH Sensor Controller	FH-1[]/ FH-1[]-[] FH-3[]/FH-3[]-[]
OMRON	0.3 Megapixel Digital Camera 0.3 Megapixel Small Digital Camera 0.3 Megapixel Small Digital Pen-Shaped Camera 0.3 Megapixel High-Speed Camera 0.3 Megapixel High-Speed CMOS Camera 2 Megapixel Digital Camera 2 Megapixel High-Speed CMOS Camera 4 Megapixel High-Speed CMOS Camera 5 Megapixel Digital Camera Intelligent Camera Intelligent Compact Camera Auto-Focus Camera	FZ-SC/S FZ-SFC/SF FZ-SPC/SP FZ-SHC/SH FH-SC/SM FZ-SC2M/S2M FH-SC02/SM02 FH-SC04/SM04 FZ-SC5M2/S5M2 FZ-SLC15/SLC100 FZ-SQ010F/SQ050F/SQ100F/SQ100N FZ-SZC15/SZC100



Precautions for Correct Use

As applicable devices above, the devices with the models and versions listed in *Section 5.2* are actually used in this document to describe the procedure for connecting devices and checking the connection.

You cannot use devices with versions lower than the versions listed in *Section 5.2*.

To use the above devices with versions not listed in *Section 5.2* or versions higher than those listed in *Section 5.2*, check the differences in the specifications by referring to the manuals before operating the devices.




Additional Information

This document describes the procedure to establish the network connection. Except for the connection procedure, it does not provide information on operation, installation or wiring method. It also does not describe the functionality or operation of the devices. Refer to the manuals or contact your OMRON representative.

5.2. Device Configuration

The hardware components to reproduce the connection procedure of this document are as follows:

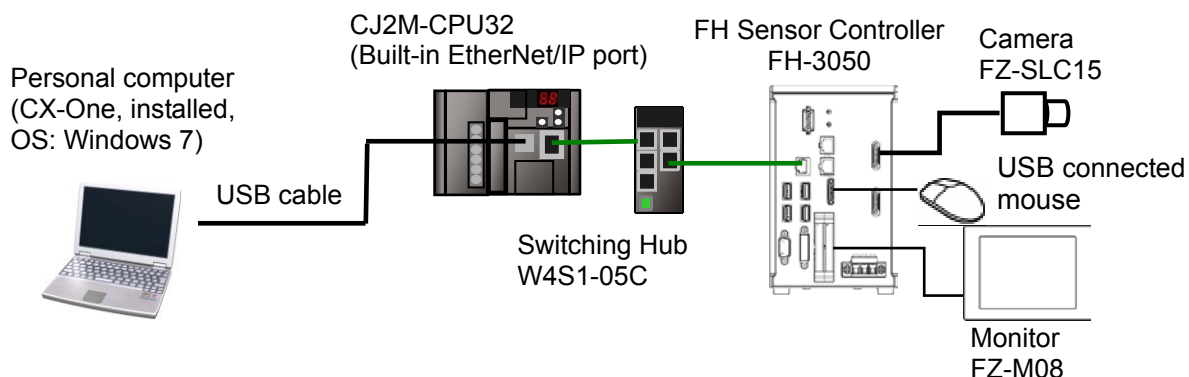

Manufacturer	Name	Model	Version
OMRON	CPU Unit (Built-in EtherNet/IP port)	CJ2M-CPU32 (Built-in CJ2M-EIP21)	Ver.2.0 (Ver.2.12)
OMRON	Power Supply Unit	CJ1W-PA202	
OMRON	Switching Hub	W4S1-05C	Ver.1.00
OMRON	CX-One	CXONE-AL[C-V4 /AL[D-V4	Ver.4.[]
OMRON	CX-Programmer	(Included in CX-One)	Ver.9.43
OMRON	Network-Configurator	(Included in CX-One)	Ver.3.56
-	Personal computer (OS: Windows7)	-	
-	USB cable (USB 2.0 type B connector)	-	
-	LAN cable (STP (shielded, twisted-pair) cable of Ethernet category 5 or higher)	-	
OMRON	FH Sensor Controller (Camera 2ch type)	FH-3050	Ver.5.00
OMRON	Camera	FZ-SLC15	
OMRON	Camera cable	FZ-VS	
OMRON	Monitor (analog RGB monitor)	FZ-M08	
OMRON	Monitor conversion cable	FH-VMRGB	
-	USB connected mouse	-	



Precautions for Correct Use

Update the CX-Programmer and Network Configurator to the versions specified in this section or higher versions using the auto update function.

If a version not specified in this section is used, the procedures described in *Section 7* and subsequent sections may not be applicable. In that case, use the equivalent procedures described in the *CX-Programmer Operation Manual* (Cat. No. W446) and Network Configurator Online Help.



Additional Information

The system configuration in this document uses USB for the connection between the personal computer and PLC. For information on how to install the USB driver, refer to A-5 *Installing the USB Driver* of the *CJ-series CJ2 CPU Unit Hardware User's Manual* (Cat. No. W472).

6. EtherNet/IP Settings

This section describes the specifications such as communication parameters and tag data link that are set in this document.


6.1. EtherNet/IP Communications Parameters

The communications parameter required connecting the PLC and the FH Sensor Controller via EtherNet/IP is given below.

	PLC (EtherNet/IP Unit) (node 1)	FH Sensor Controller (node 2)
Unit number	0	-
Node address	1	2
IP address	192.168.250.1	192.168.250.2
Subnet mask	255.255.255.0	255.255.255.0

6.2. Allocating the Tag Data Links

The tag data links are allocated for the FH Sensor Controller as shown below.

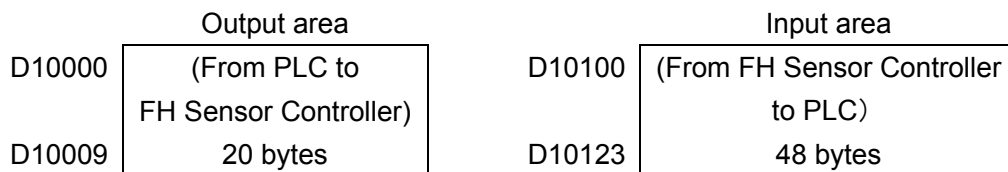

■ Details on output area

	Bit															Meaning	
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1		0
D10100	ERCLR							XEXE							STEP	EXE	Control output (2 words)
D10101																DSA	
D10102	CMD-CODE															Command code (2 words)	
D10103																	
D10104	CMD-PARAM															Command parameter (6 words max)	
D10105																	
D10106																	
D10107																	
D10108																	
D10109																	



Additional Information

For details on command codes and response codes, refer to *Communicating with EtherNet/IP* in Section 2 *Methods for Connecting and Communicating with External Devices* of the *Vision Sensor FH/FZ5 Series Vision System User's Manual (Communications Settings)* (Cat.No. Z342).

■ Details on input area

	Bit															Meaning	
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1		0
D10100	ERR					XWAIT	XBUSY	XFLG				RUN	OR		BUSY	FLG	Control output (2 words)
D10101																GATE	
D10102	CMD-CODE															Command code (2 words)	
D10103																	
D10104	RES-CODE															Response code (2 words)	
D10105																	
D10106	RES-DATA															Response data (2 words)	
D10107																	
D10108	DATA0															Output data 0	
D10109																	
D10110	DATA1															Output data 1	
D10111																	
D10112	DATA2															Output data 2	
D10113																	
D10114	DATA3															Output data 3	
D10115																	
D10116	DATA4															Output data 4	
D10117																	
D10118	DATA5															Output data 5	
D10119																	
D10120	DATA6															Output data 6	
D10121																	
D10122	DATA7															Output data 7	
D10123																	



Additional Information

For details on command codes and response codes, refer to *Communicating with EtherNet/IP* in *Section 2 Methods for Connecting and Communicating with External Devices* of the *Vision Sensor FH/FZ5 Series Vision System User's Manual (Communications Settings)* (Cat.No. Z342).


7. EtherNet/IP Connection Procedure

This section describes the procedure for connecting the FH Sensor Controller to the PLC via EtherNet/IP.

This document explains the procedures for setting up the PLC and the FH Sensor Controller from the factory default setting. For the initialization, refer to *Section 8 Initialization Method*.

7.1. Work Flow

Take the following steps to operate the tag data link for EtherNet/IP.

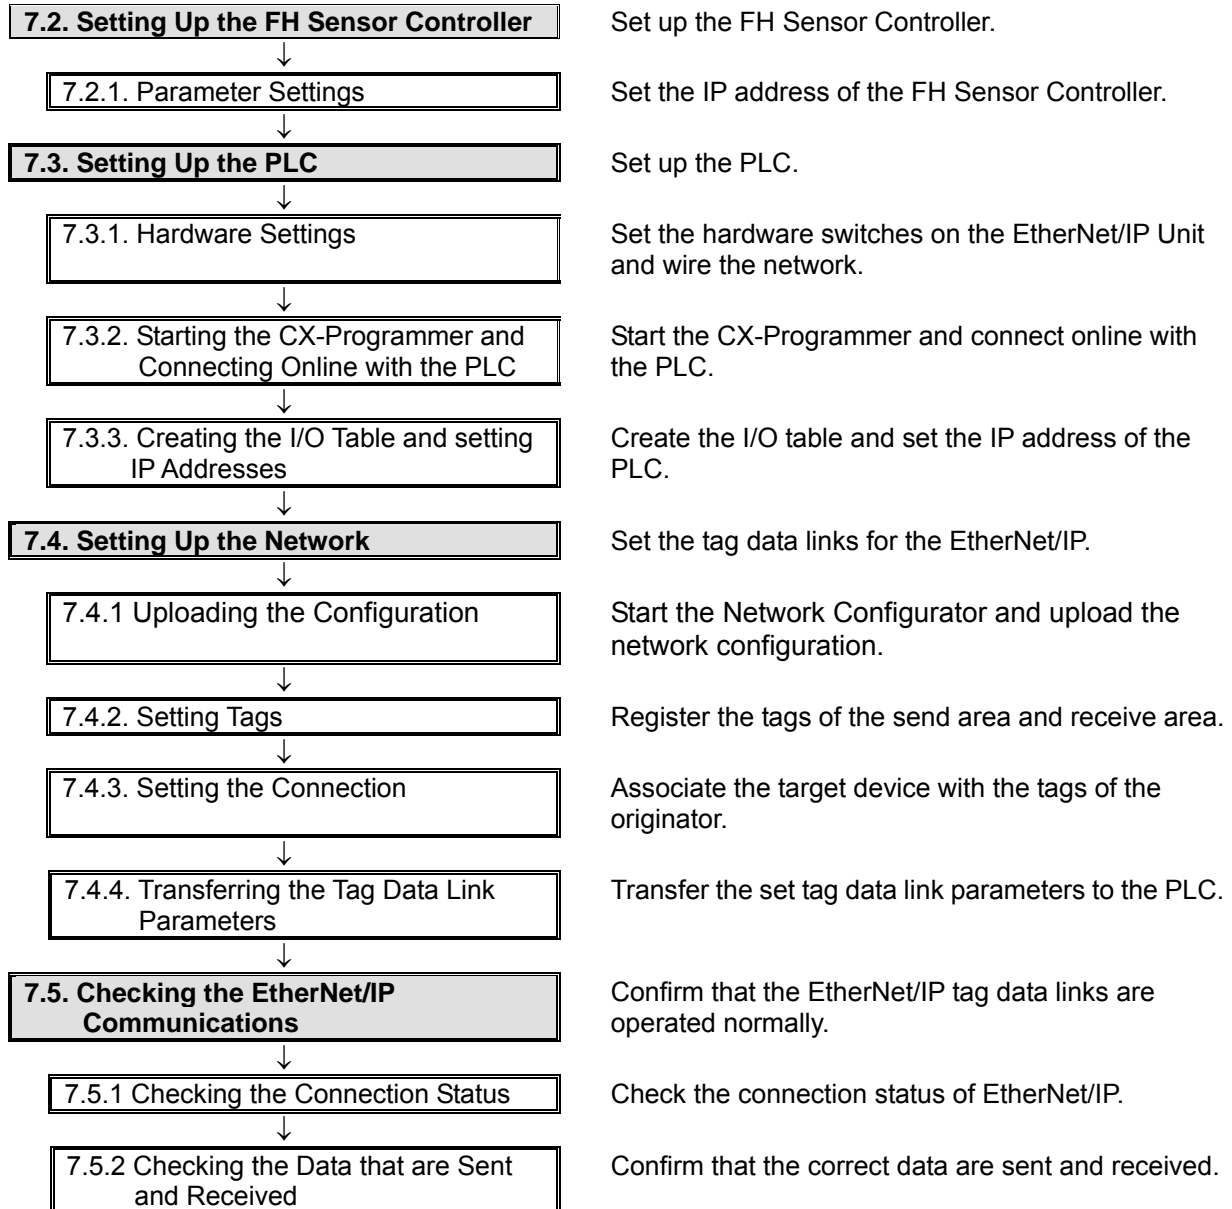

7.2. Setting Up the FH Sensor Controller


Set up the FH Sensor Controller.

7.2.1. Parameter Settings

Set the IP address of the FH Sensor Controller.

- 1 Check the position of the connectors on the FH Sensor Controller by referring to the right figure.
 - B: Connect the LAN cable to the Ethernet connector (PORT1).
 - K: Connect the camera cable to the camera connector.
 - E: Connect the DVI-I connector to the monitor connected with the monitor conversion cable.
 - C: Connect the mouse to the USB connector.
 - L: Connect the power supply cable to the power supply terminal connector.

Model (FH-1□□□/3□□□) has one port.

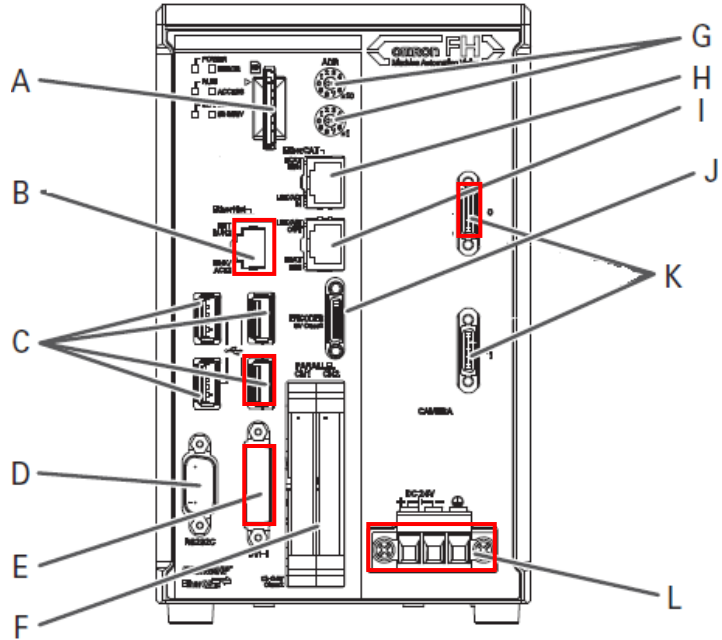


(FH Sensor Controller)

Connector name	Description
A	SD memory card installation connector Install the SD memory card. Do not plug or unplug the SD card during measurement operation. Otherwise measurement time may be affected or data may be destroyed.
B	Ethernet connector Connect an Ethernet device.
C	USB connector Connect a USB device. Do not plug or unplug it during measurement. Measurement time might be affected otherwise.
D	RS-232C connector Connect an external device such as a programmable controller.
E	DVI-I connector Connect a monitor.
F	I/O connector(control lines, data lines) Connect the controller to external devices such as a sync sensor and PLC.
G	EtherCAT address setup volume Used to set a station address as an EtherCAT communication device.
H	EtherCAT communication connector (IN) Connect the opposed EtherCAT device.
I	EtherCAT communication connector (OUT) Connect the opposed EtherCAT device.
J	Encoder connector Connect an encoder.
K	Camera connector Connect cameras.
L	Power supply terminal connector Connect a DC power supply. Wire the controller independently on other devices. Wire the ground line. Be sure to ground the controller alone. Perform wiring using the attached power supply connector as referring to the description of wiring that connector.







* For Model (FH-1□□□-□□/3□□□-□□), connect the EtherNet/IP communication LAN cable to the PORT2.





* Only the PORT2 can be used for EtherNet/IP communications. Therefore, you can use the PORT2 for EtherNet/IP communications with the PLC while the PORT1 is used for FTP or remote control communications.

* Model (FH-1□□□-□□/3□□□-□□) has two Ethernet ports

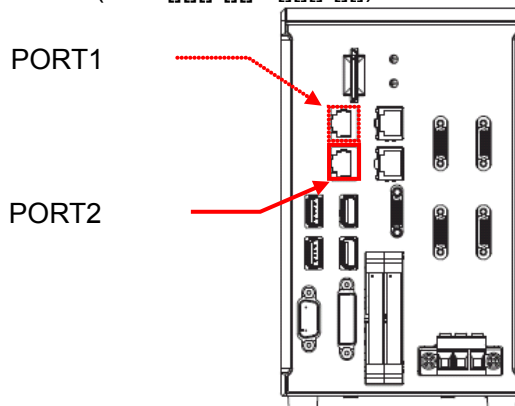


(FH Sensor Controller)

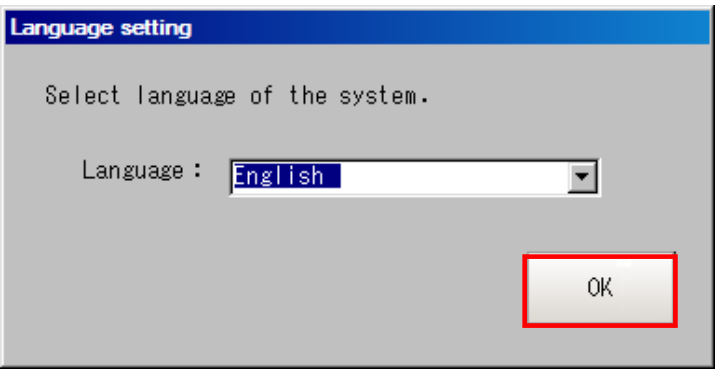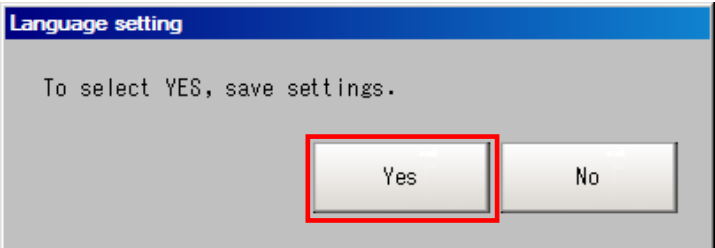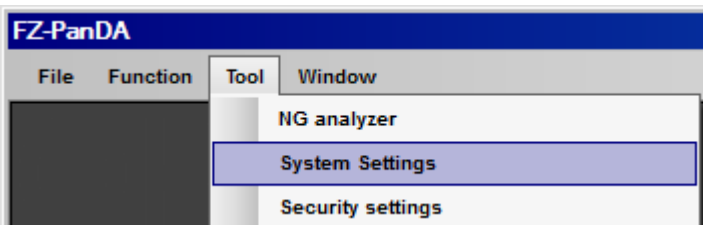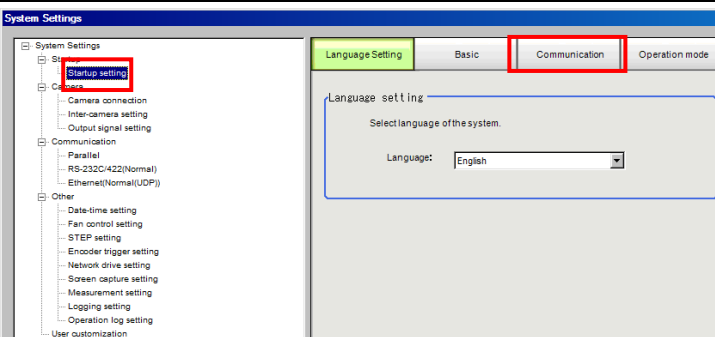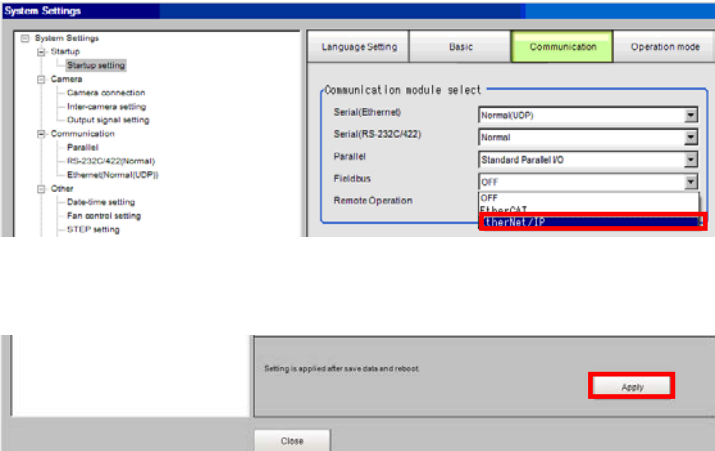
<p>2 Turn ON the power supply to the FH Sensor Controller.</p>	
<p>3 The Language setting Dialog Box is displayed on the monitor connected to the FH Sensor Controller only at the initial start. Select English and click the OK Button.</p> <p>The dialog box on the right is displayed. Click the Yes Button.</p>	 
<p>4 Select System Settings from the Tool Menu.</p>	
<p>5 Select System Settings-Startup-Startup setting. The Language setting Dialog Box is displayed. Select the Communication Tab.</p>	
<p>6 The Communication module select Dialog Box is displayed. Select EtherNet/IP from the Fieldbus pull-down list. Then, click the Apply Button.</p> <p>* The data set in the System Settings Dialog Box as shown on the right becomes enabled after the settings are saved, and then the FH Sensor Controller is restarted.</p>	
<p>7 Click the Close Button to close the System Settings Dialog Box.</p>	
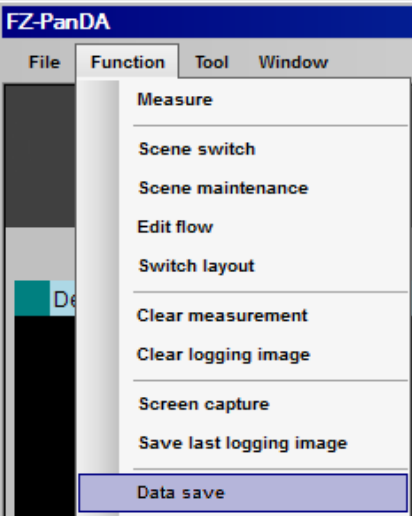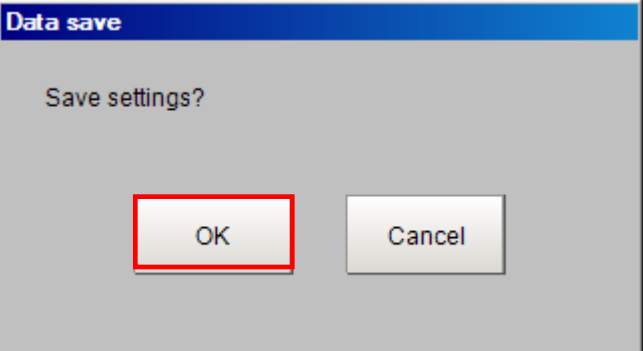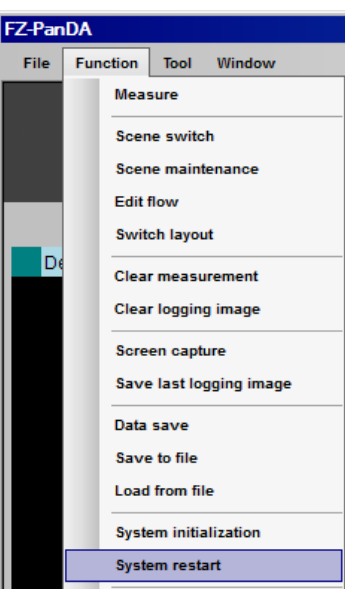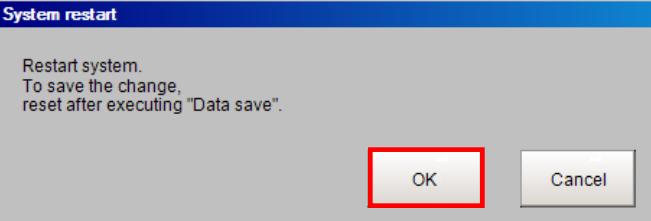
<p>8</p>	<p>Select Data save from the Function Menu.</p>	 <p>The screenshot shows the FZ-PanDA application window with the 'Function' menu open. The menu items are: Measure, Scene switch, Scene maintenance, Edit flow, Switch layout, Clear measurement, Clear logging image, Screen capture, Save last logging image, and Data save. The 'Data save' option at the bottom is highlighted with a blue selection bar.</p>
<p>9</p>	<p>The Data save Dialog Box is displayed. Click the OK Button.</p>	 <p>The screenshot shows a dialog box titled 'Data save' with the text 'Save settings?'. There are two buttons: 'OK' and 'Cancel'. The 'OK' button is highlighted with a red rectangular border.</p>
<p>10</p>	<p>Select System restart from the Function Menu.</p>	 <p>The screenshot shows the FZ-PanDA application window with the 'Function' menu open. The menu items are: Measure, Scene switch, Scene maintenance, Edit flow, Switch layout, Clear measurement, Clear logging image, Screen capture, Save last logging image, Data save, Save to file, Load from file, System initialization, and System restart. The 'System restart' option at the bottom is highlighted with a blue selection bar.</p>
<p>11</p>	<p>The System restart Dialog Box is displayed. Check the contents and click the OK Button.</p>	 <p>The screenshot shows a dialog box titled 'System restart' with the text: 'Restart system. To save the change, reset after executing "Data save".'. There are two buttons: 'OK' and 'Cancel'. The 'OK' button is highlighted with a red rectangular border.</p>

12 After restarting, select **System Settings** from the Tool Menu.

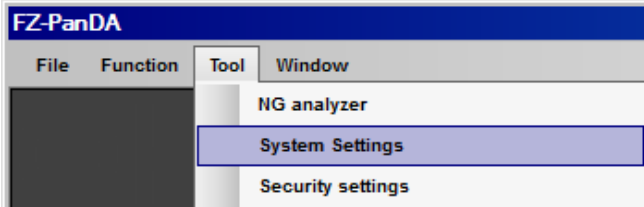


13 Select **System Settings - Communication - Ethernet:Normal(UDP)**.

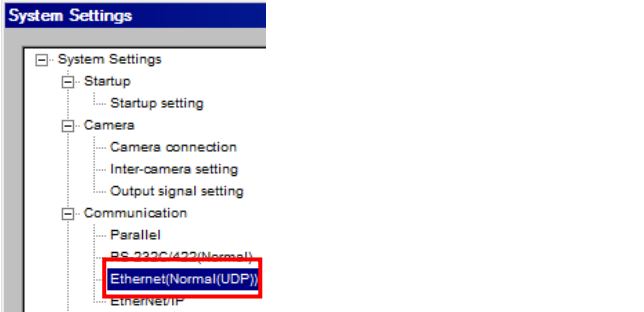


14 The window on the right is displayed. Select the *Use the following IP address* Option for Address setting 2.

Enter the following values using the numeric keyboard and click the **OK** Button to confirm the values.


IP address: 192.168.250.2
Subnet mask: 255.255.255.0

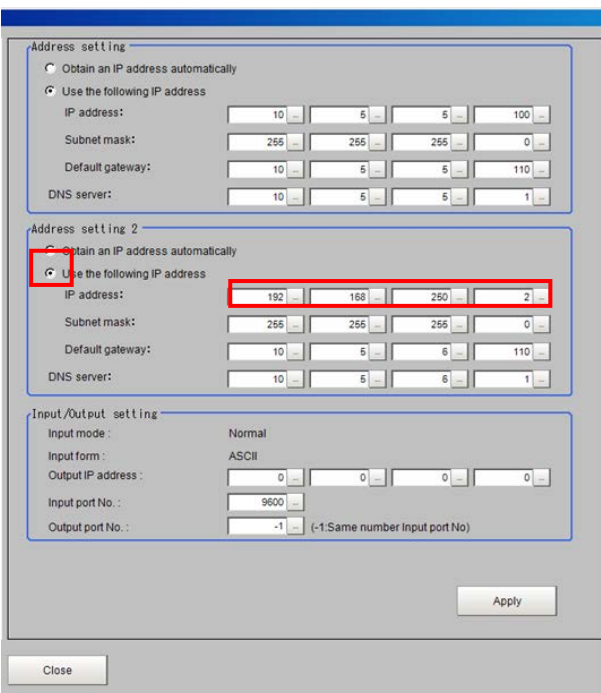

* When a value is changed, the Apply Button is displayed

*To change a value, click the  Button in the item in which a value is to be set.

* How to change IP address.

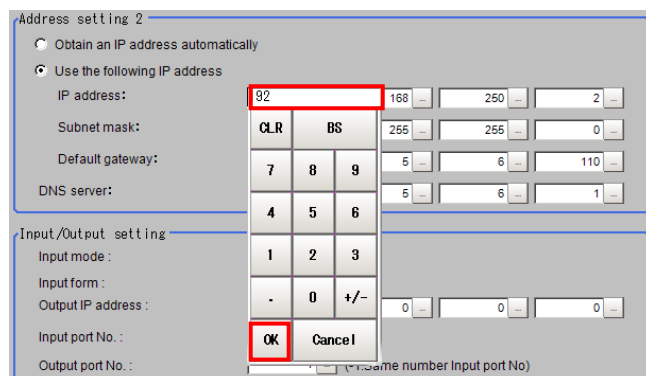


* The numeric keyboard is displayed. Enter values using the mouse. After entering the values, click the **OK** Button on the numeric keyboard.

15 When a value is changed, the Apply Button is displayed. Click the **Apply** Button.




The Ethernet Dialog Box is displayed.

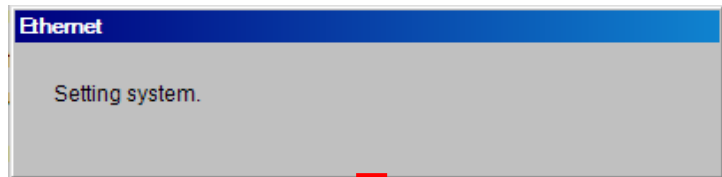


After the Ethernet Dialog Box disappears, click the **Close** Button to close the System Settings Dialog Box.



16 Select **Data save** from the Function Menu.

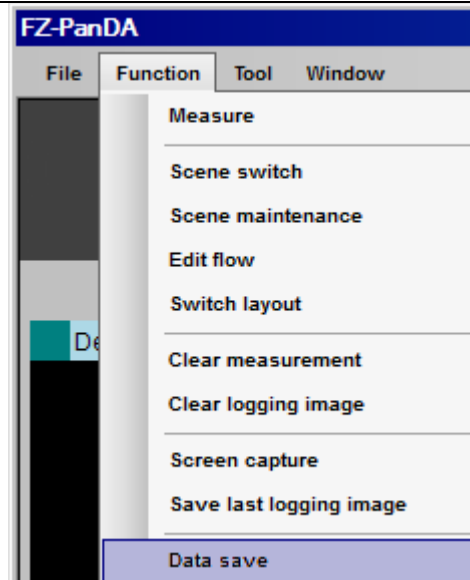

17 The Data save Dialog Box is displayed. Check the contents and click the **OK** Button.

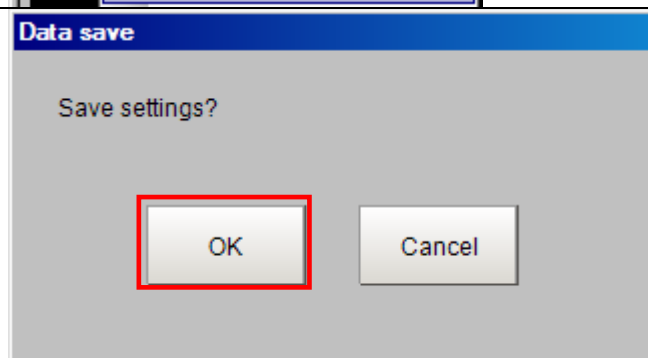

7.3. Setting Up the PLC

Set up the PLC.

7.3.1. Hardware Settings

Set the hardware switches on the EtherNet/IP Unit and wire the network.




Precautions for Correct Use

Make sure that the power supply is OFF when you perform the setting up.

- 1 Make sure that the power supply to the PLC is OFF.


* If the power supply is turned ON, settings may not be applicable as described in the following procedure.

- 2 Check the position of the hardware switches on the front of the EtherNet/IP Unit by referring to the right figure.

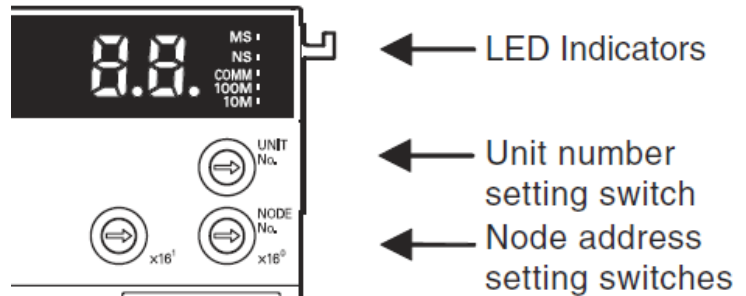

- 3 Set the unit number setting switch to 0.

The unit number is used to identify individual CPU Bus Units when more than one CPU Bus Unit is mounted to the same PLC. Use a small screwdriver to make the setting, taking care not to damage the rotary switch. The unit number is factory-set to 0.



- 4 Set the node address setting switches to the following default settings.


[NODE No.x16¹]: 0

[NODE No.x16⁰]: 1

* Set the IP address to 192.168.250.1.

* By default, the first to third octets of the local IP address are fixed to 192.168.250. The fourth octet is the values that were set with the node address setting switches.

With the FINS communications service, when there are multiple EtherNet/IP Units connected to the Ethernet network, the EtherNet/IP Units are identified by node addresses. Use the node address switches to set the node address between 01 and FE hexadecimal (1 to 254 decimal). Do not set a number that has already been set for another node on the same network.




The left switch sets the sixteens digit (most significant digit) and the right switch sets the ones digit (least significant digit). The node address is factory-set to 01.

Default IP address = 192.168.250.node address

With the factory-default node address setting of 01, the default IP address is 192.168.250.1.

- 5 Connect the LAN cable to the EtherNet/IP port of the PLC, and connect the USB cable to the USB port. Connect the personal computer, Switching Hub and PLC as shown in 5.2. *Device Configuration*.

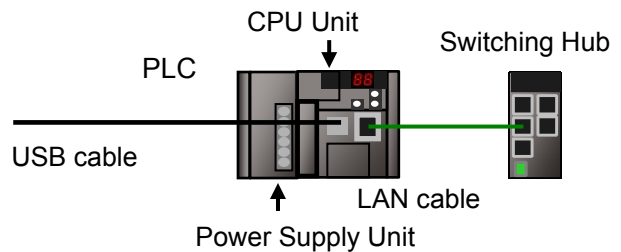





- 6 Turn ON the power supply to the PLC.

- 7 The set IP address is displayed on the seven-segment LED indicators from right to left. Afterwards, the rightmost 8 bits of the IP address are displayed in hexadecimal during normal operation.


7.3.2. Starting the CX-Programmer and Connecting Online with the PLC

Start the CX-Programmer and connect online with the PLC.


Install the CX-One and USB driver in the personal computer beforehand.

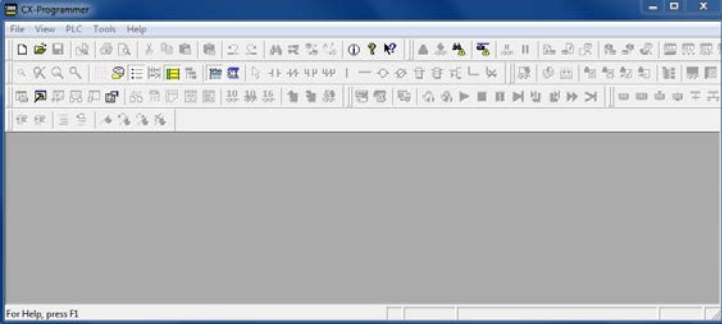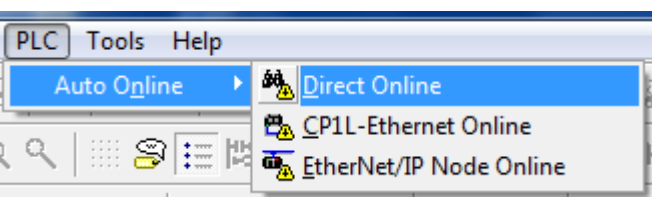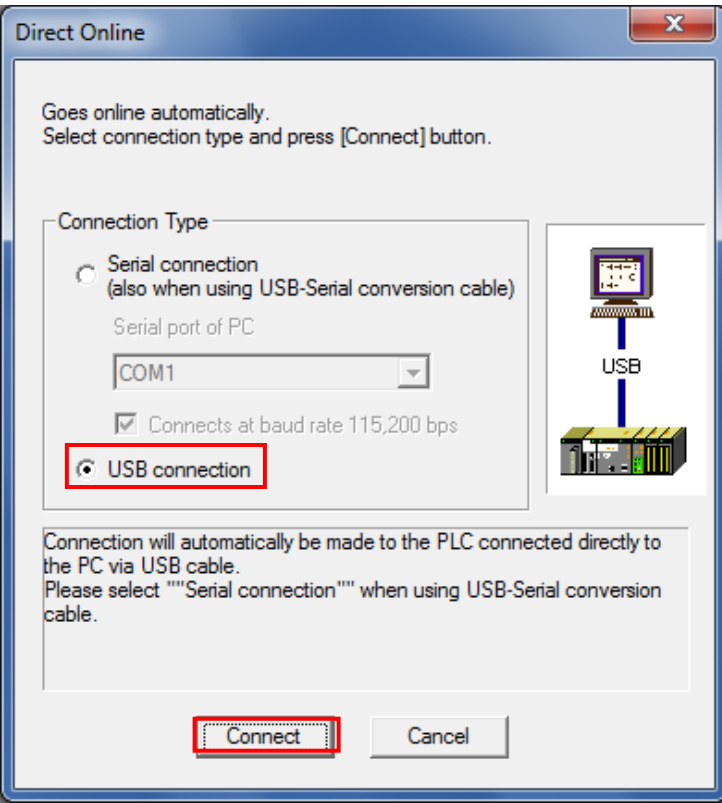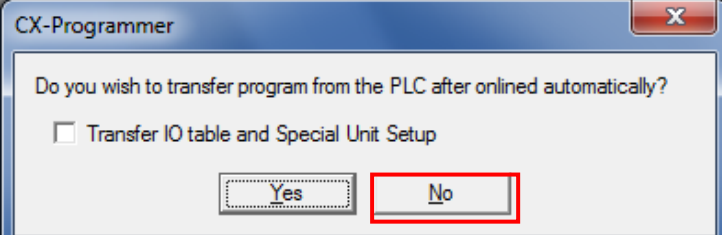
<p>1 Start the CX-Programmer.</p>	
<p>2 Select Auto Online - Direct Online from the PLC Menu.</p>	
<p>3 The Direct Online Dialog Box is displayed. Select the USB connection Option for Connection Type and click the Connect Button.</p>	
<p>4 The dialog box on the right is displayed. Check the contents and click the No Button.</p>	

- 5 The dialog box on the right is displayed, and the CX-Programmer and the PLC are automatically connected.

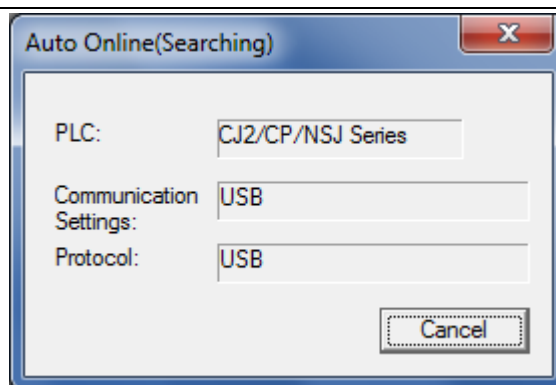

- 6 Confirm that the CX-Programmer and the PLC are normally connected online.



- * The  icon is pressed down during online connection.



Additional Information

If an online connection cannot be made to the PLC, check the cable connection.

Or, return to step 2, check the settings and repeat each step.

For details, refer to *Connecting Directly to a CJ2 CPU Unit Using a USB Cable* in Chapter 3 *Project Reference of the CX-Programmer Operation Manual* (Cat. No. W466).



Additional Information

The dialog boxes explained in the following procedures may not be displayed depending on the environmental setting of CX-Programmer.

For details on the environmental settings, refer to *Options and Preferences* in Chapter 3 *Project Reference of the CX-Programmer Operation Manual* (Cat. No. W466). This document explains the setting procedure when the *Confirm all operations affecting the PLC* Check Box is selected.

7.3.3. Creating the I/O Table and setting IP Addresses

Create the I/O table and set the IP address of the PLC.





1 If the operating mode of the PLC is RUN Mode or Monitor Mode, change it to Program Mode by following the steps below.

(1) Select **Operating Mode - Program** from the PLC Menu of the CX-Programmer.

(2) The dialog box on the right is displayed. Confirm that there is no problem and click the **Yes** Button.


* Refer to *Additional Information* on the previous page for the settings concerning the dialog display.

(3) Confirm that Stop/Program Mode is displayed on the right of the PLC model in the project workspace of the CX-Programmer.

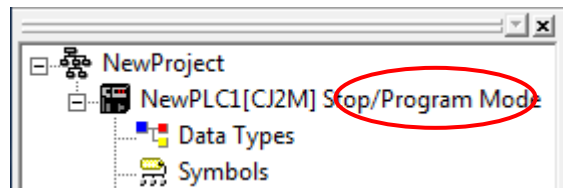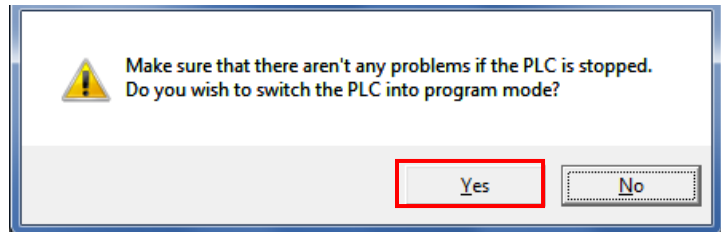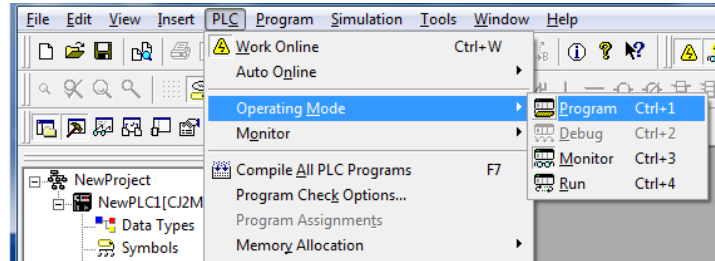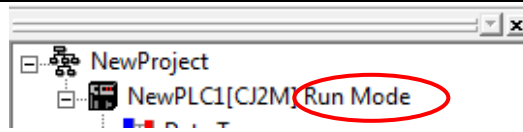


(Project workspace)


- 2 Select **Edit - I/O Table and Unit Setup** from the PLC Menu of the CX-Programmer.

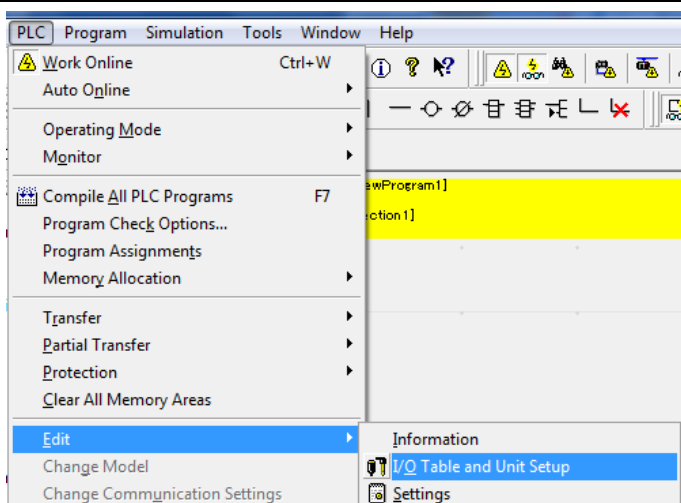


The PLC IO Table Window is displayed.

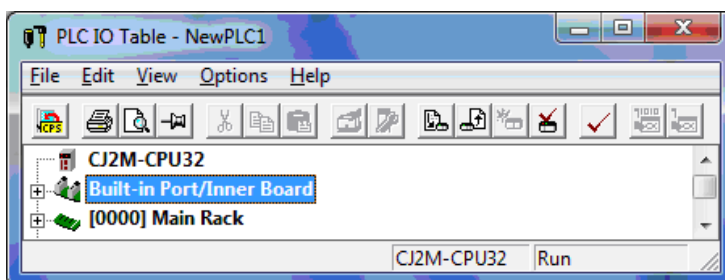


- 3 Select **Create** from the Options Menu of the PLC IO Table Window.

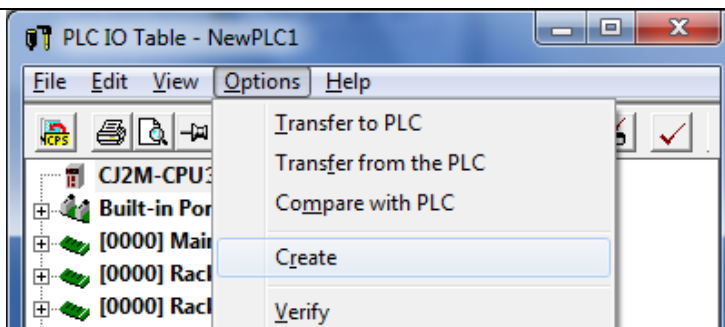



The dialog box on the right is displayed. Confirm that there is no problem and click the **Yes** Button.

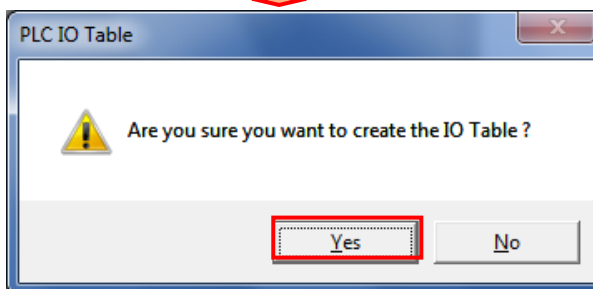

The dialog box on the right is displayed. Confirm that there is no problem and click the **Yes** Button.

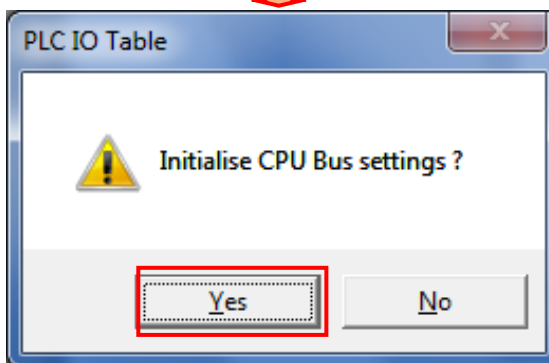

- 4 The Transfer from PLC Dialog Box is displayed. Select the *I/O Table* Check Box and the *SIO Unit Parameters* Check Box, and click the **Transfer** Button.

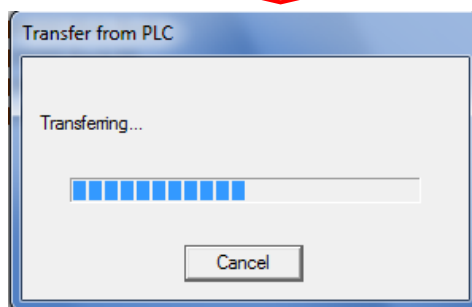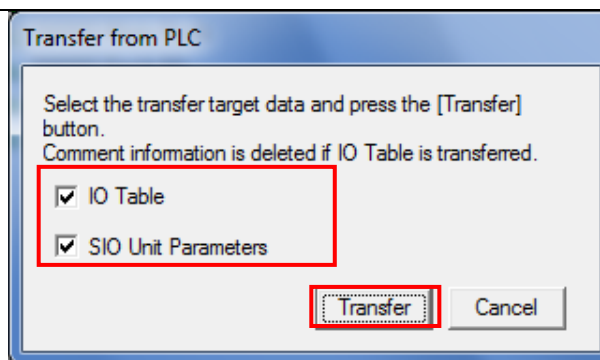


When the transfer is completed, the Transfer Results Dialog Box is displayed.

Confirm that the transfer was normally executed by referring to the message in the dialog box.

When the I/O table is created normally, the dialog box displays as follows:

Transfer Success: 1 Unit

Transfer Unsuccessful: 0 Unit


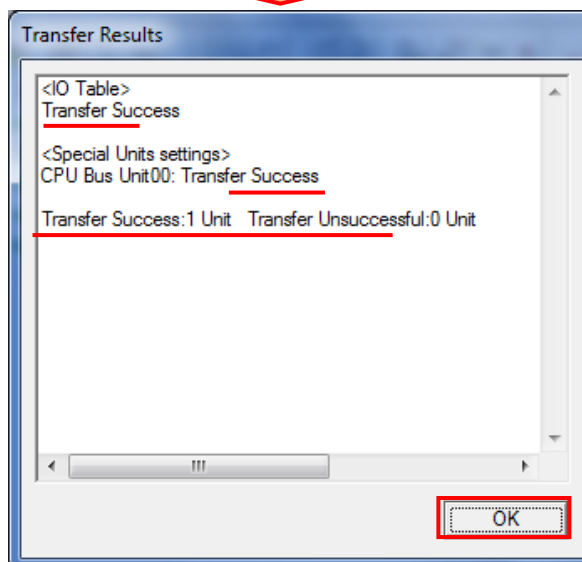


Click the **OK** Button.

5 On the PLC IO Table Window, click + to the left of Built-in Port/Inner Board to display CJ2M-EIP21.

* The right figure displays the CPU Unit (built-in EtherNet/IP port) specified in 5.2. *Device Configuration*. When you use an applicable EtherNet/IP Unit not specified in 5.2. *Device Configuration*, the display position and name are different from this figure.

Right-click **CJ2M-EIP21** and select **Unit Setup**.

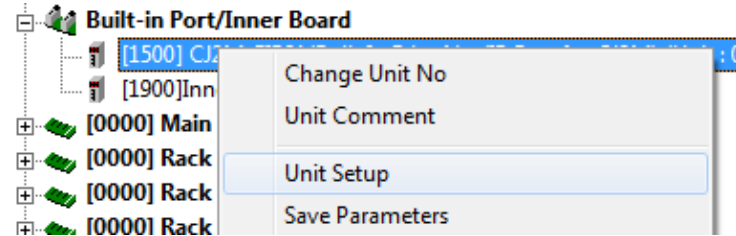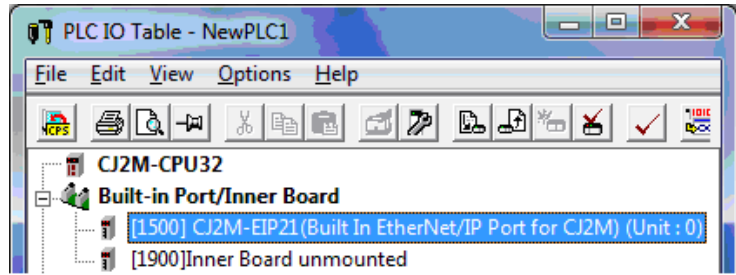


6 The Edit Parameters Dialog Box is displayed. Select the **TCP/IP** Tab.




Select the *Use the following address* Check Box in the *IP Address* Field, and make the following settings.

- IP Address: 192.168.250.1
- Subnet Mask: 255.255.255.0

Click the **Transfer [PC to Unit]** Button.

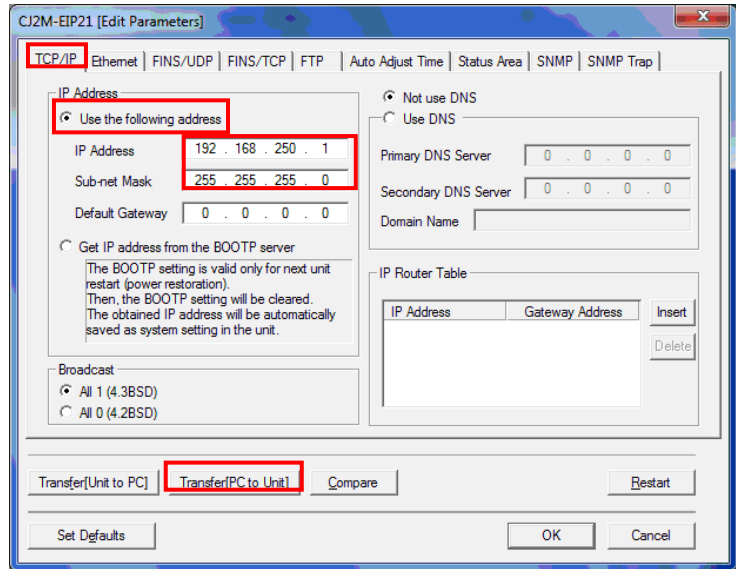


7 The dialog box on the right is displayed. Confirm that there is no problem and click the **Yes** Button.

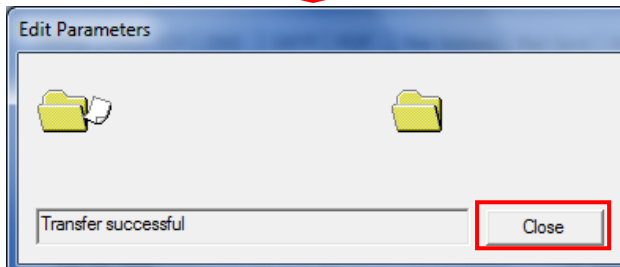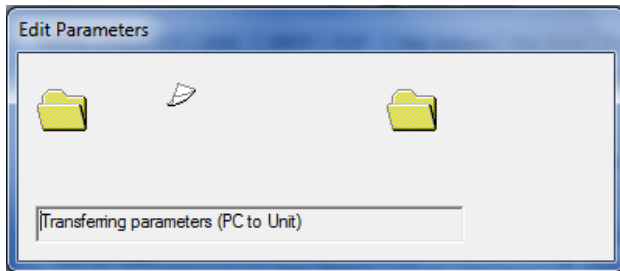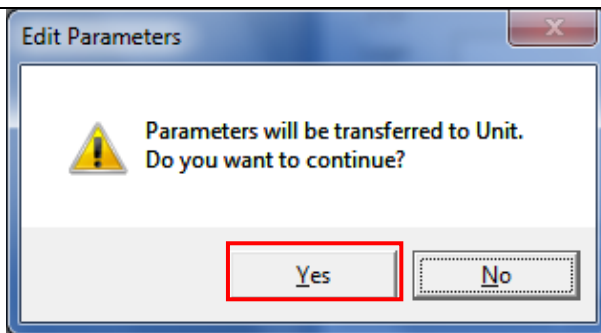


Confirm that parameters were normally transferred to the Unit, and click the **Close** Button.


8 A dialog box on the right is displayed. Check the contents and click the **Yes** Button.

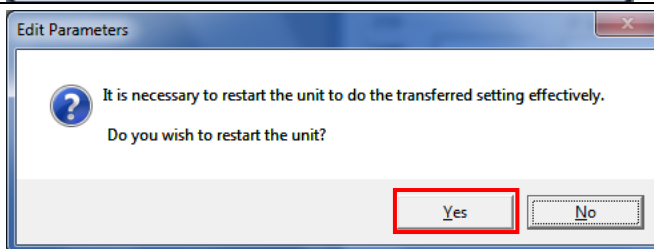


When the Unit is restarted, the dialog box on the right is displayed. Check the contents and click the **OK** Button.

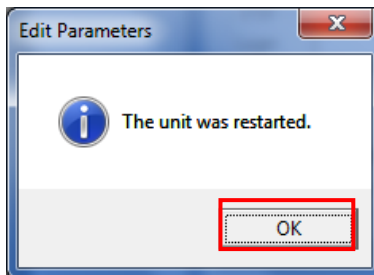


- 9 To confirm that the IP address was correctly changed, click the **Compare** Button.

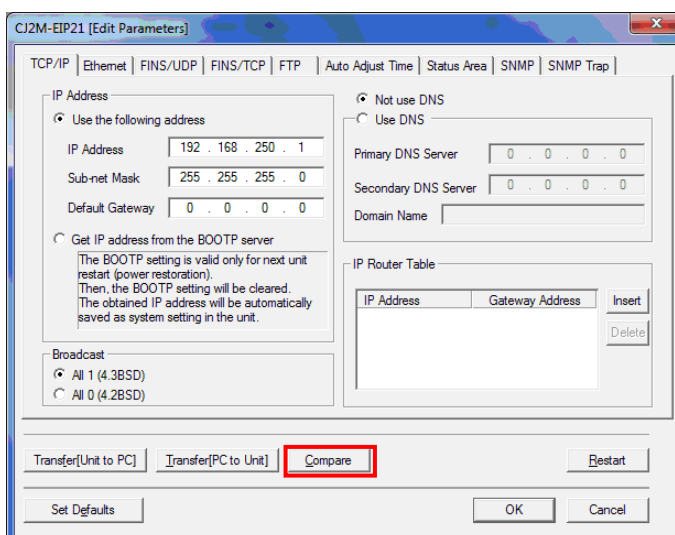

- 10 After confirming that parameters match, click the **Close** Button.

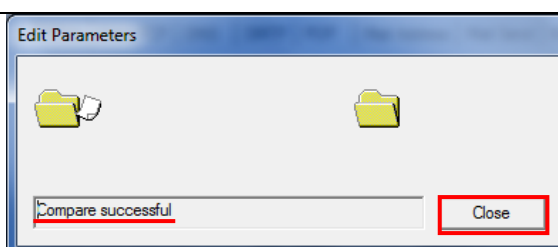

- 11 Click the **OK** Button on the Edit Parameters Dialog Box.

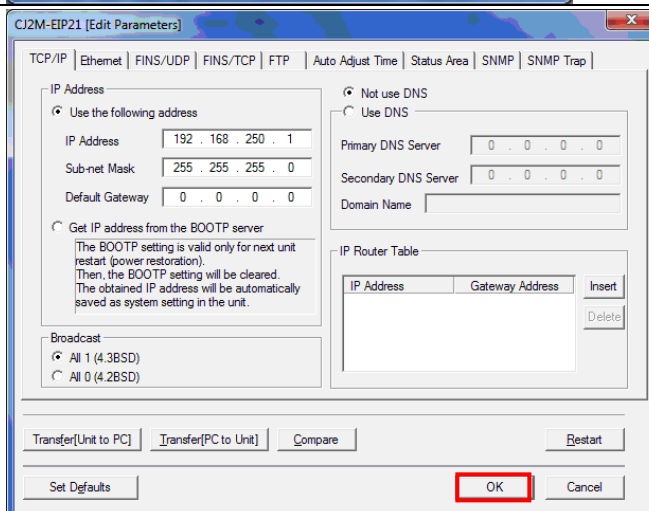

7.4. Setting Up the Network

Set the tag data links for the EtherNet/IP.

7.4.1. Starting the Network Configurator and Uploading the Configuration


Start the Network Configurator and upload the network configuration.




Precautions for Correct Use

Please confirm that the LAN cable is connected before performing the following procedure. When it is not connected, turn OFF the power supply to each device and then connect the LAN cable.


- 1 Right-click **CJ2M-EIP21** on the PLC IO Table Window, and select **Start Special Application - Start with Settings Inherited**.





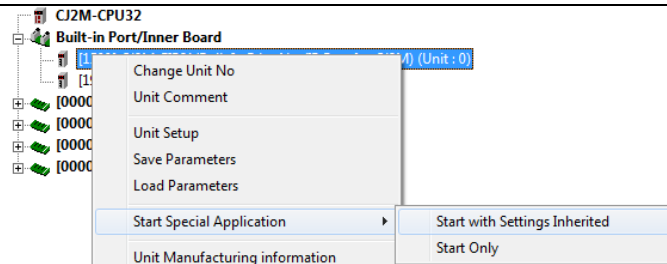


The Select Special Application Dialog Box is displayed. Select **Network Configurator** and click the **OK** Button.

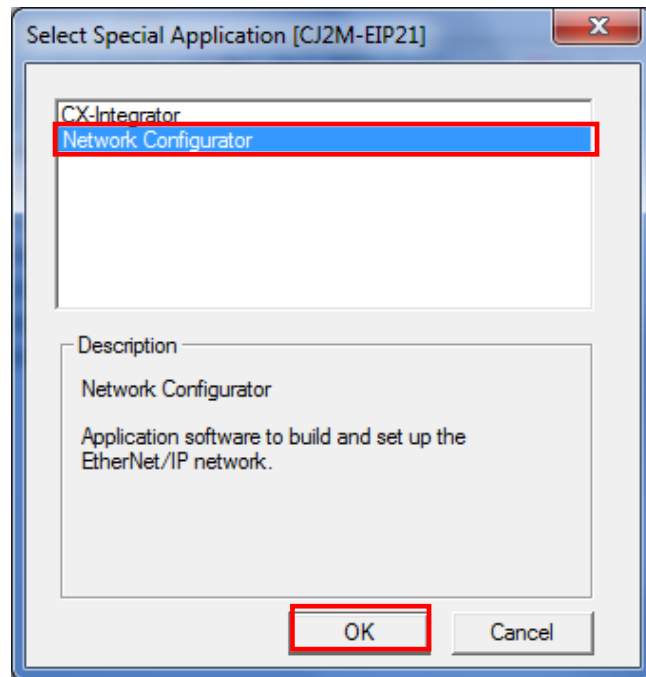

- 2 Network Configurator is started.

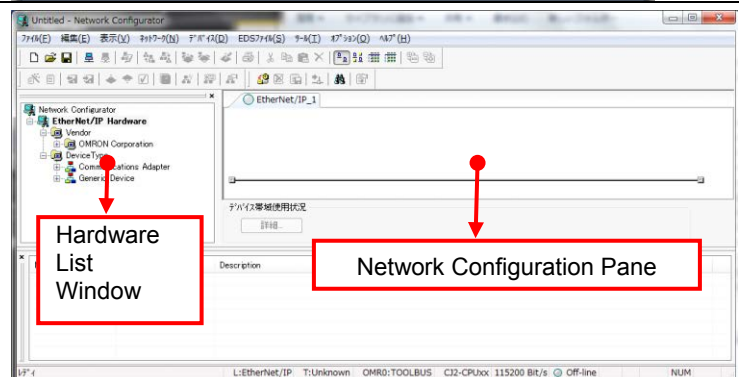
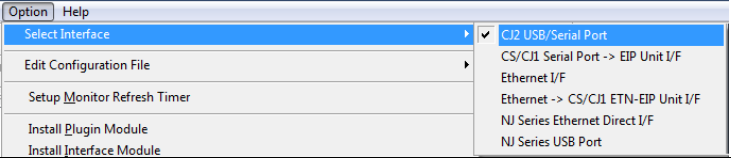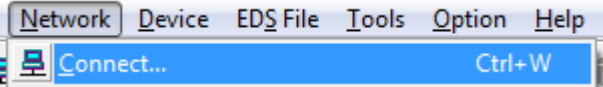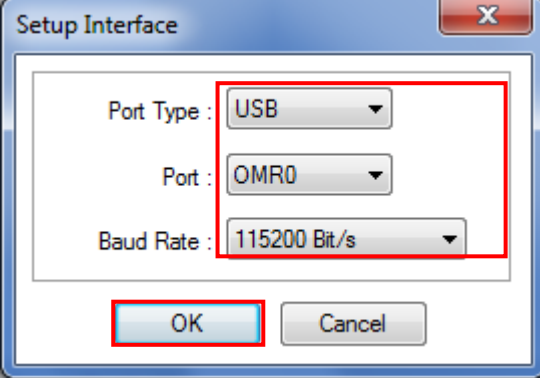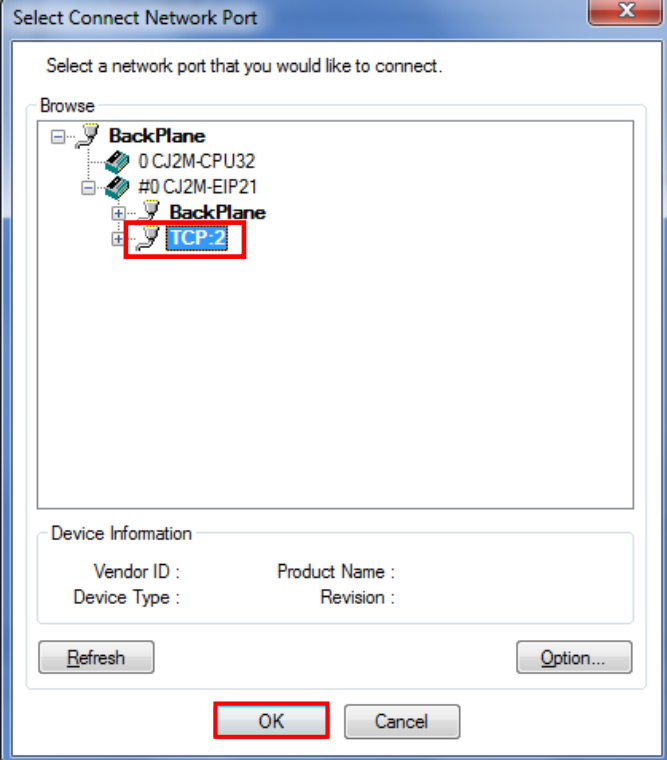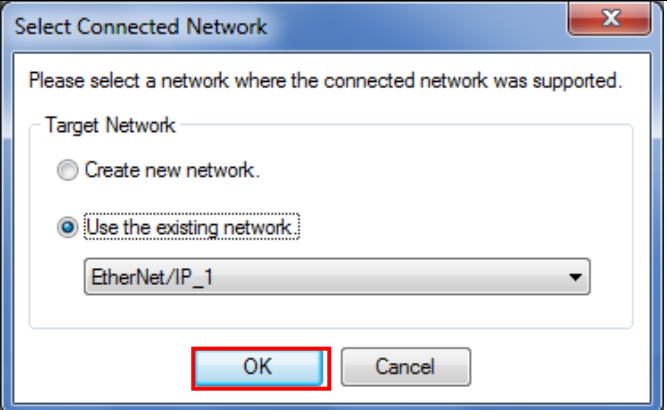
<p>3 Select Select Interface - CJ2 USB/Serial Port from the Option Menu.</p>	
<p>4 Select Connect from the Network Menu.</p>	
<p>5 The Setup Interface Dialog Box is displayed. Confirm that the following settings are made.</p> <ul style="list-style-type: none"> • Port Type: USB • Port: OMR0 • Baud Rate: 115200 Bit/s <p>Click the OK Button.</p>	
<p>6 The Select Connect Network Port Dialog Box is displayed. Select Back Plane - CJ2M-EIP21 - TCP:2, and click the OK Button.</p>	
<p>7 The Select Connected Network Dialog Box is displayed. Click the OK Button.</p>	







Additional Information


If an online connection cannot be made to the PLC, check the cable connection.

Or, return to step 1, check the settings and repeat each step.

For details, refer to 6.2.9 *Connecting the Network Configurator* in *Section 6 Tag Data Link Functions of the EtherNet/IP™ Unit Operation Manual* (Cat. No. W465).
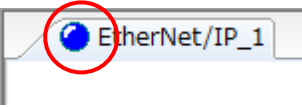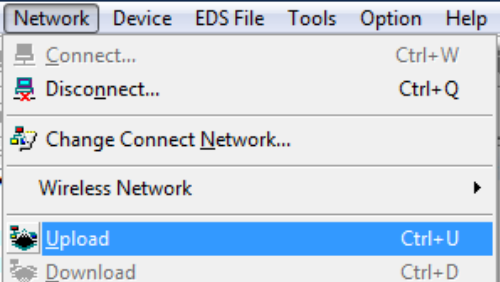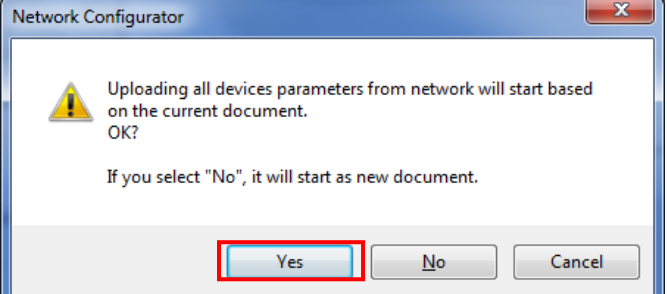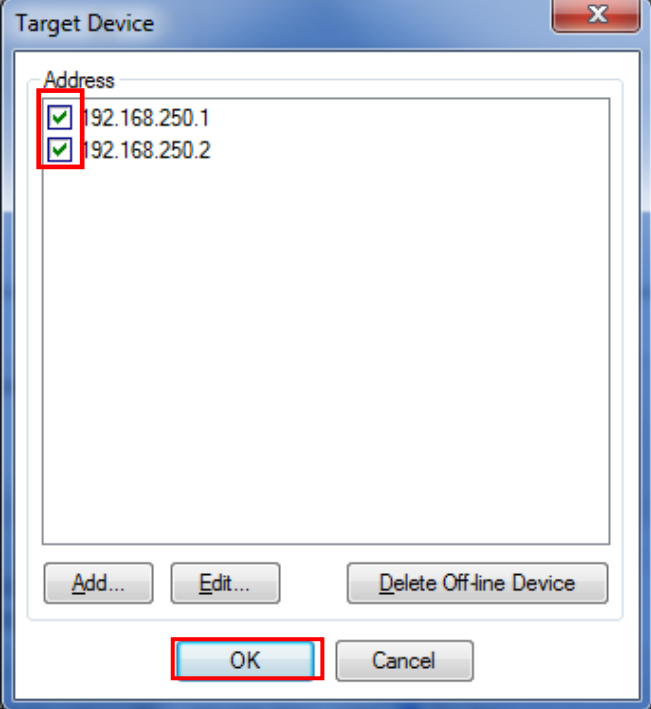
<p>8 When an online connection is established normally, the color of the icon on the figure changes to blue.</p>	
<p>9 Select Upload from the Network Menu to upload the device information on the network.</p>	
<p>10 The dialog box on the right is displayed. Confirm that there is no problem and click the Yes Button.</p>	
<p>11 The Target Device Dialog Box is displayed. Select the 192.168.250.1 Check Box and the 192.168.250.2 Check Box, and click the OK Button.</p> <p>* If 192.168.250.1 and 192.168.250.2 are not displayed on the dialog box, click the Add Button to add the address.</p> <p>* The displayed addresses depend on the status of the Network Configurator.</p>	

- 12 The device parameters are uploaded. When uploading is completed, the dialog box on the right is displayed. Check the contents and click the **OK** Button.

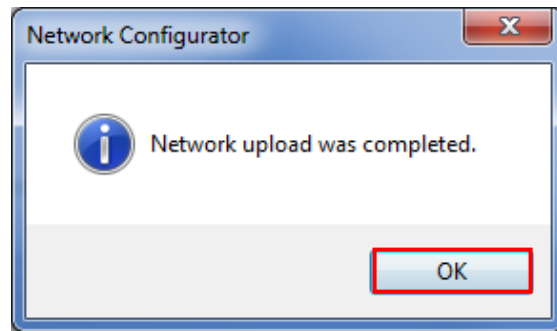


- 13 After uploading is completed, confirm that the IP address of each node is updated on the Network Configuration Pane as follows:

IP address of node 1:

192.168.250.1

IP address of node 2




192.168.250.2

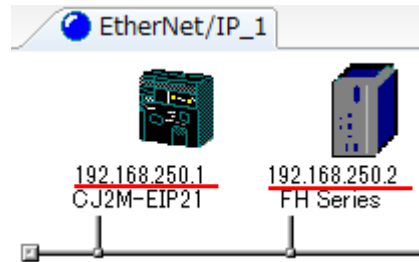


7.4.2. Setting Tags

Register the tags of the send area and receive area.

This section explains the receive settings and send settings of the target node in order.

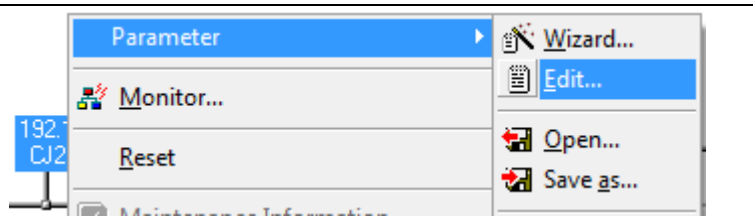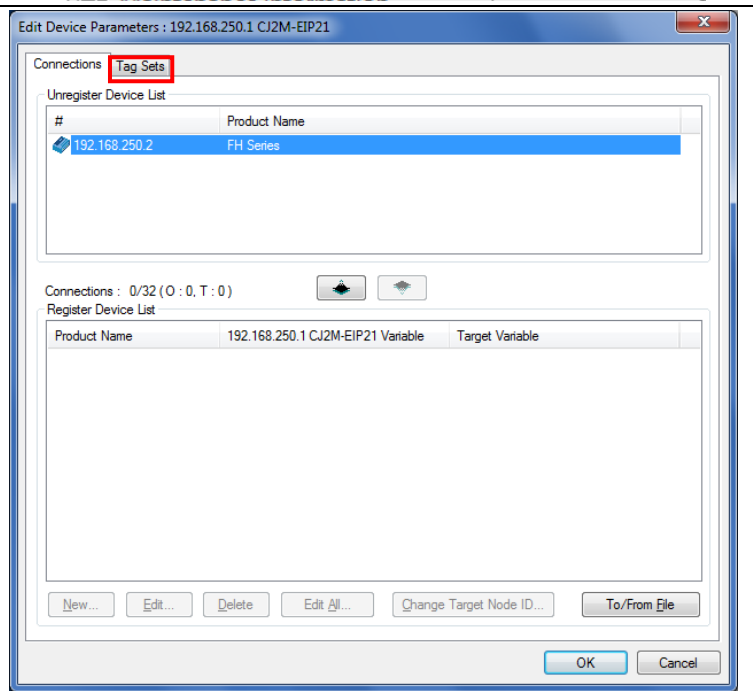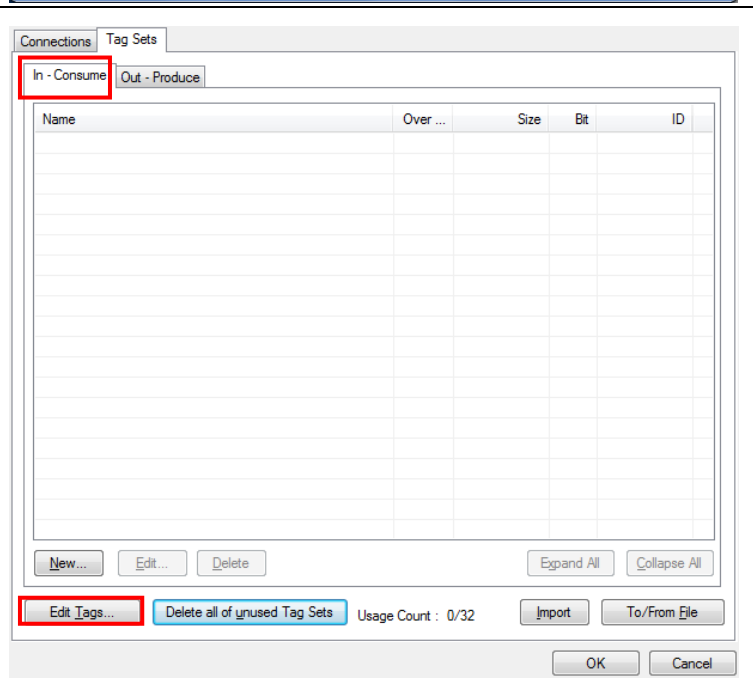
<p>1 On the Network Configuration Pane of the Network Configurator, right-click the node 1 device and select Parameter - Edit.</p>	
<p>2 The Edit Device Parameters Dialog Box is displayed. Select the Tag Sets Tab.</p>	
<p>3 The data on the Tag Sets Tab is displayed. Select the In-Consume Tab and click the Edit Tags Button.</p>	

- 4 The Edit Tags Dialog Box is displayed. Select the **In - Consume** Tab and click the **New** Button.
Here, register an area where node 1 receives data from node 2.

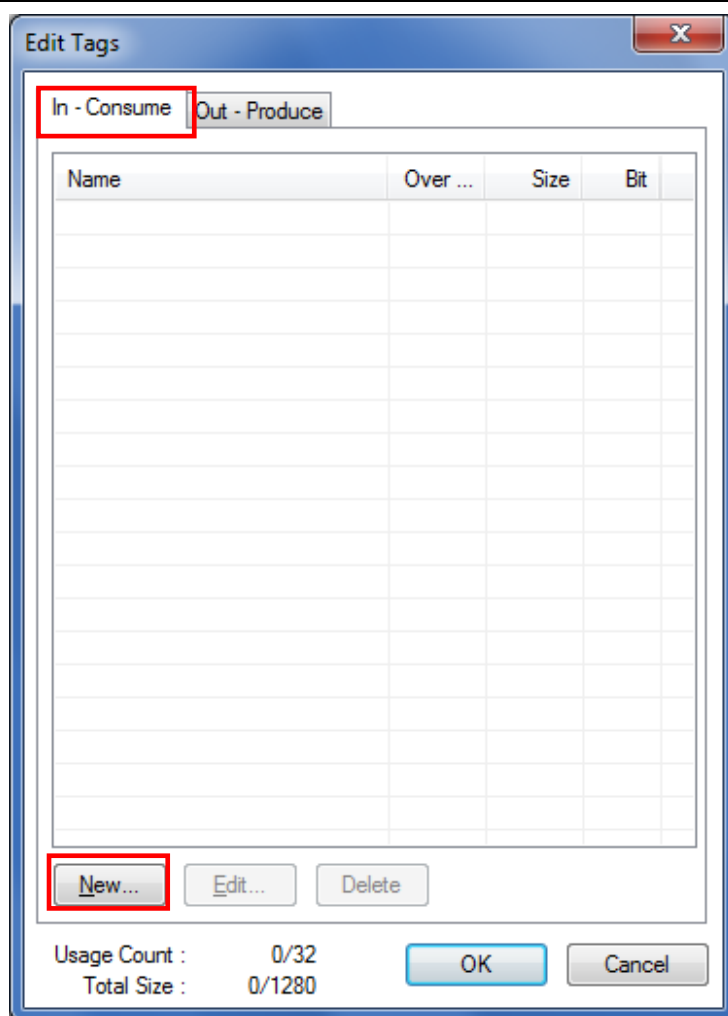

- 5 The Edit Tag Dialog Box is displayed.
Enter the following values in the parameters.
- Name: *D10100* (Start address of the input data to node 1)
 - Size: *48* (Byte)


After entering, click the **Register** Button.

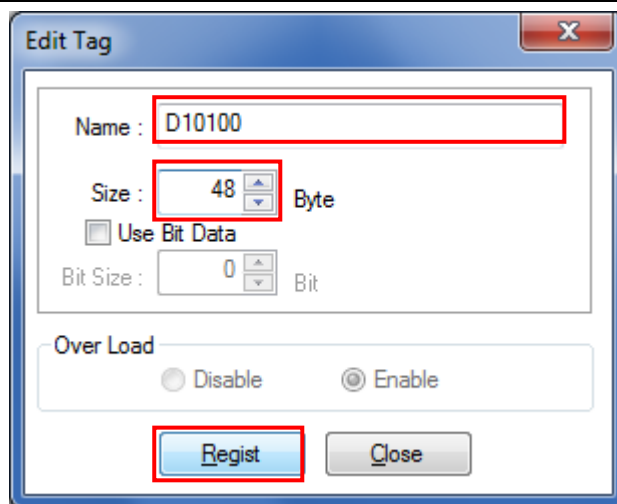

- 6 The Edit Tag Dialog Box is displayed again. Click the **Close** Button.




- 7 Select the **Out - Produce** Tab and click the **New** Button.
Here, register the data sent from node 1 to node 2.

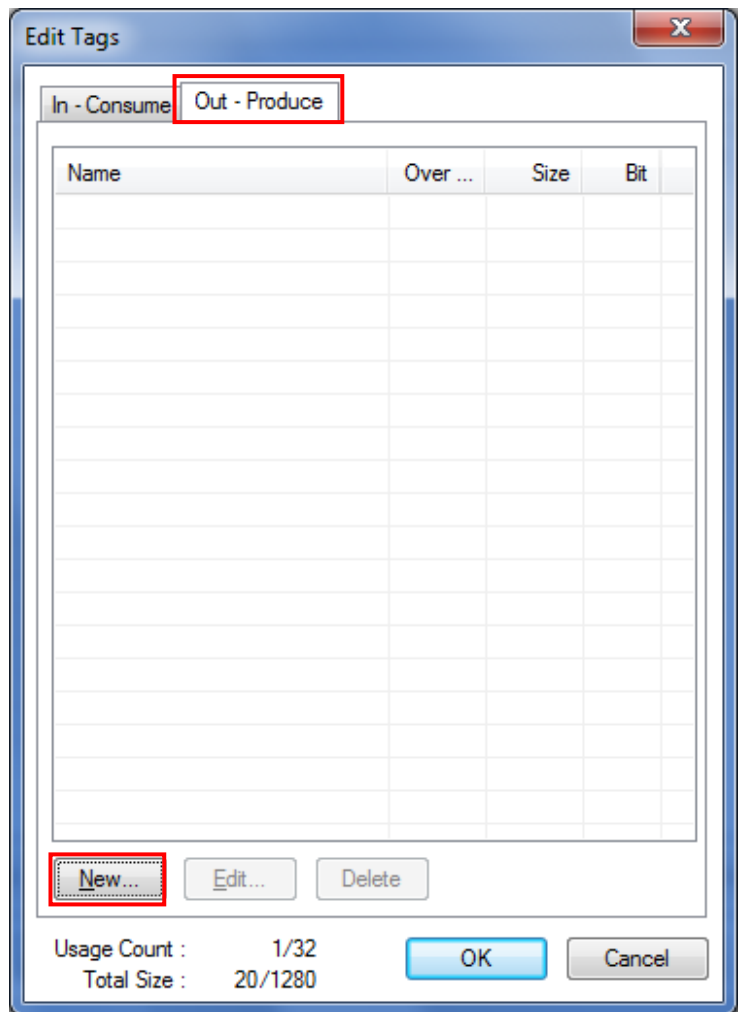

- 8 The Edit Tag Dialog Box is displayed.
Enter the following values in the parameters.
- Name: *D10000* (Start address of the output data from node 1)
 - Size: 20 (Byte)


After entering, click the **Register** Button.

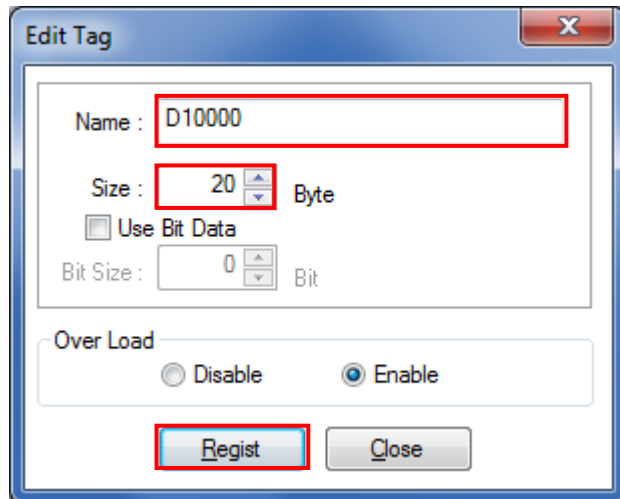


- 9 The Edit Tag Dialog Box is displayed again. Click the **Close** Button.




10 When you finish the registration, click the **OK** Button on the Edit Tag Dialog Box.

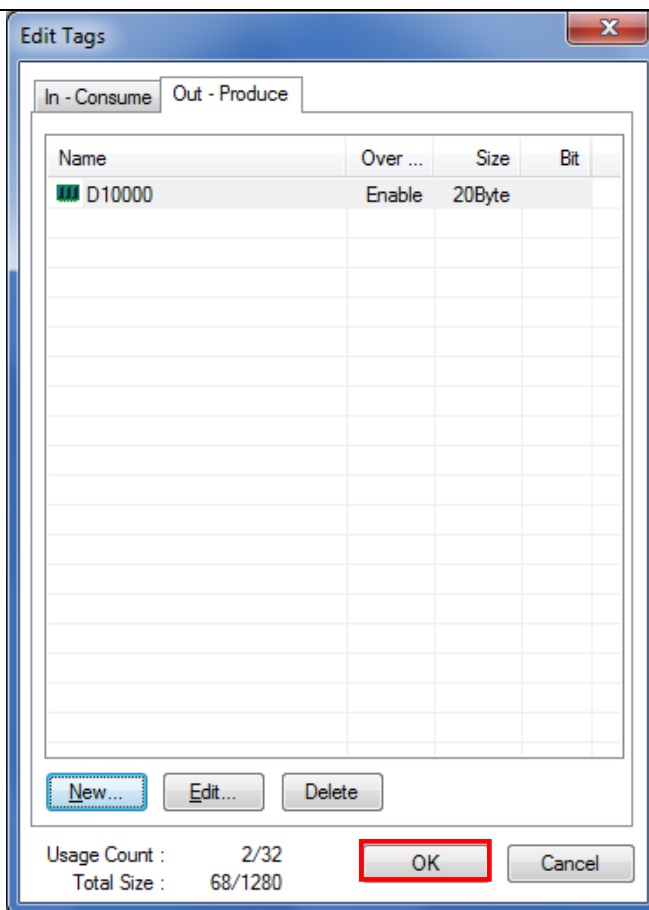

11 The right dialog box is displayed. Confirm that there is no problem and click the **Yes** Button.

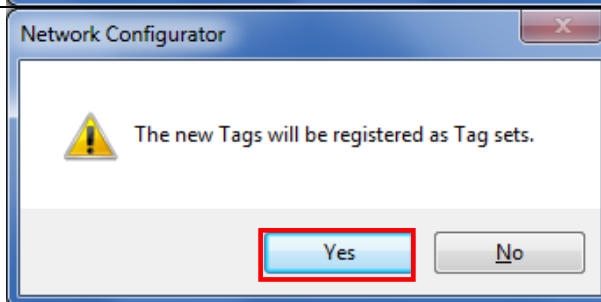


12 The Edit Device Parameters Dialog Box is displayed again. Select the **Connections** Tab.

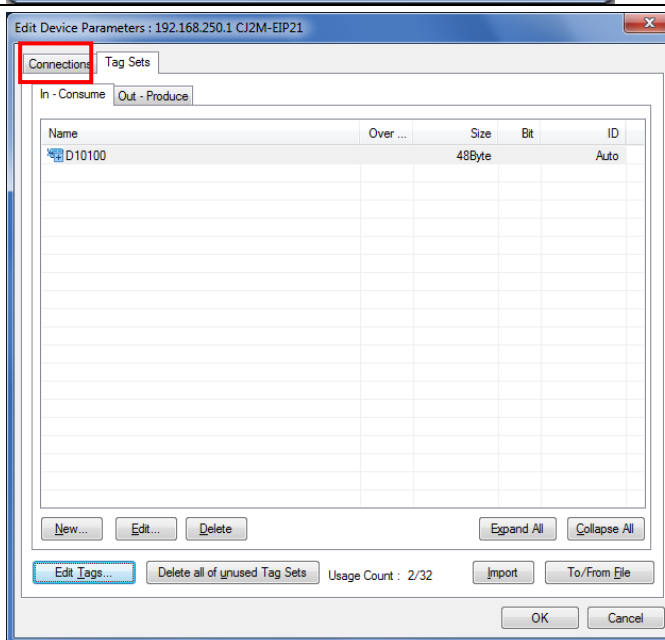


7.4.3. Setting the Connection

Associate the tags of the target device (that receives the open request) with the tags of the originator (that requests opening).


1 Select 192.168.250.2 in the *Unregister Device List* Field. Click the **Down Arrow** Button that is shown in the dialog box.

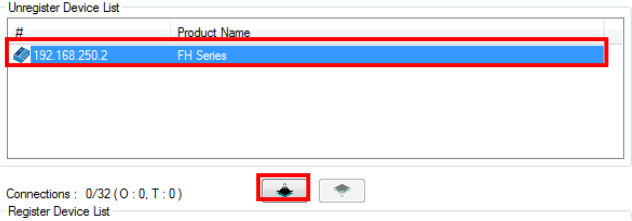

2 192.168.250.2 is registered in the *Register Device List* Field. Select 192.168.250.2 and click the **New** Button.

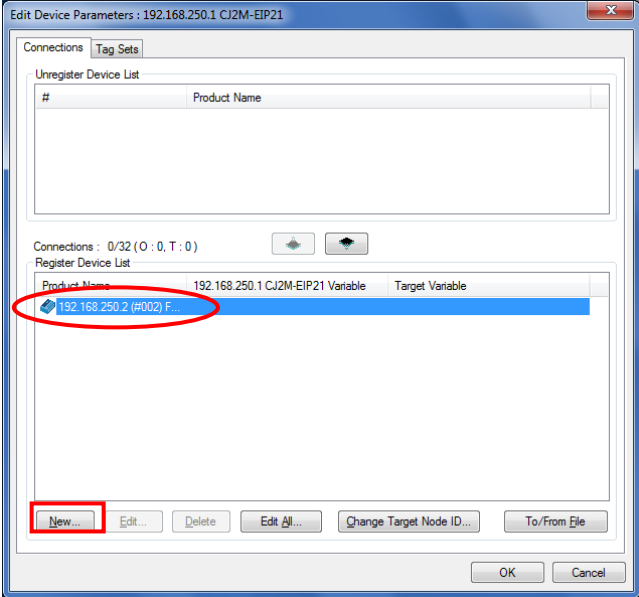

3 The Edit Connection Dialog Box is displayed. Select **Consume Data From/Produce Data To** from the Connection I/O Type pull-down list. Set the values listed in the following table to the *Originator Device* Field and the *Target Device* Field.

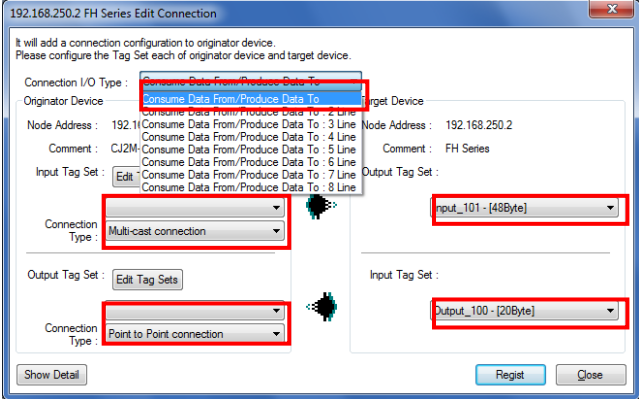

■ Settings of connection

Connection allocation		Setting value
Connection I/O type		Consume Data From/Produce Data To
Originator device	Input Tag Set	D10100-[48 Byte]
	Connection Type	Multi-cast connection
	Output Tag Set	D10000-[20 Byte]
	Connection Type	Point to Point connection
Target Device	Output Tag Set	Input_100-[48 Byte]
	Input Tag Set	Output_101-[20 Byte]

- 4 Confirm that the settings are correct and click the **Show Detail** Button.

192.168.250.2 FH Series Edit Connection

It will add a connection configuration to originator device.
Please configure the Tag Set each of originator device and target device.

Connection I/O Type : Consume Data From/Produce Data To

Originator Device

Node Address : 192.168.250.1
Comment : CJ2M-EIP21

Input Tag Set : Edit Tag Sets

Connection : D10100 - [48Byte]
Type : Multi-cast connection

Output Tag Set : Edit Tag Sets

Connection : D10000 - [20Byte]
Type : Point to Point connection

Target Device

Node Address : 192.168.250.2
Comment : FH Series

Output Tag Set : Input_101 - [48Byte]

Input Tag Set : Output_100 - [20Byte]

Show Detail

Register Close

- 5 Confirm that the Packet Interval (RPI) is set to 4 ms or longer and click the **Register** Button.

192.168.250.2 FH Series Edit Connection

It will add a connection configuration to originator device.
Please configure the Tag Set each of originator device and target device.

Connection I/O Type : Consume Data From/Produce Data To

Originator Device

Node Address : 192.168.250.1
Comment : CJ2M-EIP21

Input Tag Set : Edit Tag Sets

Connection : D10100 - [48Byte]
Type : Multi-cast connection

Output Tag Set : Edit Tag Sets

Connection : D10000 - [20Byte]
Type : Point to Point connection

Target Device

Node Address : 192.168.250.2
Comment : FH Series

Output Tag Set : Input_101 - [48Byte]

Input Tag Set : Output_100 - [20Byte]

Hide Detail

Detail Parameters

Packet Interval (RPI) : 50.0 ms (1.0 - 10000.0 ms)

Timeout Value : Packet Interval (RPI) x 4

Connection Name : (Possible to omit)

Connection Structure

192.168.250.1 CJ2M-EIP21 *

Register Close



Precautions for Correct Use

If the RPI with EtherNet/IP is longer than the duration of the FH Sensor Controller signal change, the signal change may not be detected.

For details on communications cycle (RPI) with EtherNet/IP for the FH Sensor Controller, refer to *Communicating with EtherNet/IP* in *Section 2 Methods for Connecting and Communicating with External Devices* of the *Vision Sensor FH/FZ5 Series Vision System User's Manual (Communications Settings)* (Cat.No. Z342).



Precautions for Correct Use

When the measurement interval is short or when the measurement processing load is high, the Sensor Controller will give priority to measurement processing over communications processing. Therefore, communications between the external device and the Sensor Controller may be temporarily interrupted or communications errors may occur.

If this happens, make the following settings:


Packet interval (RPI value) X Timeout value > Sensor Controller transaction time

For details on the timeout value for the FH Sensor Controller, refer to *Communicating with EtherNet/IP* in *Section 2 Methods for Connecting and Communicating with External Devices* of the *Vision Sensor FH/FZ5 Series Vision System User's Manual (Communications Settings)* (Cat. No. Z342).


- 6 The Edit Connection Dialog Box is displayed again. Click the **Close** Button.



- 7 The Edit Device Parameters Dialog Box is displayed again. Click the **OK** Button.




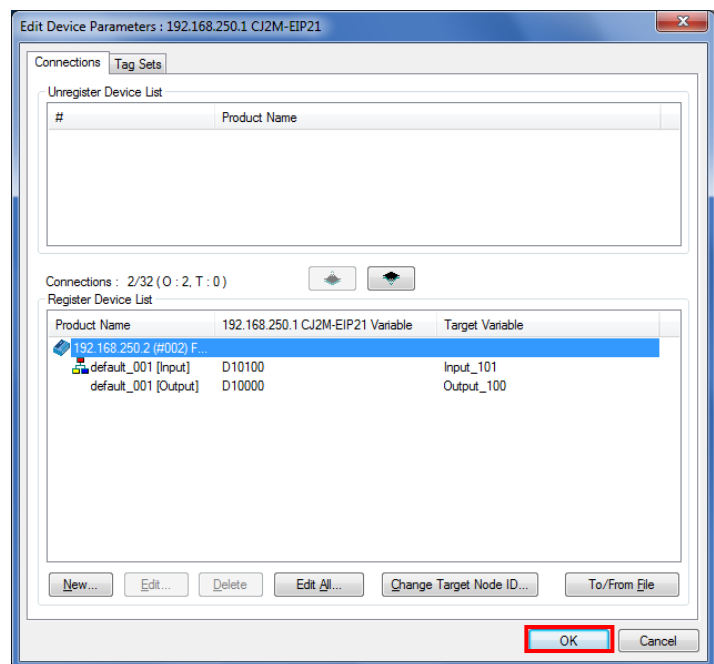


- 8 When the connection setting is completed, the registered node address is displayed under the device icon of node 2 on the Network Configuration Pane.

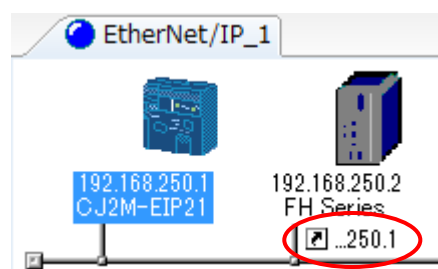

7.4.4. Transferring the Tag Data Link Parameters

Transfer the set tag data link parameters to the PLC.
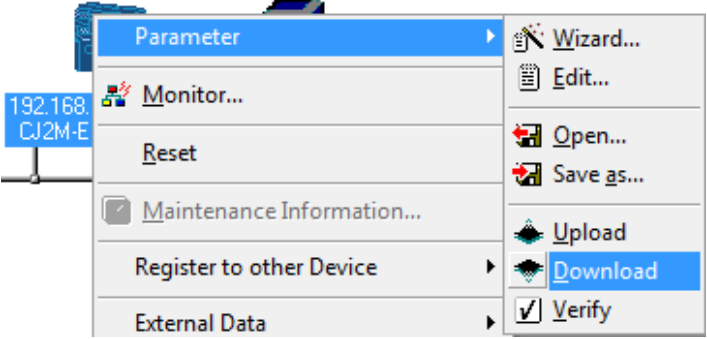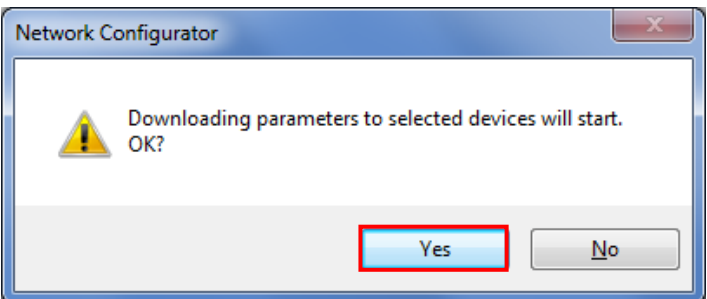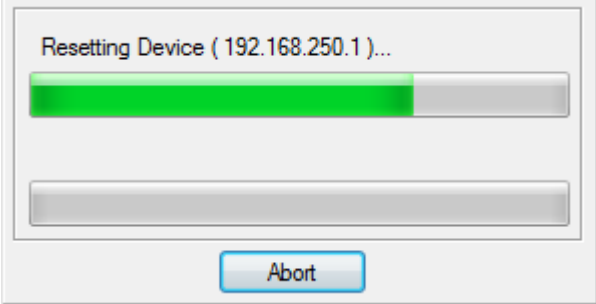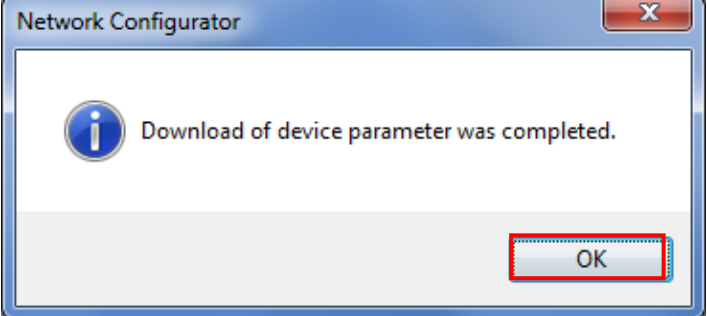
<p>1 Right-click the device icon of node 1 on the Network Configuration Pane and select Parameter - Download.</p> <p>The dialog box on the right is displayed. Confirm that there is no problem and click the Yes Button.</p>	 
<p>2 The tag data link parameters are downloaded from Network Configurator to the PLC.</p>	
<p>3 The dialog box on the right is displayed. Check the contents and click the OK Button.</p>	

7.5. Checking the EtherNet/IP Communications

Confirm that the EtherNet/IP tag data links are operated normally.

7.5.1. Checking the Connection Status

Check the connection status of EtherNet/IP.

1 Confirm that the tag data links are normally in operation by checking the LED indicators on each device.

The LED indicators on the PLC (EtherNet/IP Unit) in normal status are as follows:

- [MS]: Lit green
- [NS]: Lit green
- [COMM]: Lit yellow
- [100M] or [10M]: Lit yellow

For FH Sensor Controller (FH-1□□□/3□□□), check the status of the LED indicators for the PORT1.

The LED indicators in normal status are as follows:

- [POWER]: Lit green
- [ERROR]: Not lit
- [NET RUN]: Lit green
- [LINK/ACT]: Flashing orange (Flashing while packets are being sent and received)

* For FH Sensor Controller (FH-1□□□-□□/3□□□-□□), check the status of the LED indicators for the PORT2.


The LED indicators in normal status are as follows:

- [POWER]: Lit green
- [ERROR]: Not lit
- [NET RUN2]: Lit green
- [LINK/ACT2]: Flashing orange (Flashing while packets are being sent and received)




(EtherNet/IP Unit)

Model (FH-1□□□/3□□□) has one Ethernet port.

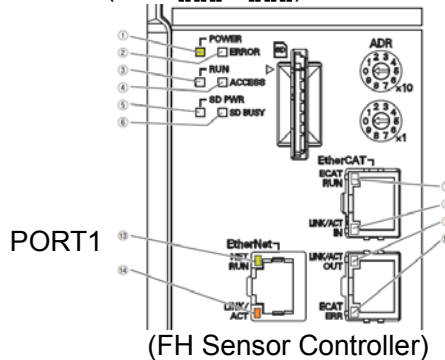


LED name	Description	Description
①	POWER LED	Lit while power is ON.
②	ERROR LED	Lit when an error has occurred.
③	RUN LED	Lit while the controller is in Measurement Mode.
④	ACCESS LED	Lit while the memory is accessed.
⑤	SD POWER LED	Lit while power is supplied to the SD card and the card is usable.
⑥	SD BUSY LED	Blinks while the SD memory card is accessed.
⑦	EtherCAT RUN LED	Lit while EtherCAT communications are usable.
⑧	EtherCAT LINK/ACT IN LED	Lit when connected with an EtherCAT device, and blinks while performing communications.
⑨	EtherCAT LINK/ACT OUT LED	Lit when connected with an EtherCAT device, and blinks while performing communications.
⑩	EtherCAT ERR LED	Lit when EtherCAT communications have become abnormal.
⑬	EtherNet NET RUN2 LED	Lit when Ethernet communications are usable.
⑭	EtherNet NET LINK/ACK2 LED	Lit when connected with an Ethernet device, and blinks while performing communications.

* Model (FH-1□□□-□□/3□□□-□□) has two Ethernet ports.

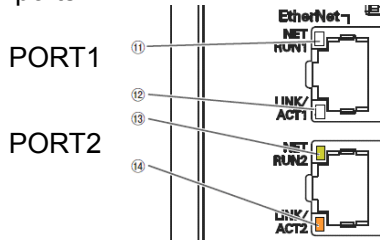

LED name	Description	Description
⑪	EtherNet NET RUN1 LED	Lit while EtherCAT communications are usable.
⑫	EtherNet NET LINK/ACK1 LED	Lit when connected with an Ethernet device, and blinks while performing communications.
⑬	EtherNet NET RUN2 LED	Lit when Ethernet communications are usable.
⑭	EtherNet NET LINK/ACK2 LED	Lit when connected with an Ethernet device, and blinks while performing communications.


- 2 Confirm that the tag data links are normally in operation by checking the status information on the Monitor Device Window of the Network Configurator.

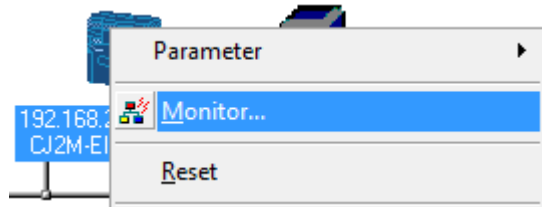


Right-click the device icon of node 1 on the Network Configuration Pane and select **Monitor**.

- 3 The dialog box on the right displays the Status 1 Tab Page of the Monitor Device Window.

When the same items are selected as shown on the right, the data links are normally in operation.

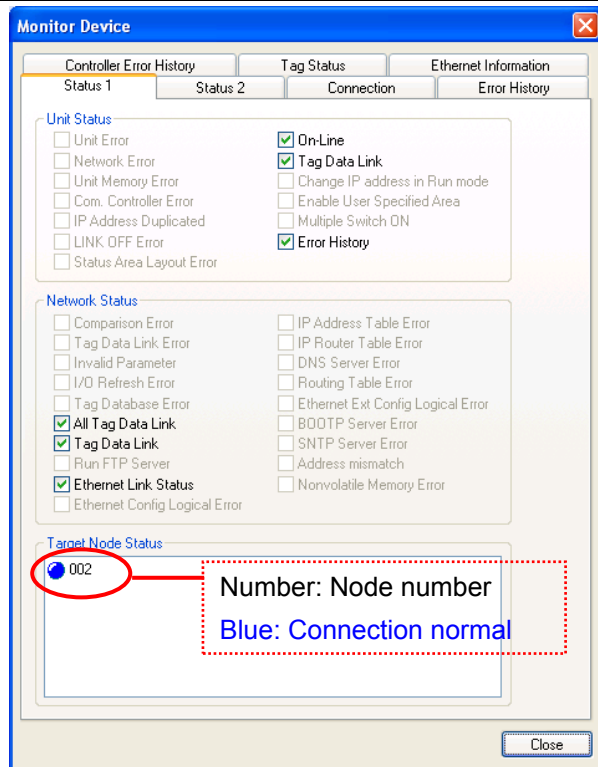

- 4 Select Disconnect from the Network Menu to go offline. The color of the icon on the figure changes from blue.





Select **Exit** from the File Menu to exit the Network Configurator.

7.5.2. Checking the Data that are Sent and Received


Confirm that the correct data are sent and received.

Caution


Confirm safety sufficiently before monitoring power flow and present value status in the Ladder Section window or when monitoring present values in the Watch window. If force-set/reset or set/reset operations are inadvertently performed by pressing short-cut keys, the devices connected to Output Units may malfunction, regardless of the operating mode of the CPU Unit.
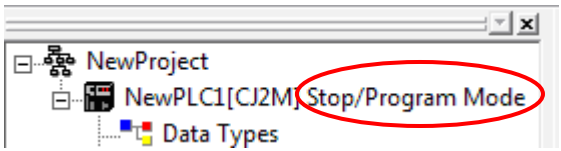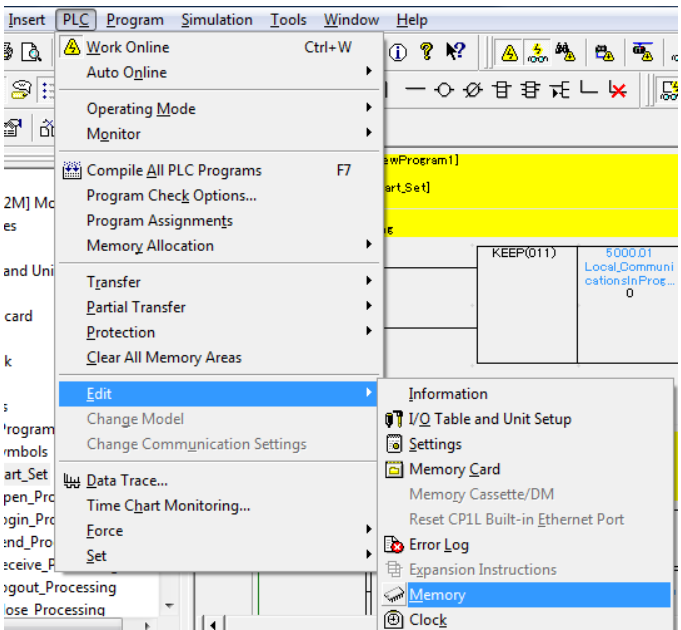
<p>1</p>	<p>Confirm that the PLC is in Program Mode.</p> <p>* If the PLC is not in Program Mode, change to Program Mode by referring to step 1 of 7.3.3. <i>Setting the IP Address.</i></p>	
<p>2</p>	<p>Select Edit - Memory from the PLC Menu.</p>	


- 3 Double-click **D** from the list in the PLC Memory Window that is displayed.

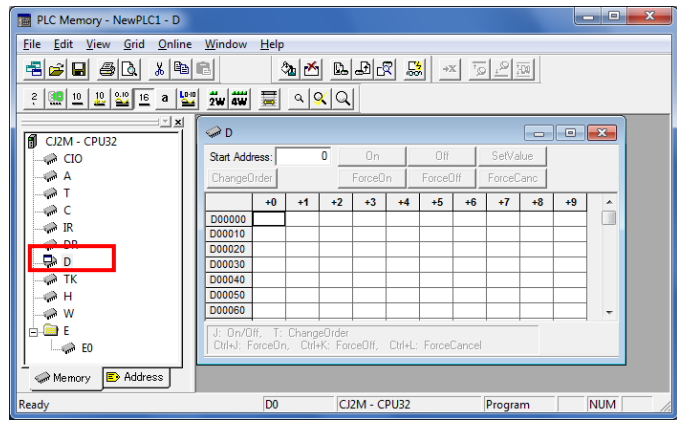


- 4 Select **Display - Binary** from the View Menu.

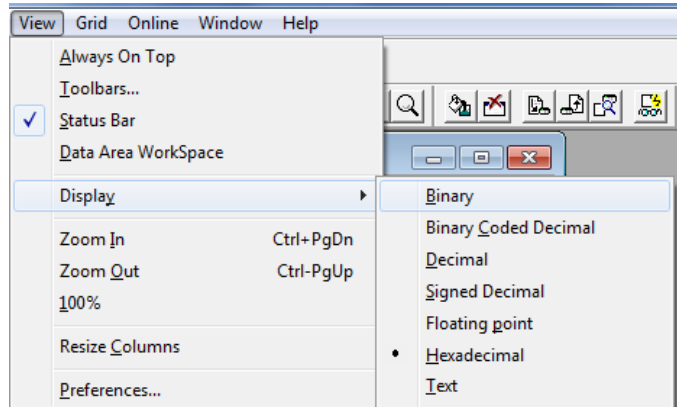

- 5 Select **Monitor** from the Online Menu.

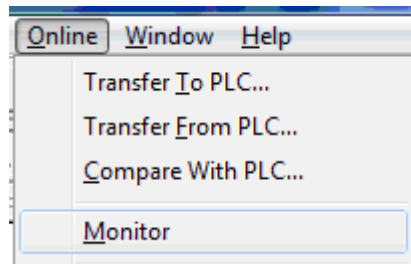

- 6 The Monitor Memory Areas Dialog Box is displayed. Select the **D** Check Box and click the **Monitor** Button.

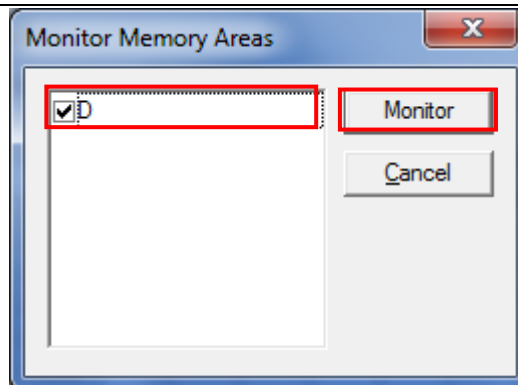

7 Select bits 12 and 4 of D10002 and bit 4 of D10003, and then click the **On** Button. (After turning them ON, the values change to 1.)
Then, turn ON bit 0 of D10000.


* D10002 and D10003 are an area for a command code and contain 00101010(Hex) (Measurement command).
Bit 0 of D10000 is a command execution (EXE) flag.

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Hex
D10000	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0001
D10001	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0000
D10002	0	0	0	1	0	0	0	0	0	0	0	1	0	0	0	0	1010
D10003	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0010
D10004	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0000
D10005	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0000

8 Enter 10100 in the *Start Address* Field on the D Window.
Confirm that the start address was changed to D10100.

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Hex
D10100	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0002
D10101	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0000
D10102	0	0	0	1	0	0	0	0	0	0	0	1	0	0	0	0	1010
D10103	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0010
D10104	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0000
D10105	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0000

9 After the measurement is completed, OK is displayed on the dialog box.

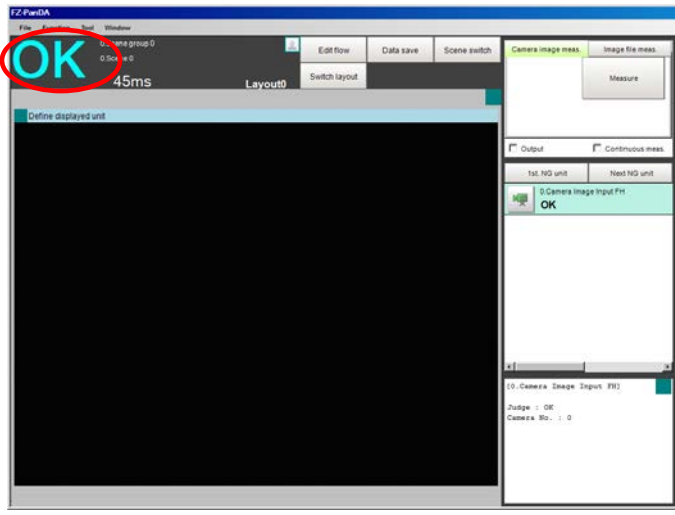

10 Confirm that values of D10102 to D10105 are set as shown on the right.

D10102 and D10103 contain the command code that you set.
D10104 and D10105 contain the command execution result (0: OK).

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Hex
D10100	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0002
D10101	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0000
D10102	0	0	0	1	0	0	0	0	0	0	0	1	0	0	0	0	1010
D10103	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0010
D10104	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0000
D10105	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0000

8. Initialization Method

This document explains the setting procedure from the factory default setting.

Some settings may not be applicable as described in this document unless you use the devices with the factory default setting.


8.1. Initializing the PLC

To initialize the settings of the PLC, it is necessary to initialize the CPU Unit and EtherNet/IP Unit. Change the PLC to PROGRAM mode before the initialization.


8.1.1. EtherNet/IP Unit

(1) Select **Edit - I/O Table and Unit Setup** from the PLC Menu of the CX-Programmer.

Right-click the EtherNet/IP Unit on the PLC IO Table Window and select **Unit Setup** from the menu.

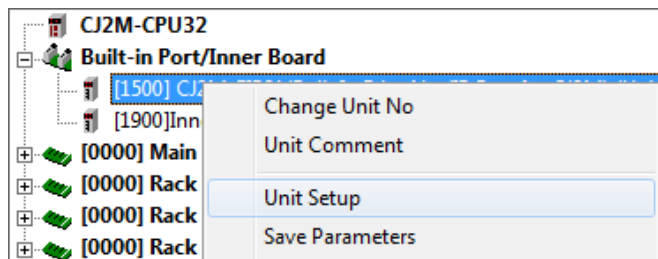


(2) Click the **Restart** Button on the Edit Parameters Dialog Box.

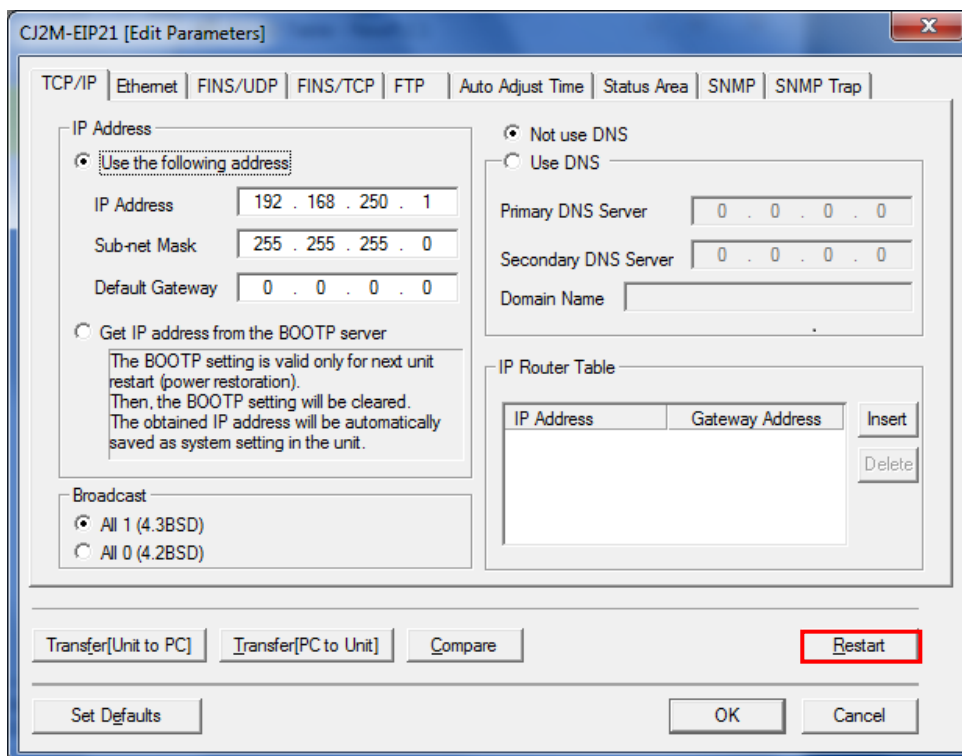


(3) A confirmation dialog box on the right is displayed. Confirm that there is no problem and

click the **Yes** Button. On the Restart Unit Dialog Box, select the *Return to out-of-box configuration, and then emulate cycling power* Option, and click the **OK** Button. A complete dialog box is displayed. Check the contents and click the **OK** Button.

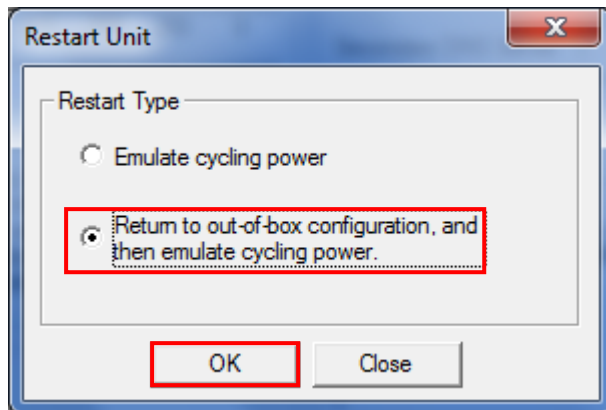

8.1.2. CPU Unit

To initialize the settings of the CPU Unit, select **Clear All Memory Areas** from the PLC Menu of the CX-Programmer. On the Confirm All Memory Area Clear Dialog Box, select the *Initialize* Option and click the **OK** Button.

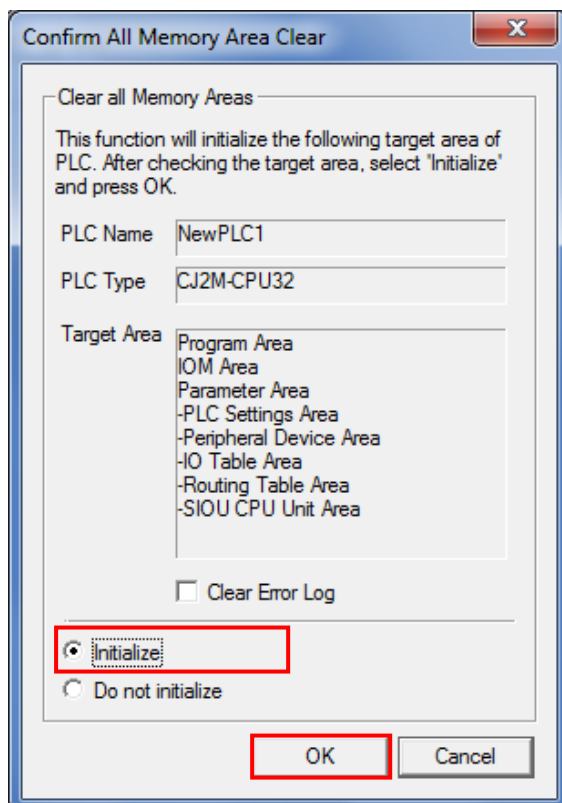

8.2. Initializing the FH Sensor Controller

For how to initialize the FH Sensor Controller, refer to *Initializing the Controller* in *Section 1 Before Operation of the Vision Sensor FH/FZ5 Series Vision System User's Manual* (Cat.No.Z340).

9. Revision History

Revision code	Date of revision	Revision reason and revision page
01	Dec. 12, 2013	First edition

OMRON Corporation Industrial Automation Company

Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters

OMRON EUROPE B.V.

Wegalaan 67-69-2132 JD Hoofddorp
The Netherlands

Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ELECTRONICS LLC

One Commerce Drive Schaumburg,
IL 60173-5302 U.S.A.

Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON ASIA PACIFIC PTE. LTD.

No. 438A Alexandra Road # 05-05/08 (Lobby 2),
Alexandra Technopark,
Singapore 119967

Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower,
200 Yin Cheng Zhong Road,
PuDong New Area, Shanghai, 200120, China

Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2013 All Rights Reserved.
In the interest of product improvement,
specifications are subject to change without notice.

Cat. No. P575-E1-01

1213(-)



Automatización Eléctrica
Especialistas en Automatización

Below is a list of articles with direct links to our shop Electric Automation Network where you can see:

- Quote per purchase volume in real time.
- Online documentation and datasheets of all products.
- Estimated delivery time enquiry in real time.
- Logistics systems for the shipment of materials almost anywhere in the world.
- Purchasing management, order record and tracking of shipments.

To access the product, [click on the green button.](#)

Product	Code	Reference	Product link
	118309	K2L	Buy on EAN