



Automatización Eléctrica
Especialistas en Automatización

At the end of this document you will find links to products related to this catalog. You can go directly to our shop by clicking HERE. [HERE](#)

R88D-KN□□□-ECT-L, R88D-KT□□□-L

Accurax G5 linear drive

Accurate motion control in a compact size servo drive family. EtherCAT and safety built-in.

- Ironless and iron-core motor types
- EtherCAT and analogue/pulse servo drive models
- Safety conforming ISO13849-1 PL-d
- High-response frequency of 2 kHz
- A/B line-driver and SinCos encoder type options
- Real time auto-tuning
- Advanced tuning algorithms (Anti-vibration function, torque feedforward, disturbance observer)


Ratings

- Iron-core motors – 48 to 760 N (2,000 N peak force)
- Ironless motors – 29 to 423 N (2,100 N peak force)



accurax

System configuration

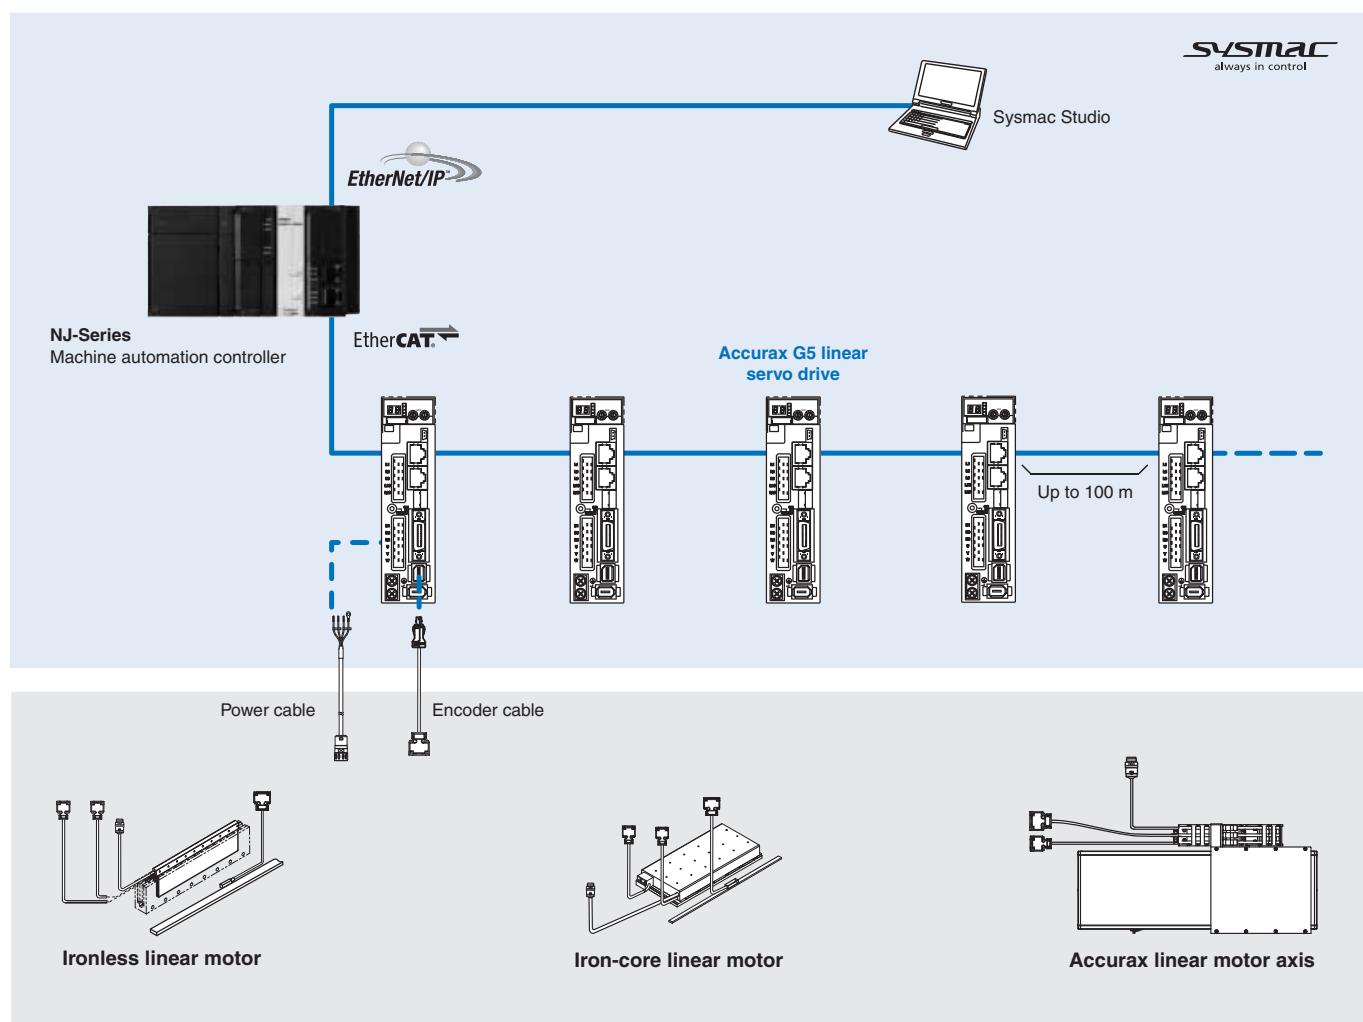

Servo drive specifications

Single-phase, 230 V

Linear servo drive type		R88D-K□	02H□□□-L	04H□□□-L	08H□□□-L	10H□□□-L	15H□□□-L					
Applicable linear servo motor	R88L-EC-	FW-0303	FW-0306	FW-0606	FW-0609	FW-0612						
		GW-0303	GW-0506	GW-0306	GW-0309	GW-1112						
		-	GW-0703	GW-0509	GW-0709	-						
		-	-	GW-0706	-	-						
Basic specifications	Power	W	200	400	750	1,000	1,500					
	Continuous output current	Arms	1.60	1.5	2.4	4.1	5.7					
	Max. output current	Arms	4.89	4.5	7.2	12.3	17					
	Input power	Main circuit	Single-phase/3-phase, 200 to 240 VAC + 10% to -15% (50/60 Hz)									
	Supply	Control circuit	Single-phase, 200 to 240 VAC + 10% to -15% (50/60 Hz)									
	Control method	IGBT-driven PWM method, sinusoidal drive										
	Feedback	Serial encoder (incremental/absolute value)										
	Usage/storage temperature	0 to 55°C/-20 to 65°C										
	Usage/storage humidity	90% RH or less (non-condensing)										
	Altitude	1,000 m or less above sea level										
	Vibration/shock resistance	(max.)	5.88 m/s ² 10 to 60 Hz (Continuous operation at resonance point is not allowed)/19.6 m/s ²									
	Configuration	Base mounted										
	Approx. weight	Kg	0.8	1.1	1.6	1.8						

Three-phase, 400 V

Linear servo drive type		R88D-K□	06F□□□-L	10F□□□-L	15F□□□-L	20F□□□-L	30F□□□-L					
Applicable linear servo motor	R88L-EC-	FW-0303	FW-0303	FW-0606	FW-0609	FW-0612						
		-	FW-0306	-	-	-	FW-1112					
Basic specifications	Power	kW	0.6	1	1.5	2	3					
	Continuous output current	Arms	1.5	1.5	2.8	4.7	5.9					
	Max. output current	Arms	4.5	4.5	8.4	14.1	17.7					
	Input power	Main circuit	3-phase, 380 to 480 VAC + 10% to -15% (50/60Hz)									
	Supply	Control circuit	24 VDC ±15%									
	Control method	IGBT-driven PWM method, sinusoidal drive										
	Feedback	Serial encoder	Incremental or absolute encoder									
	Usage/storage temperature	0 to 55°C/-20 to 65°C										
	Usage/storage humidity	90% RH or less (non-condensing)										
	Altitude	1,000 m or less above sea level										
	Vibration/shock resistance	5.88 m/s ² 10 to 60 Hz (Continuous operation at resonance point is not allowed)/19.6 m/s ²										
	Configuration	Base mounted										
	Approx. weight	Kg	1.9			2.7	4.7					

General specifications (for EtherCAT servo drives)


Performance	Frequency characteristics	2 kHz
EtherCAT interface	Command input	EtherCAT commands (for sequence, motion, data setting/reference, monitor, adjustment, and other commands).
CiA402 Drive profile		Cyclic synchronous position mode Cyclic synchronous velocity mode Cyclic synchronous torque mode Touch probe function Torque limit function Homing mode
I/O signal	Sequence input signal	– Multi-function input × 8 by parameter setting (forward/reverse drive prohibition, emergency stop, external latch, origin proximity, forward/reverse torque limit, general purpose monitor inputs).
	Sequence output signal	1 × servo drive error output 2 × multi-function outputs by parameters setting (servo ready, brake release, speed limit detection, force limit detection, zero speed detection, warning output, position completion, error clear attributed, programmable output, speed detection, position command status, speed command status)
USB communications	Interface	Personal computer/connector mini-USB
	Communications standard	Compliant with USB 2.0 standard
	Function	Parameter setting, status monitoring and tuning
EtherCAT communications	Communications protocol	IEC 61158 Type 12, IEC 61800-7
	Physical layer	100BASE-TX (IEEE802.3)
	Connectors	RJ45 × 2 ECAT IN: EtherCAT input × 1 ECAT OUT: EtherCAT output × 1
	Communications media	Category 5 or higher (cable with double, aluminium tape and braided shielding is recommended)
	Communications distance	Distance between nodes: 100 m max.
	LED indicators	RUN × 1 ERR × 1 L/A IN (Link/Activity IN) × 1 L/A OUT (Link/activity OUT) × 1
Integrated functions	Autotuning	Automatic motor parameter setting. One parameter rigidity setting. Inertia detection.
	Dynamic brake (DB)	Built-in. Operates during main power OFF, servo alarm, servo OFF or overtravel.
	Regenerative processing	Internal resistor included in models from 600 W to 5 kW. Regenerative resistor externally mounted (option).
	Overtravel (OT) prevention function	DB stop, deceleration stop or coast to stop during P-OT, N-OT operation
	Encoder divider function	Optional division possible
	Protective functions	Overcurrent, overvoltage, undervoltage, overspeed, overload, encoder error, overheat ...
	Analogue monitor functions for supervision	Analogue monitor of motor speed, speed reference, torque reference, command following error, analogue input ... The monitoring signals to output and their scaling can be specified with parameters. Number of channels: 2 (Output voltage: ±10V DC)
Panel operator	Display functions	2 × digit 7-segment LED display shows the drive status, alarm codes, parameters ...
	Switches	2 × rotary switches for setting the node address
CHARGE lamp		Lits when the main circuit power supply is turned ON.
Safety terminal	Functions	Safety Torque OFF function to cut off the motor current and stop the motor. Output signal for failure monitoring function.
	Conformed standards	EN ISO13849-1:2008 (PL- d, Performance Level d), IEC61800-5 -2:2007 (function STO, Safe Torque OFF), EN61508:2001 (Safety Integrity Level 2, SIL2), EN954-1:1996 (CAT3).
Encoder feedback		A/B line-driver encoder and SinCos to serial conversion available. Optional hall and temperature sensors via serial converter.

General specifications (for analogue/pulse servo drives)

Control mode			6 modes selectable by parameter: (1) position control, (2) velocity control, (3) force control, (4) position/velocity control, (5) position/force control, (6) velocity/force control.
Speed/force control	Performance	Frequency characteristics	2 kHz
		Speed zero clamp	Preset velocity command can be clamped to zero by the speed zero clamp input.
		Soft start time setting	0 to 1 s (acceleration, deceleration can be set separately). S-curve acceleration/deceleration is also available.
Position control	Input signal	Speed control	Speed reference voltage 10 VDC at rated speed: set at delivery (the scale and polarity can be set by parameters) Force limit 10 VDC at rated force (force can be limited separately in positive/negative direction). Preset speed control Preset speed is selectable from 6 internal settings by digital inputs.
		Force control	Force reference voltage 3 VDC at rated force: set at delivery (the scale and polarity can be set by parameters). Speed limit Speed limit can be set by parameter.
		Input signal	Command pulse Input pulse type Sign + pulse train, 90° phase displacement 2-phase pulse (A-phase + B-phase) or CCWLD/CWLD pulse train Input pulse frequency 4 Mpps max. (200 Kpps max. at open collector). Command pulse scaling (Electronic Gear) Applicable scaling ratio: 1/1,000 to 1,000 Any value of 1-2 ³⁰ can be set for numerator (encoder resolution) and denominator (command pulse resolution per motor revolution). The combination has to be within the range shown above.
I/O signal	Position signal output		A-phase, B-phase, Z-phase line driver output and Z-phase open-collector output.
	Sequence input signal		– Multi-function input × 10 by parameter setting (servo ON, control mode switching, forward/reverse drive prohibition, vibration filter switching, gain switching, electronic gear switching, error counter reset, pulse prohibition, alarm reset, internal speed selection, force limit switching, zero speed, emergency stop, mass ratio switching, velocity/force command sign).
	Sequence output signal		It is possible to output six types of signal form incl.: brake release, servo ready, servo alarm, positioning complete, motor rotation speed detection, force limit detection, zero speed detection, speed coincidence detection, warning, position command status, speed limit detection, speed command status, alarm clear.

Integrated functions	USB Communications	Interface	Personal computer/connector mini-USB
	Communications standard	Compliant with USB 2.0 standard	
	Function	Parameter setting, status monitoring and tuning	
	Autotuning	Automatic motor parameter setting. One parameter rigidity setting. Inertia detection.	
	Dynamic brake (DB)	Built-in. Operates during main power OFF, servo alarm, servo OFF or overtravel.	
	Regenerative processing	Internal resistor included in models from 600 W to 5 kW. Regenerative resistor externally mounted (option).	
	Overtavel (OT) prevention function	DB stop, deceleration stop or coast to stop during P-OT, N-OT operation	
	Encoder divider function	Optional division possible	
	Electronic gearing (Numerator/Denominator)	Up to 4 electronic gear numerators by combining with inputs.	
	Internal speed setting function	8 speeds may be set internally	
	Protective functions	Overcurrent, overvoltage, undervoltage, overspeed, overload, encoder error, overheat ...	
	Analogue monitor functions for supervision	Analogue monitor of motor speed, speed reference, torque reference, command following error, analogue input ... The monitoring signals to output and their scaling can be specified by parameters. Number of channels: 2 (Output voltage: ±10V DC)	
Panel operator	Display functions	6-digit 7-segment LED display shows the drive status, alarm codes, parameters ...	
	Panel operator keys	Used to set/monitor parameters and drive condition (5 key switches).	
CHARGE lamp		Lits when the main circuit power supply is turned ON.	
Safety terminal	Functions	Safety torque OFF function to cut off the motor current and stop the motor. Output signal for failure monitoring function.	
	Conformed standards	EN ISO13849-1:2008 (PL- d, Performance Level d), IEC61800-5 -2:2007 (function STO, Safe Torque OFF), EN61508:2001 (Safety Integrity Level 2, SIL2), EN954-1:1996 (CAT3).	
Encoder feedback		A/B line-driver encoder and SinCos to serial conversion available. Optional hall and temperature sensors via serial converter.	
Expansion connector		Serial bus for option board	

Servo drive part names

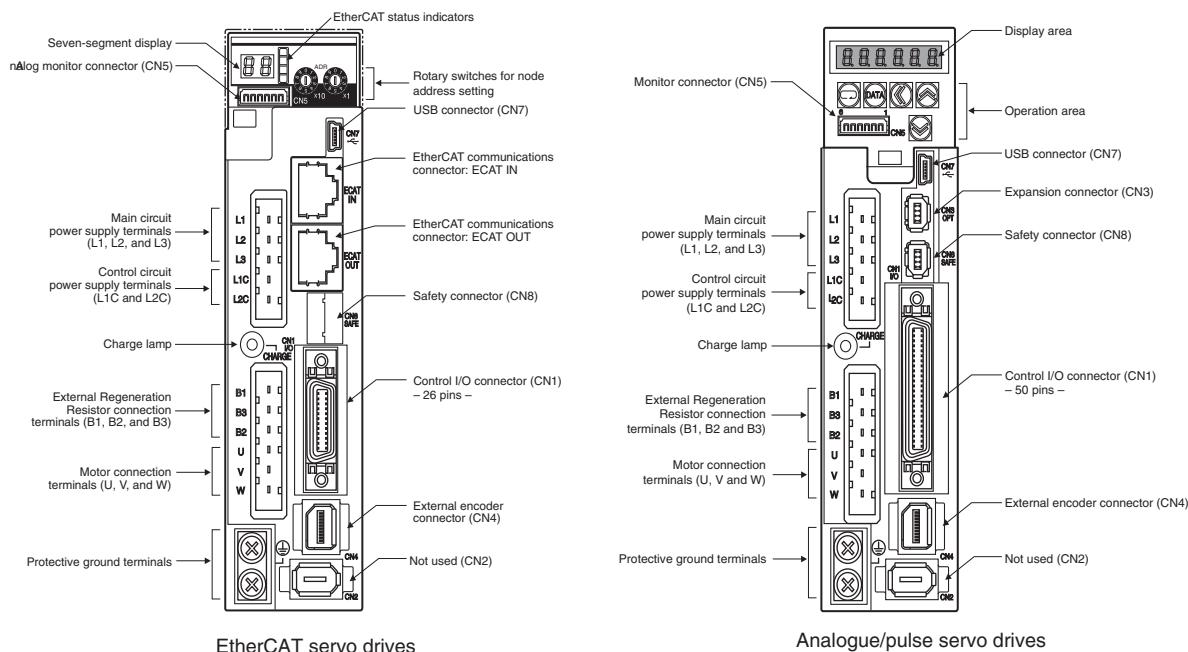

Note: The above pictures show 230 V servo drives models only. The 400 V servo drives have 24 VDC power input terminals for control circuit instead of L1C and L2C terminals.

I/O specifications**Terminals specifications (for all servo drives)**

Symbol	Name	Function
L1	Main power supply input terminal	AC power input terminals for the main circuit
L2		Note: for single-phase servo drives connect the power supply input to L1 and L3.
L3		
L1C	Control power supply input terminal	AC power input terminals for the control circuit (for 200 V single/three-phase servo drives only).
L2C		
24 V		DC power input terminals for the control circuit (for 400 V three-phase servo drives only).
0 V		
B1	External regeneration resistor connection terminals	Servo drives 200 V below 750 W: no internal resistor is connected. Leave B2 and B3 open. Connect an external regenerative resistor between B1 and B2.
B2		
B3		Servo drives from 600 W to 5 kW: short-circuit in B2 and B3 for internal regenerative resistor. If the internal regenerative resistor is insufficient, connect an external regenerative resistor between B1 and B2 and remove the wire between B2 and B3.
U	Servo motor connection terminals	Terminals for outputs to the servomotor.
V		
W		

I/O signals (CN1) – Input signals (for EtherCAT servo drives)

Pin No.	Signal name	Function
6	I-COM	± pole of external DC power. The power must use 12 to 24 V ($\pm 5\%$)
5	E-STOP	Emergency stop
7	P-OT	Forward run prohibited
8	N-OT	Reverse run prohibited
9	DEC	Origin proximity
10	EXT3	External latch input 3
11	EXT2	External latch input 2
12	EXT1	External latch input 1
13	SI-MON0	General purpose monitor input 0
14	–	Terminals not used. Do not connect.
15	–	
17	–	
18	–	
19	–	
20	–	
21	–	
22	–	
23	–	
24	–	
–	PCL	Forward force limit
	NCL	Reverse force limit
	SI-MON1	General-purpose monitor input 1
	SI-MON2	General-purpose monitor input 2
Shell	FG	Shield ground. Connected to frame ground if the shield wire of the I/O signal cable is connected to the connector shell.
16	GND	Signal ground. It is insulated with power supply (I-COM) for the control signal in the servo drive.

I/O signals (CN1) – Output signals (for EtherCAT servo drives)

Pin No.	Signal name	Function
1	BRK-OFF+	External brake release signal
2	BRK-OFF	
25	S-RDY+	Servo ready: ON when there is no servo alarm and control/main circuit power supply is ON
26	S-RDY-	
3	ALM+	Servo alarm: Turns OFF when an error is detected
4	ALM-	
–	INP1	Position complete output 1
	TGON	Motor speed detection
	F_LIMIT	Force limit detection
	ZSP	Zero speed
	VCMP	Speed conformity output
	WARN1	Warning 1
	WARN2	Warning 2
	PCMD	Position command status
	INP2	Position complete output 2
	VLIMIT	Speed limit detection
	ALM-ATB	Error clear attribute
	VCMD	Speed command status
	R-OUT1	Remote output 1
	R-OUT2	Remote output 1

I/O signals (CN1) – Input signals (for analogue/pulse servo drives)

Pin No.	Control mode	Signal name	Function
1	Position	+24 VCW	Reference pulse input for line driver and open collector according to parameter setting.
3		+CW	
4		-CW	
2		+24 VCCW	Input mode: Sign + pulse string Reverse/forward pulse (CCW/CW pulse)
5		+CCW	Two-phase pulse (90° phase differential)
6		-CCW	
44		+CWLD	Reference pulse input for line driver only.
45		-CWLD	
46		+CCWL	Input mode: Reverse/forward pulse (CCW/CW pulse)
47		-CCWL	
14	Speed	REF	Speed reference input: ±10 V/rated motor speed (input gain can be modified using a parameter).
		FREF1	Force reference input: ±10 V/rated motor torque (input gain can be modified using a parameter).
		VLIM	Speed limit input: ±10 V/rated motor speed (input gain can be modified using a parameter).
15	–	AGND1	Analogue signal ground
16	Force	FREF2	Force reference input: ±10 V/rated motor torque (input gain can be modified using a parameter).
		PCL	Forward Force limit input: ±10 V/rated motor torque (input gain can be modified using a parameter).
18	Position/Speed	NCL	Reverse Force limit input: ±10 V/rated motor torque (input gain can be modified using a parameter).
17		AGND1	Analogue signal ground
7	Common	+24 VIN	Control power supply input for sequence signals: users must provide the +24 V power supply (12 to 24 V).
29	–	RUN	Servo ON: this turn ON the servo.
26	Position	DFSEL1	Vibration filter switching 1
27	Common	GSEL	Enables vibration filter according parameter setting.
28	Position/ Speed	GESEL1	Gain switching
		VSEL3	Enables gain value according parameter setting.
30	Position Speed	ECRST	Electronic gear switching 1
		VSEL2	Internal speed selection 3
31	Common	RESET	Internal speed selection 2
32	Position/ Speed/Force	TVSEL	Error counter reset input.
			Switches the numerator fro electronic gear ratio.
33	Position	IPG	Input to select the desired speed setting during internally speed operation.
	Speed	VSEL1	The speed selection is combining this input with VSEL2 and VSEL3 inputs.
8	Common	NOT	Overtravel prohibited: stops servomotor when movable part travels beyond the
9		POT	allowable range of motion.
50	–	FG	Frame ground
–	–	FLSEL	Terminals not used. Do not connect.
		DFSEL2	The function of input signals allocated to pins 8,9 and 26 to 33 can be changed with
		GESEL2	these options by parameters settings
		VZERO	
		VSIGN	
		FSIGN	
		E-STOP	
		MSEL	
	–	ZSP	
20	–		
40	–		
41	–		

I/O signals (CN1) – Output signals (for analogue/pulse servo drives)

Pin No.	Control mode	Signal name	Function
21	Position	+A	Encoder phase A+
22		-A	Encoder phase A-
48		+B	Encoder phase B+
49		-B	Encoder phase B-
23		+Z	Encoder phase Z+
24		-Z	Encoder phase Z-
19		-Z	Encoder phase-Z output
25		ZCOM	Encoder phase-Z common
11	Common	BKIR	Brake release signal output
10		BKIRCOM	Timing signal for operating the electromagnetic brake on a motor.
35		READY	Servo ready: ON if there is not servo alarm when the control/main circuit power supply is turned ON.
34		READYCOM	
37		/ALM	Servo alarm: turns OFF when an error is detected.
36		ALMCOM	
39	Speed/force	TGON	Motor rotation speed detection. This output turns ON when the motor rotation speed reaches the speed set in a parameter.
38		TGONCOM	
39	Position	INP1	Positioning complete output 1: turns ON when position error is equal to setting parameter.
38		INP1COM	
40	Force limiting output	FLIM	This output turn ON while the force is limited.
41		FLIMCOM	
12	Zero speed detection signal	ZSP	This output turn on when the motor movements speed is equal to Zero Speed Detection (Pn435) or less
41		ZSPCOM	
-	-	INP2	Position complete output 2
		P-CMD	Position command status
		WARN1	Warning 1
		WARN2	Warning 2
		ALM-ATB	Alarm output
		V-CMD	Speed command status
		V-LIMIT	Speed limit detection
		V-CMP	Speed conformity output
			The function of output signals allocated to pins 11,10, 34 to 40 can be changed with these options by parameters settings.

External encoder connector (CN4) – (for all servo drives)

Pin No.	Signal name	Function
1	E5V	External scale power supply output. Use at 5.2V ±5% and at or below 250 mA.
2	E0V	This is connected to the control circuit ground connected to connector CN1.
3	PS	Encoder signal (serial transmission signal)
4	/PS	
5	EXA	Encoder line driver input (A-B-Z signals)
6	/EXA	
7	EXB	
8	/EXB	
9	EXZ	
10	/EXZ	
Shell	FG	Shield ground

Monitor connector (CN5) – (for all servo drives)

Pin No.	Signal name	Function
1	AM1	Analogue monitor output 1. Outputs the analogue signal for the monitor. Use the parameters setting to select the output to monitor. Default setting: Motor rotation speed 1 V/(500mm/s).
2	AM2	Analogue monitor output 2. Outputs the analogue signal for the monitor. Use the parameters setting to select the output to monitor. Default setting: Motor rotation speed 1 V/(33% of nominal force).
3	GND	Ground for analogue monitors 1,2.
4	-	Terminals not used. Do not connect.
5	-	
6	-	


Safety connector (CN8) – (for all servo drives)

Pin No.	Signal name	Function
1	-	Not used. Do not connect.
2	-	
3	SF1-	Safety input 1 and 2. This input turns OFF the power transistor drive signals in the servo drive to cut off the current output to the motor.
4	SF1+	
5	SF2-	
6	SF2+	
7	EDM-	A monitor signal is output to detect a safety function failure.
8	EDM+	
Shell	FG	Frame ground.


Dimensions

Servo drives


R88D-KT02H-L, R88D-KN02H-ECT-L (230 V, 200 W)

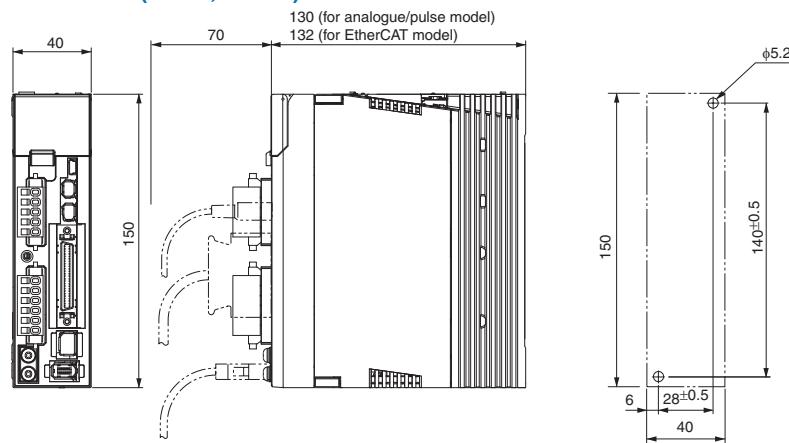


R88D-KT04H-L, R88D-KN04H-ECT-L (230 V, 400 W)



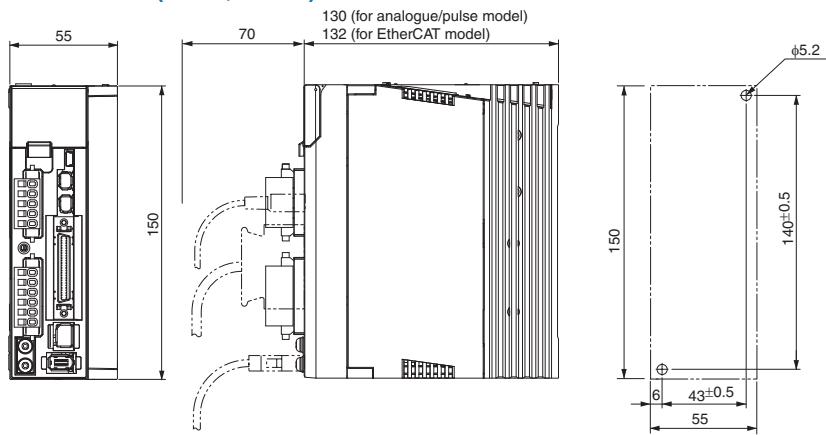


R88D-KT08H-L, R88D-KN08H-ECT-L (230 V, 800 W)

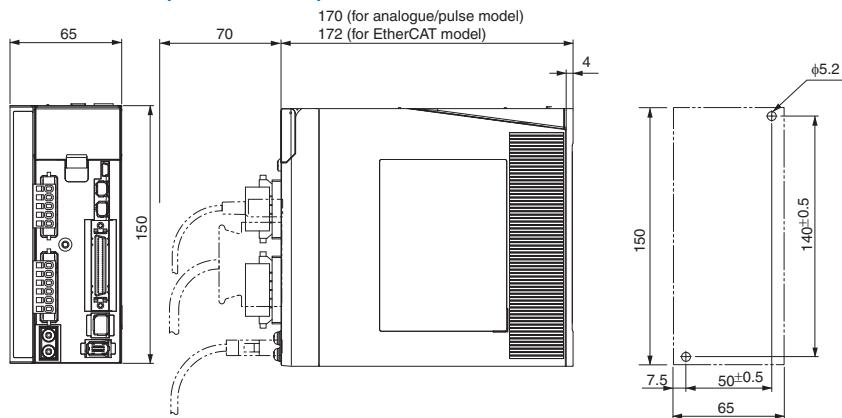


R88D-KT10/15H-L, R88D-KN10/15H-ECT-L (230 V, 1 to 1.5 kW)

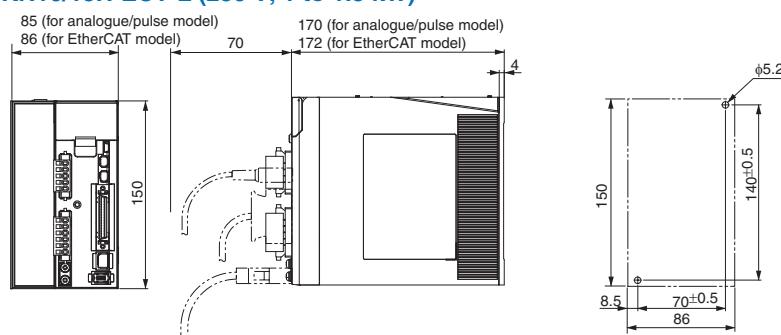

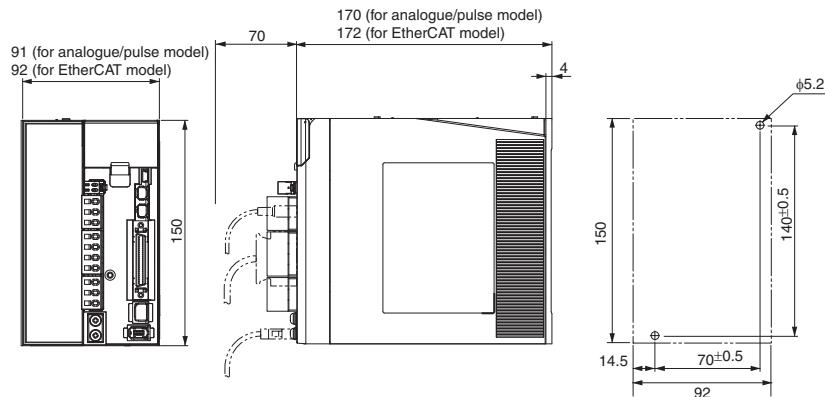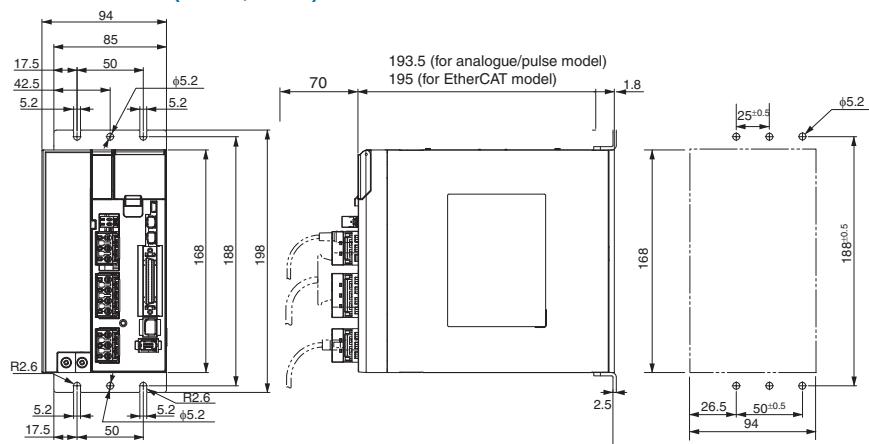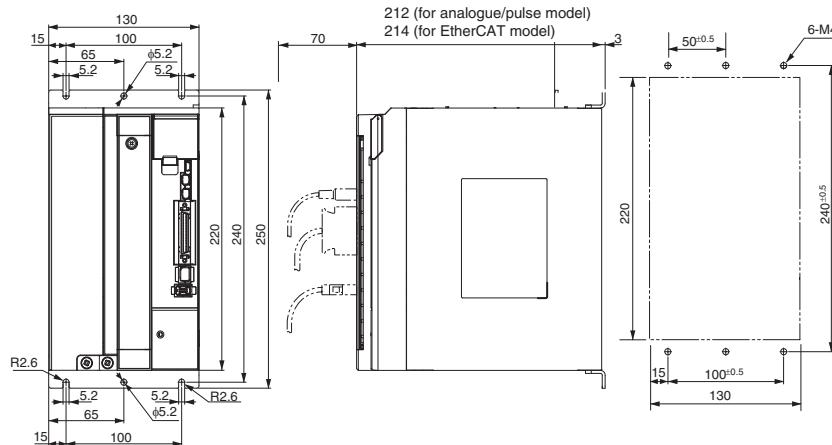
R88D-KT06/10/15F-L, R88D-KN06/10/15F-ECT-L (400 V, 600 W to 1.5 kW)**R88D-KT20F-L, R88D-KN20F-ECT-L (400 V, 2 kW)****R88D-KT30F-L, R88D-KN30F-ECT-L (400 V, 3 kW)****Filters**

Filter model	External dimensions			Mount dimensions	
	H	W	D	M1	M2
R88A-FIK102-RE	190	42	44	180	20
R88A-FIK104-RE	190	57	30	180	30
R88A-FIK107-RE	190	64	35	180	40
R88A-FIK114-RE	190	86	35	180	60
R88A-FIK304-RE	196	92	40	186	70
R88A-FIK306-RE	238	94	40	228	70
R88A-FIK312-RE	291	130	40	278	100

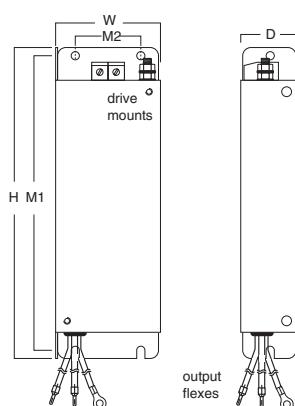

Installation

Single-phase, 230 VAC (for EtherCAT servo drives)

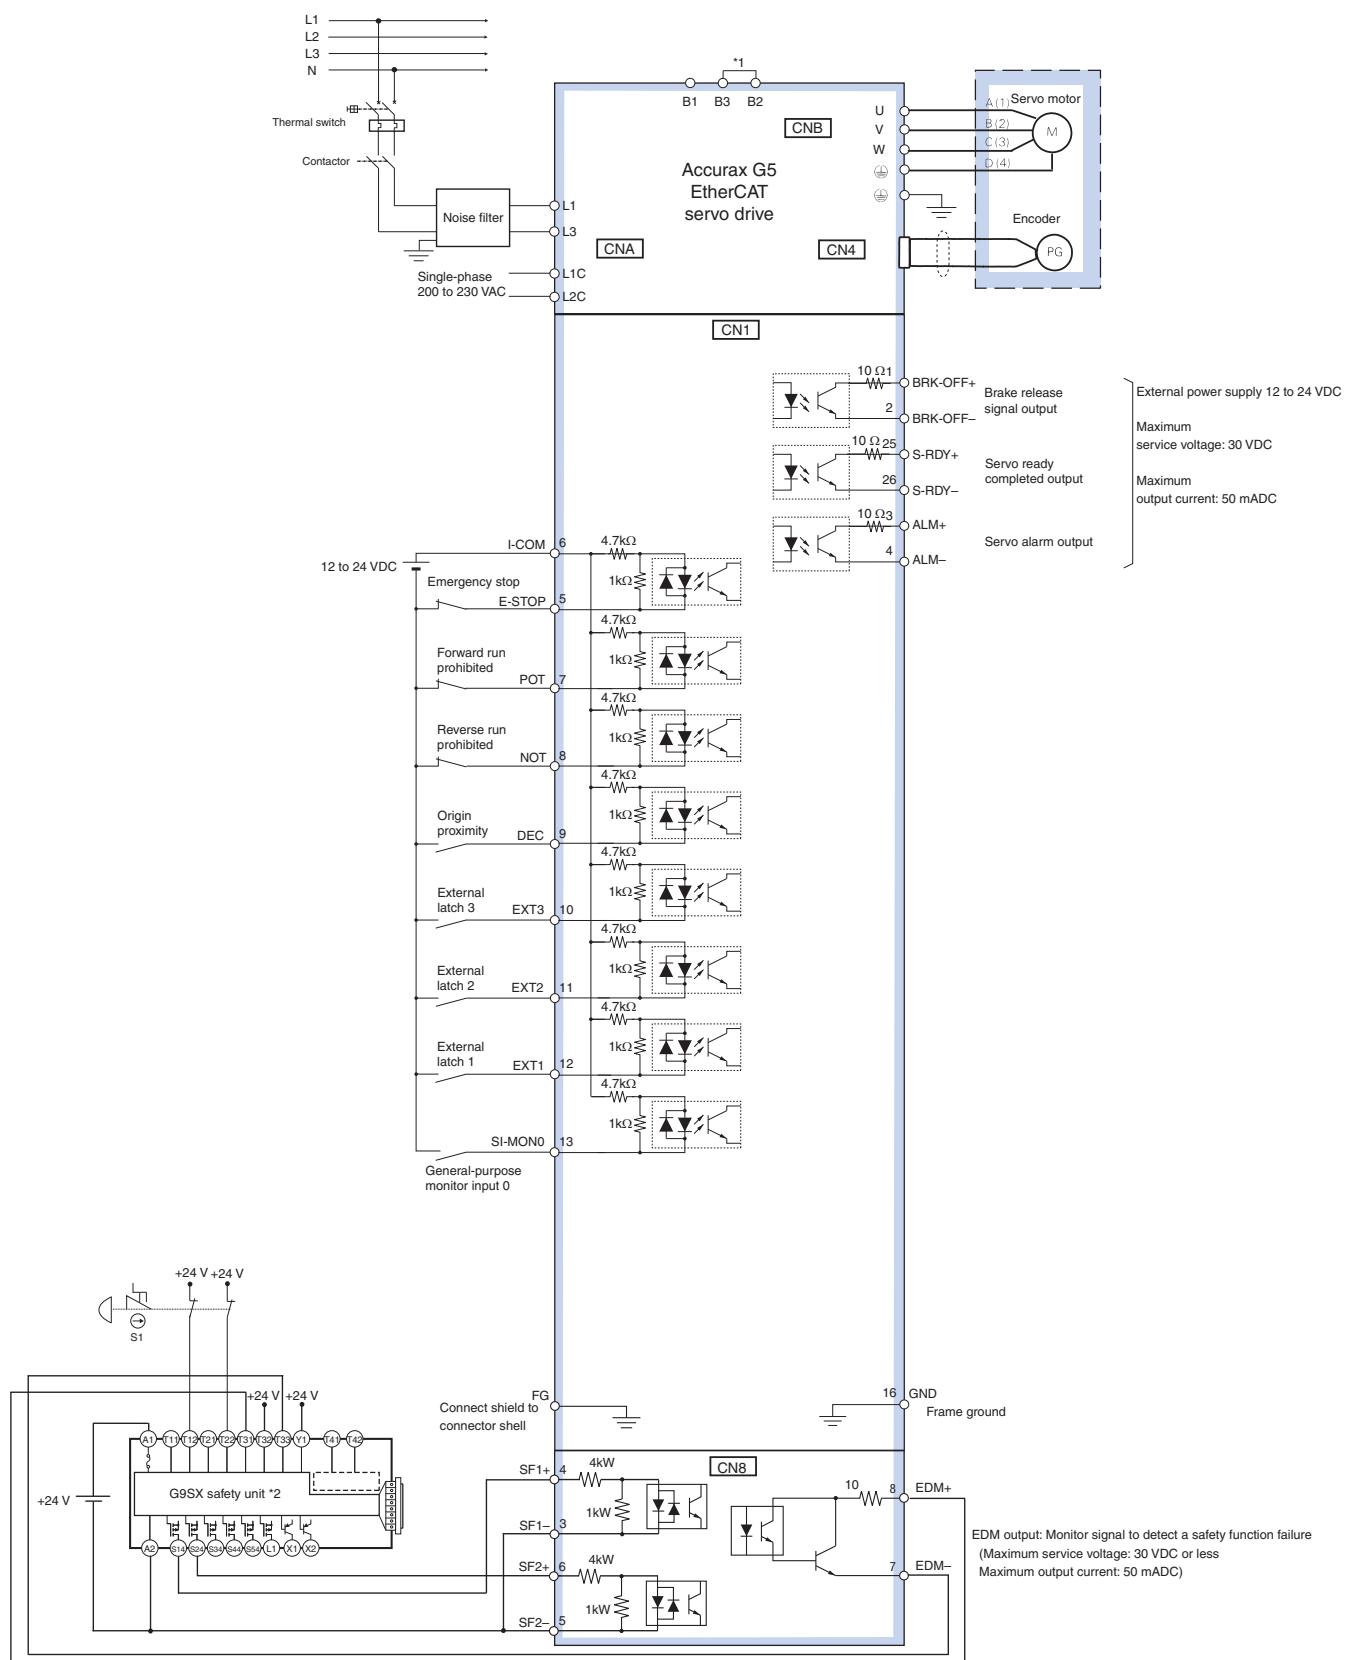


*1 For servo drives from 750 W, B2 and B3 are short-circuited. If the internal regenerative resistor is insufficient, remove the wire between B2 and B3 and connect an external regenerative resistor between B1 and B2.

*2 Wiring diagram example using the G9SX safety unit. If a safety unit is not used, keep the factory safety bypass connector installed in the CN8.

Note: The input function of pins 5 and 7 to 13, and output function of pins 1, 2, 25 and 26, can be changed via parameter settings.

Three-phase, 400 VAC (for EtherCAT servo drives)

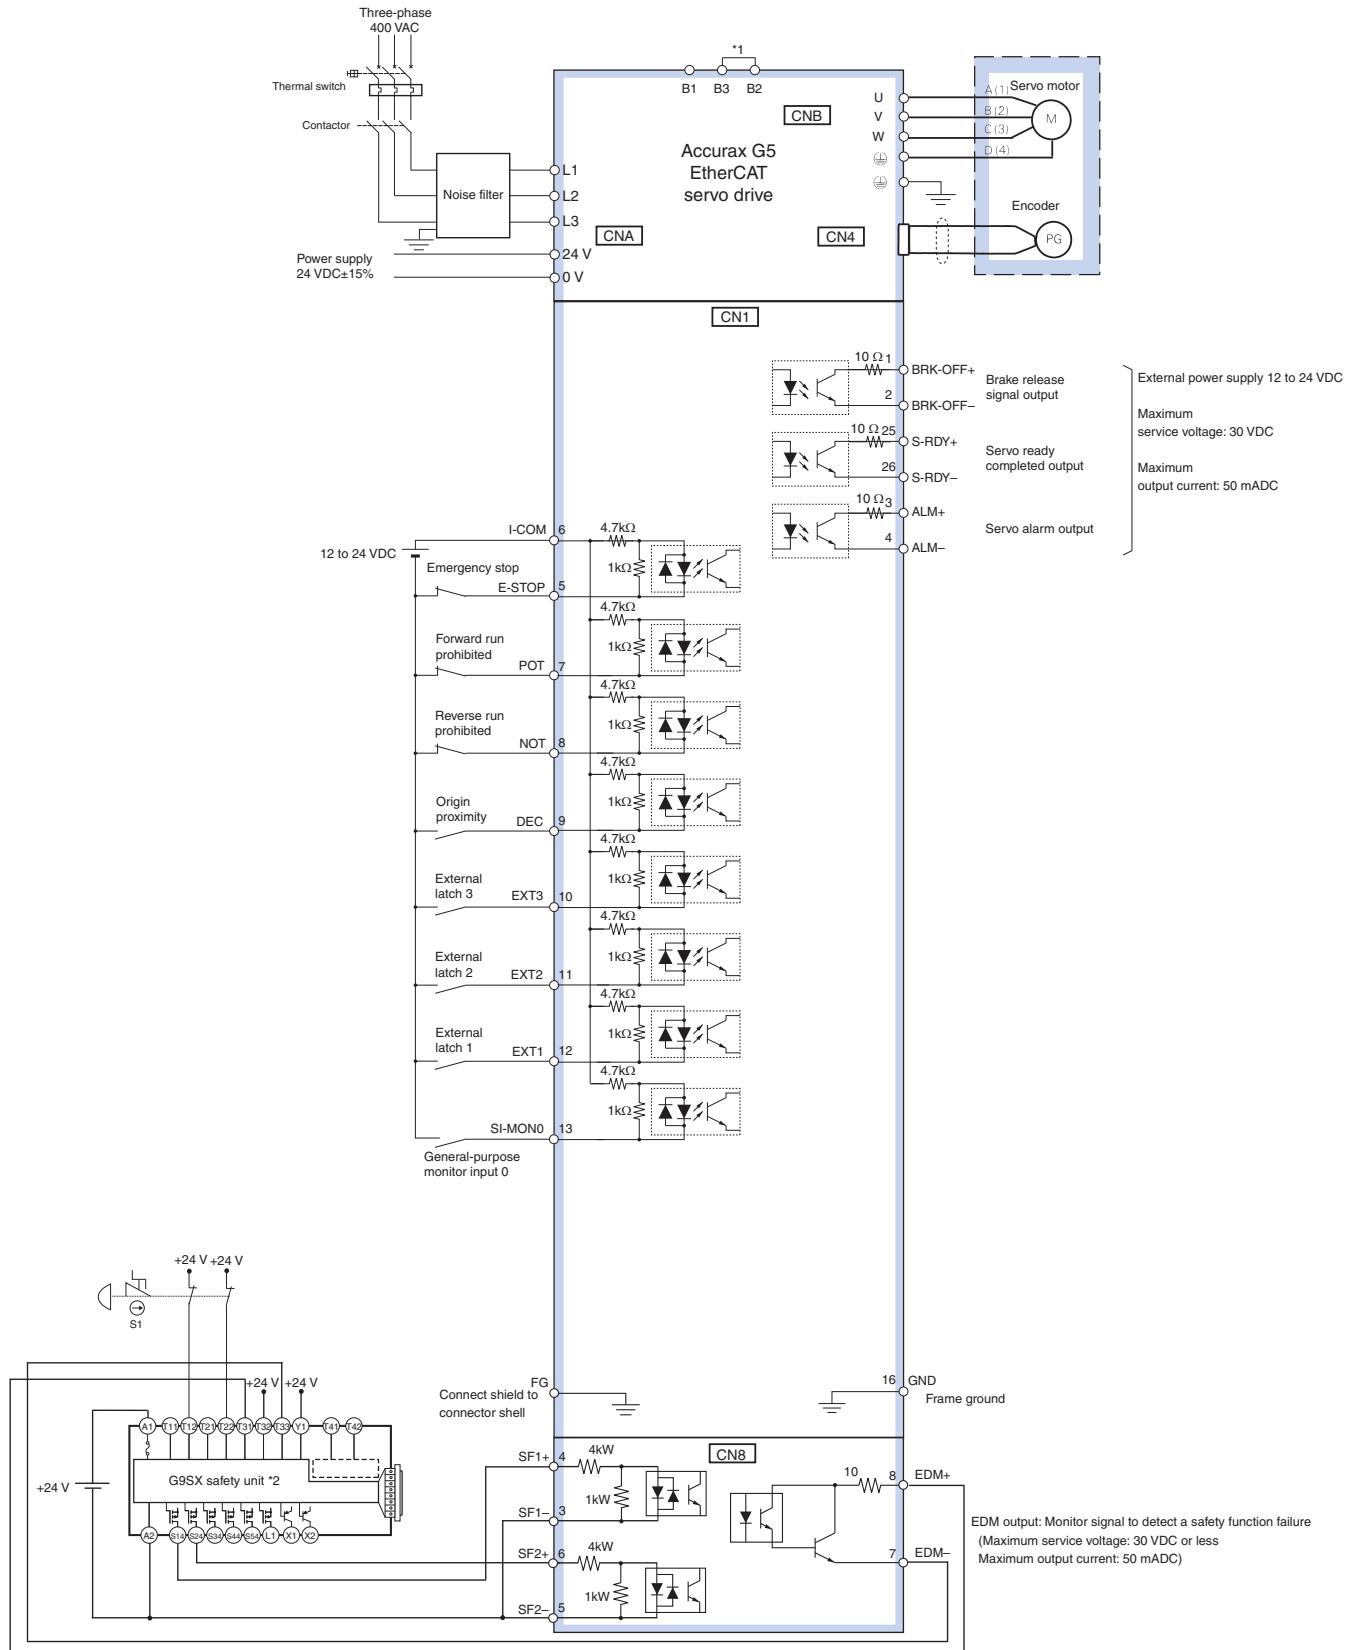


*1 Normally B2 and B3 are short-circuited. If the internal regenerative resistor is insufficient, remove the wire between B2 and B3 and connect an external regenerative resistor between B1 and B2.

*2 Wiring diagram example using the G9SX safety unit. If a safety unit is not used, keep the factory safety bypass connector installed in the CN8.

Note: The input function of pins 5 and 7 to 13, and output function of pins 1, 2, 25 and 26, can be changed via parameter settings.

Single-phase, 230 VAC (for analogue/pulse servo drives)

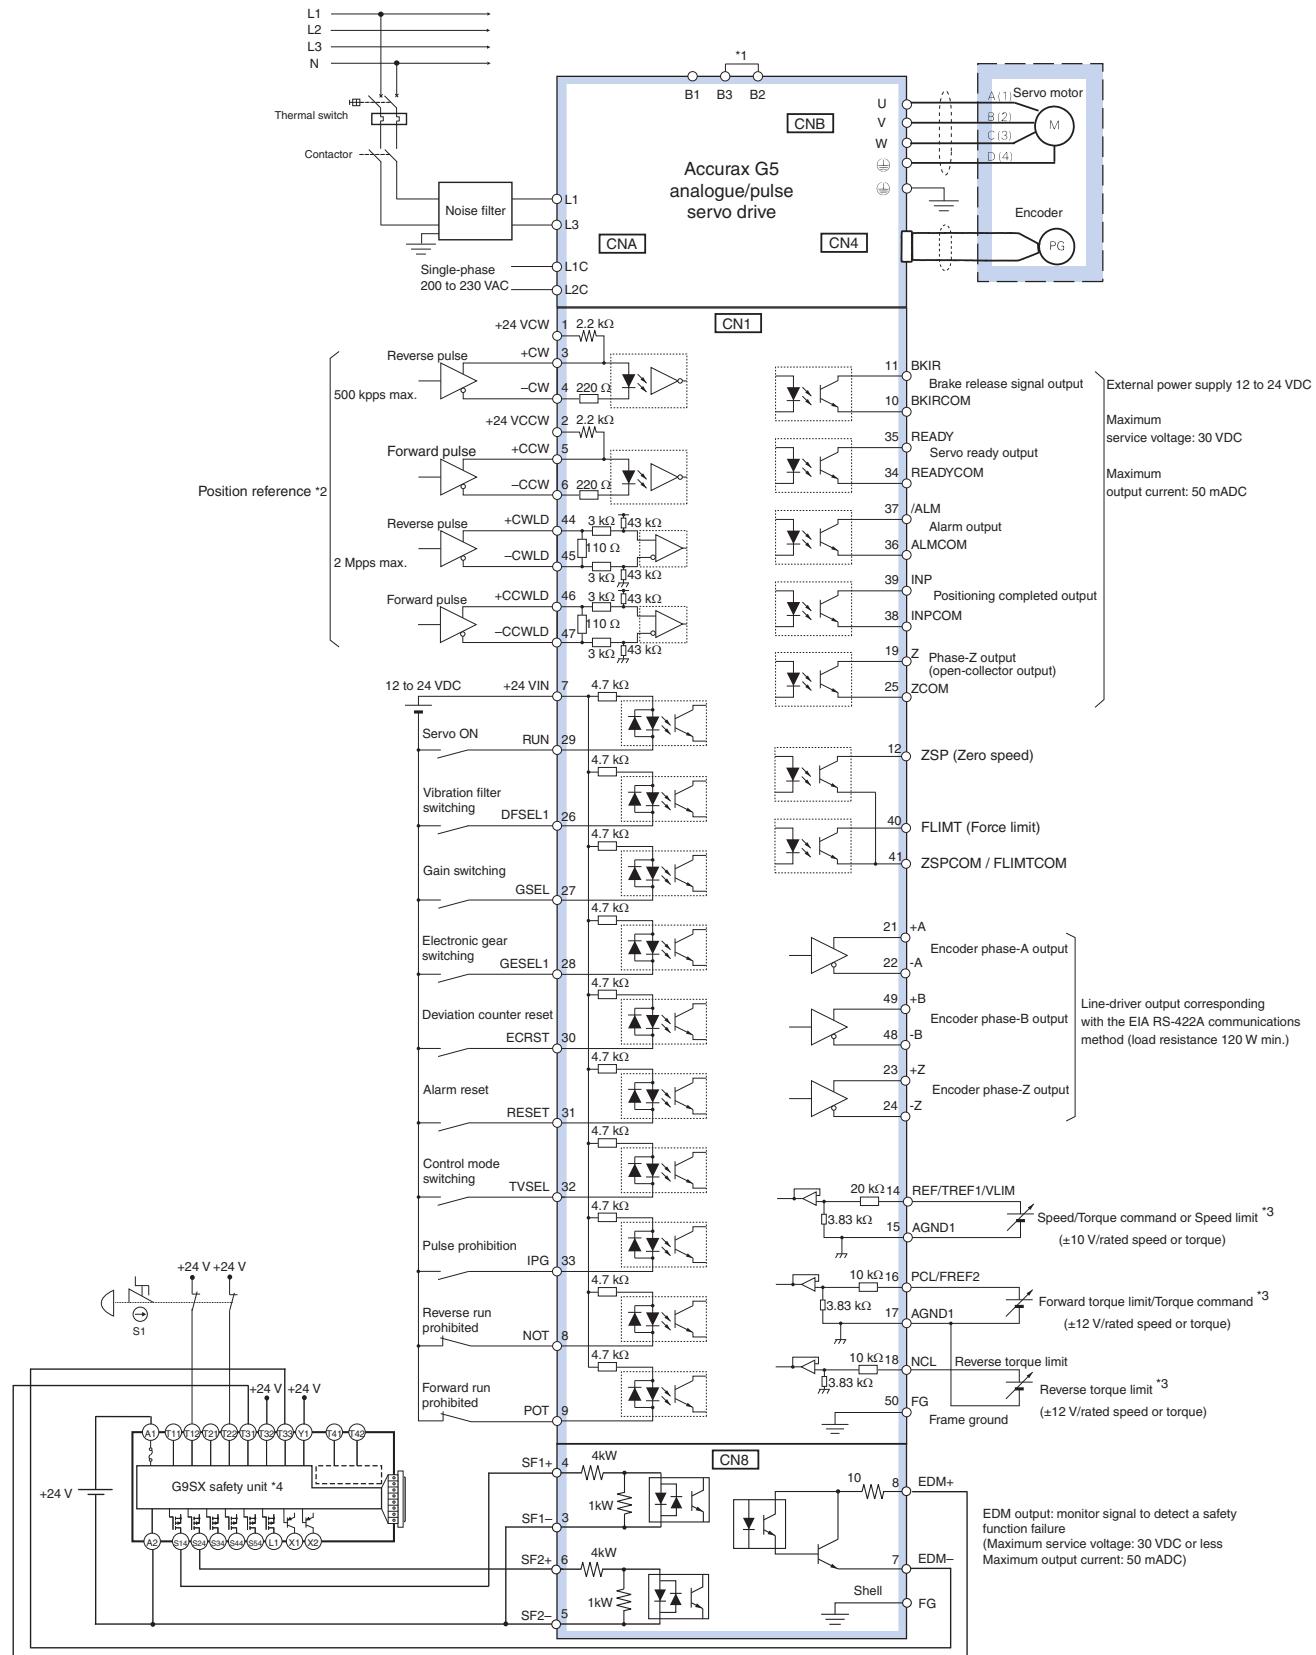

*1 For servo drives from 750 W, B2 and B3 are short-circuited. If the internal regenerative resistor is insufficient, remove the wire between B2 and B3 and connect an external regenerative resistor between B1 and B2.


*2 Only available in position control mode.

*3 The input function depends on control mode used (Position, speed or torque control).

*4 Wiring diagram example using the G9SX safety unit. If a safety unit is not used, keep the factory safety bypass connector installed in the CN8.


Note: The input function of pins 8,9 and 26 to 33, and output function of pins 10, 11, 34, 35, 38 and 39, can be changed via parameter settings.

Three-phase, 400 VAC (for analogue/pulse servo drives)

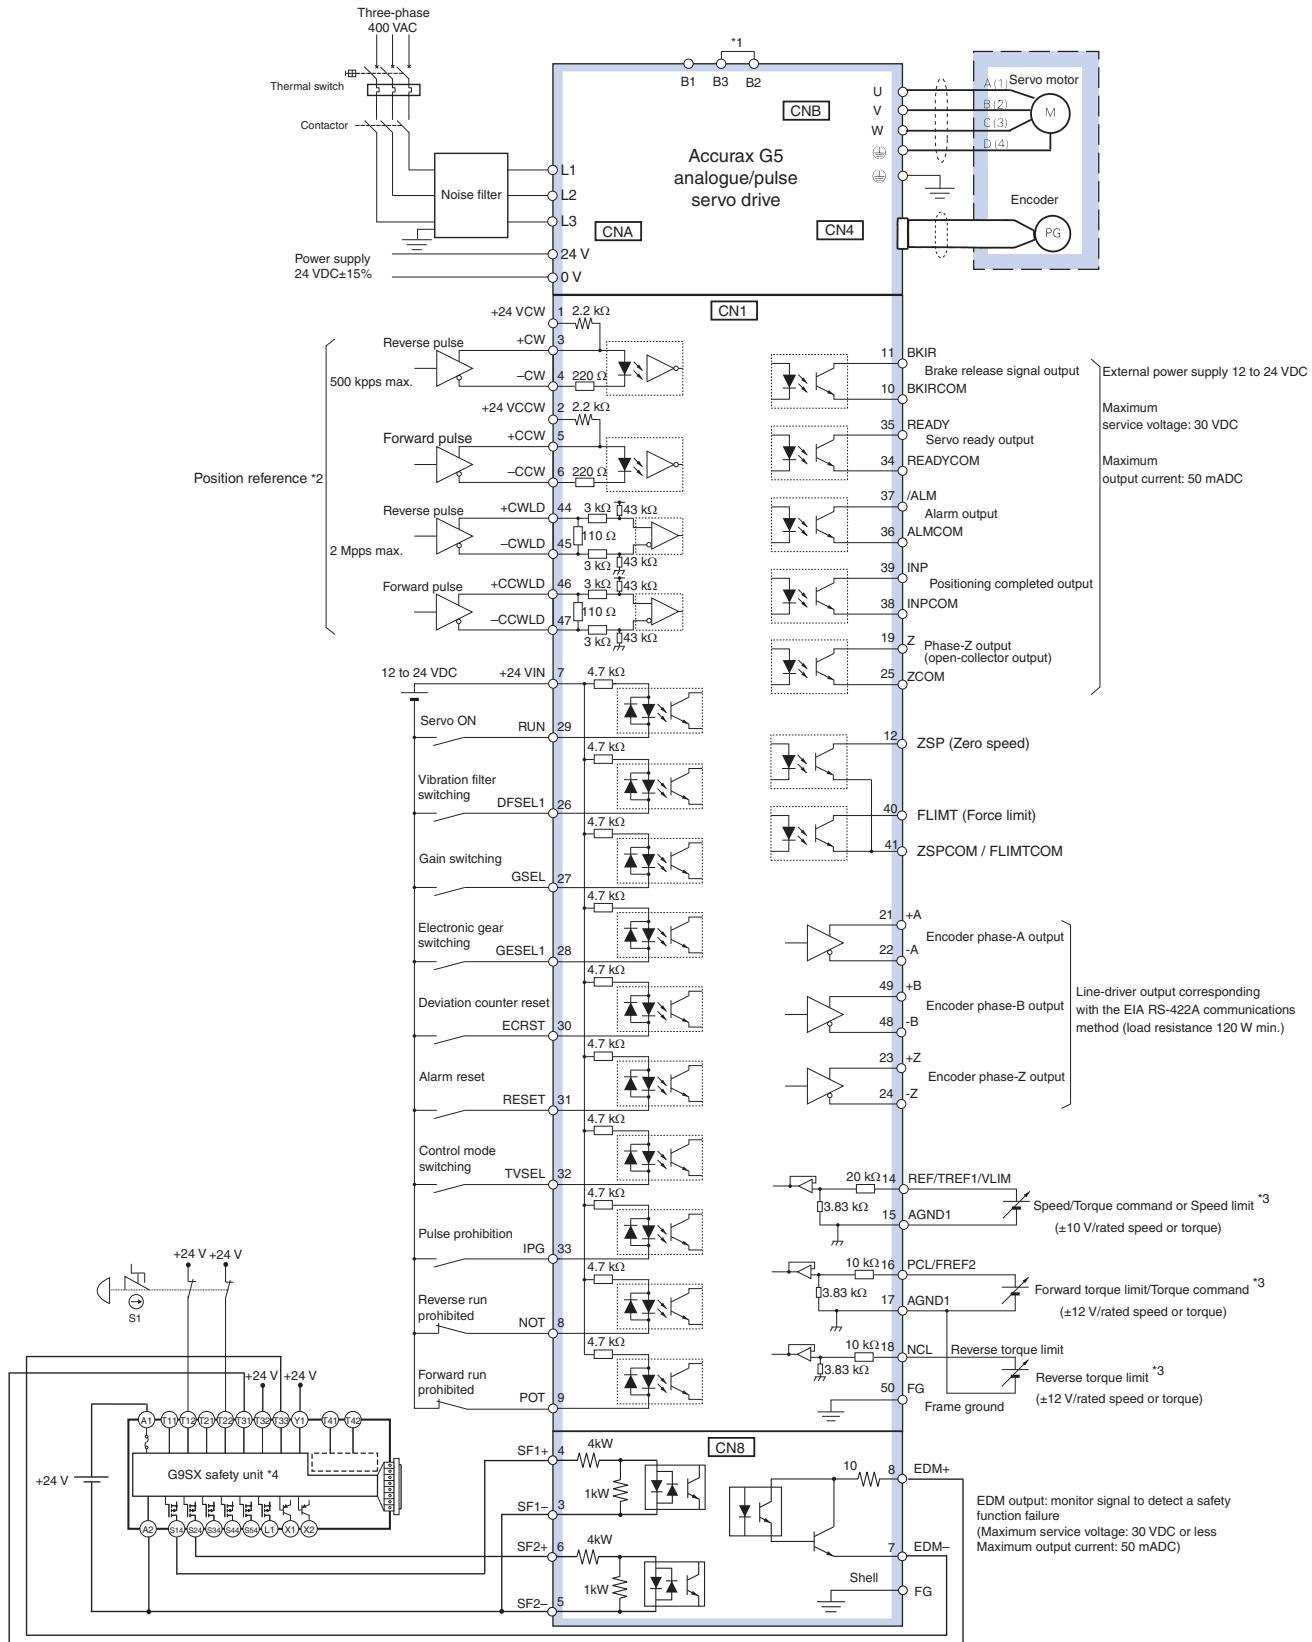

Ordering information

Accurax G5 series EtherCAT reference configuration

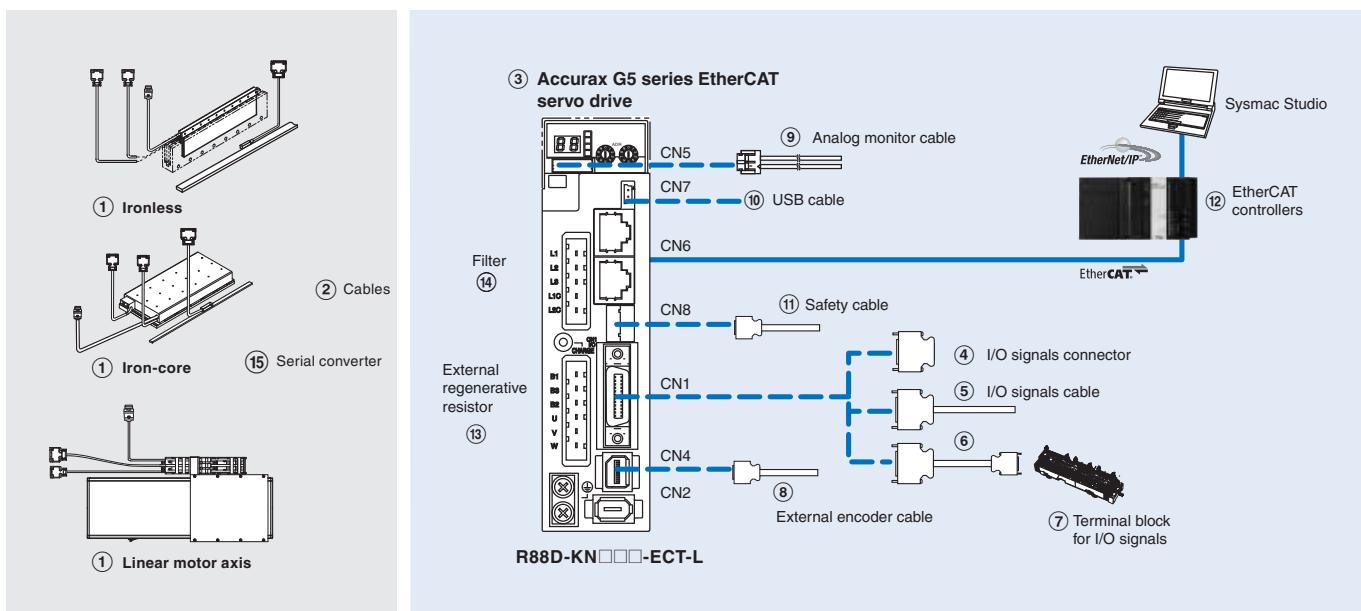

Note: The symbols ①②③④⑤ ... show the recommended sequence to select the components in Accurax G5 servo system

Servo motors, power and encoder cables

Note: ①②⑯ Refer to the Accurax linear motor chapter for linear motor, cables or connectors selection

Servo drives

Symbol	Specifications	Servo drive models	① Compatible Accurax G5 Linear motors		
			Iron-core motors	Ironless motors	Linear motor axis
③	1 phase 230 VAC	R88D-KN02H-ECT-L	R88L-EC-FW-0303-□	R88L-EC-GW-0303-□ R88L-EC-GW-0503-□	R88L-EA-AF-0303-□
		R88D-KN04H-ECT-L	R88L-EC-FW-0306-□	R88L-EC-GW-0506-□ R88L-EC-GW-0703-□	R88L-EA-AF-0306-□
		R88D-KN08H-ECT-L	R88L-EC-FW-0606-□	R88L-EC-GW-0306-□ R88L-EC-GW-0509-□ R88L-EC-GW-0706-□	R88L-EA-AF-0606-□
		R88D-KN10H-ECT-L	R88L-EC-FW-0609-□	R88L-EC-GW-0309-□ R88L-EC-FW-0709-□	R88L-EA-AF-0609-□
		R88D-KN15H-ECT-L	R88L-EC-FW-0612-□ R88L-EC-FW-1112-□ R88L-EC-FW-1115-□	—	R88L-EA-AF-0612-□ R88L-EA-AF-1112-□ R88L-EA-AF-1115-□
	3 phase 400 VAC	R88D-KN06F-ECT-L	R88L-EC-FW-0303-□	—	—
		R88D-KN10F-ECT-L	R88L-EC-FW-0306-□	—	R88L-EA-AF-0303-□ R88L-EA-AF-0306-□
		R88D-KN15F-ECT-L	R88L-EC-FW-0606-□	—	R88L-EA-AF-0606-□
		R88D-KN20F-ECT-L	R88L-EC-FW-0609-□	—	R88L-EA-AF-0609-□
		R88D-KN30F-ECT-L	R88L-EC-FW-0612-□ R88L-EC-FW-1112-□ R88L-EC-FW-1115-□	—	R88L-EA-AF-0612-□ R88L-EA-AF-1112-□ R88L-EA-AF-1115-□

Signals cables for I/O general purpose (CN1)

Symbol	Description	Connect to	Model
④	I/O connector kit (26 pins)	For I/O general purpose	— R88A-CNW01C
⑤	I/O signals cable	For I/O general purpose	1 m R88A-CPKB001S-E 2 m R88A-CPKB002S-E
⑥	Terminal block cable	For I/O general purpose	1 m XW2Z-100J-B34 2 m XW2Z-200J-B34
⑦	Terminal block (M3 screw and for pin terminals) Terminal block (M3.5 screw and for fork/round terminals) Terminal block (M3 screw and for fork/round terminals)		— XW2B-20G4 — XW2B-20G5 — XW2D-20G6

External encoder cable (CN4)

Symbol	Name	Model
(8)	External encoder cable	5 m R88A-CRKM005SR-E
		10 m R88A-CRKM010SR-E
		20 m R88A-CRKM020SR-E

Analogue monitor (CN5)

Symbol	Name	Model
(9)	Analogue monitor cable	1 m R88A-CMK001S

USB personal computer cable (CN7)

Symbol	Name	Model
(10)	USB mini-connector cable	2 m AX-CUSBM002-E

Cable for safety (CN8)

Symbol	Name	Model
(11)	Safety cable	3 m R88A-CSK003S-E

EtherCAT controllers

Symbol	Name	Model
(12)	NJ series	CPU unit
		NJ501-1500 (64 axes)
		NJ501-1400 (32 axes)
		NJ501-1300 (16 axes)
		NJ301-1200 (8 axes)
	Trajexia stand-alone motion controller	NJ301-1100 (4 axes)
		NJ-PA3001 (220 VAC)
		NJ-PD3001 (24 VDC)
		TJ2-MC64 (64 axes)
		TJ2-ECT64 (64 axes)
	Position Controller Unit for CJ1 PLC series	TJ2-ECT16 (16 axes)
		TJ2-ECT04 (4 axes)
		CJ1W-NCF81 (16 axes)
		CJ1W-NC88□ (8 axes)
		CJ1W-NC48□ (4 axes)
		CJ1W-NC281(2 axes)

External regenerative resistor

Symbol	Regenerative resistor unit model	Specifications
(13)	R88A-RR08050S	50 Ω, 80 W
	R88A-RR080100S	100 Ω, 80 W
	R88A-RR22047S	47 Ω, 220 W
	R88A-RR50020S	20 Ω, 500 W

Filters

Symbol	Applicable servodrive	Filter model	Manufacturer	Rated current	Leakage current	Rated voltage
(14)	R88D-KN02H-ECT-L	R88A-FIK102-RE	Rasmi Electronics Ltd	2.4 A	3.5 mA	250 VAC single-phase
	R88D-KN04H-ECT-L	R88A-FIK104-RE		4.1 A	3.5 mA	
	R88D-KN08H-ECT-L	R88A-FIK107-RE		6.6 A	3.5 mA	
	R88D-KN10H-ECT-L, R88D-KN15H-ECT-L	R88A-FIK114-RE		14.2 A	3.5 mA	
	R88D-KN06F-ECT-L, R88D-KN10F-ECT-L, R88D-KN15F-ECT-L	R88A-FIK304-RE		4 A	0.3 mA / 32 mA ¹	400 VAC three-phase
	R88D-KN20F-ECT-L	R88A-FIK306-RE		6 A	0.3 mA / 32 mA ¹	
	R88D-KN30F-ECT-L	R88A-FIK312-RE		12.1 A	0.3 mA / 32 mA ¹	

1. Momentary peak leakage current for the filter at switch-on/off.

Connectors

Specifications	Model
External encoder connector (for CN4)	R88A-CNKA4L
Safety I/O signal connector (for CN8)	R88A-CNKA8S


Computer software

Specifications	Model
Sysmac Studio version 1.0 or higher	SYSMAC-SE2□□□
CX-Drive version 2.60 or higher	CX-DRIVE 2.60

Note: If CX-One is installed on the same computer as Sysmac Studio, it must be CX-One v4.2 or higher

Ordering information

Accurax G5 series analogue/pulse reference configuration

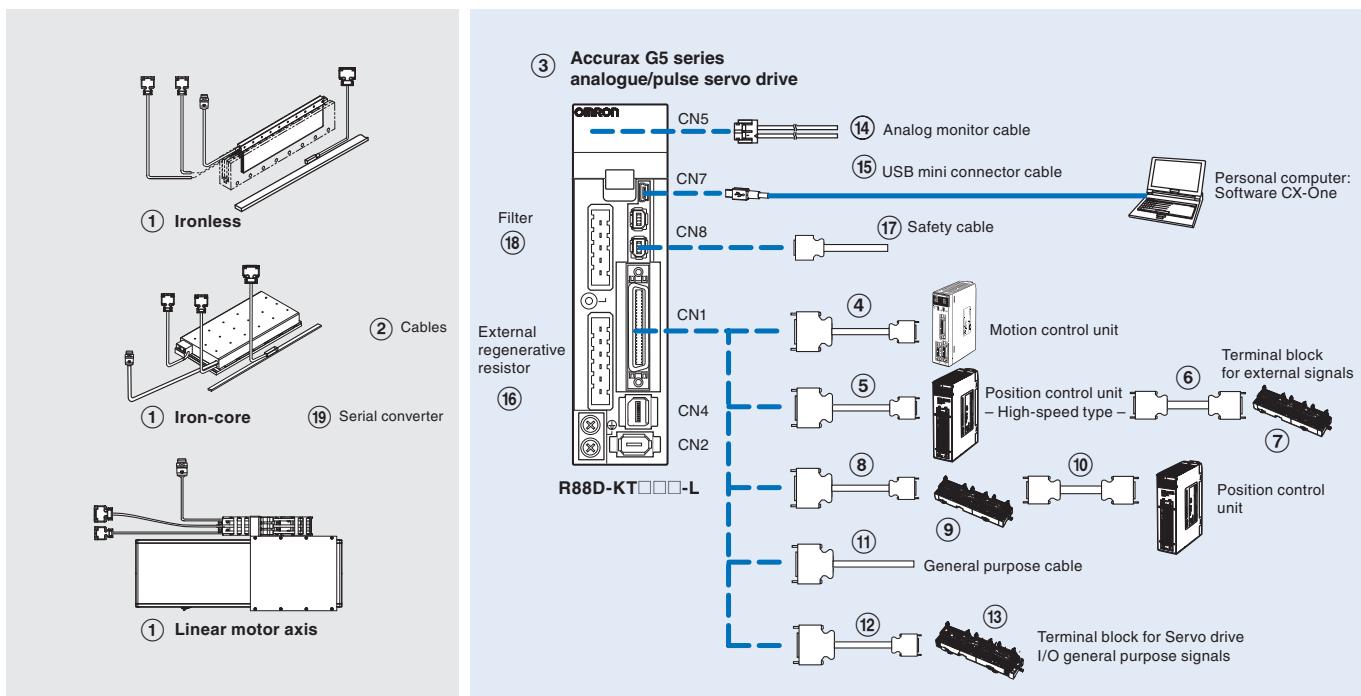

Note: The symbols ①②③④⑤ ... show the recommended sequence to select the components in Accurax G5 servo system

Servo motors, power and encoder cables

Note: ①②⑯ Refer to the Accurax G5 linear motor chapter for linear motor, cables or connectors selection

Servo drives

Symbol	Specifications	Servo drive models	① Compatible Accurax G5 Linear motors		
			Iron-core motors	Ironless motors	Linear motor axis
③	1 phase 230 VAC	R88D-KT02H-L	R88L-EC-FW-0303-□	R88L-EC-GW-0303-□ R88L-EC-GW-0503-□	R88L-EA-AF-0303-□
		R88D-KT04H-L	R88L-EC-FW-0306-□	R88L-EC-GW-0506-□ R88L-EC-GW-0703-□	R88L-EA-AF-0306-□
		R88D-KT08H-L	R88L-EC-FW-0606-□	R88L-EC-GW-0306-□ R88L-EC-GW-0509-□ R88L-EC-GW-0706-□	R88L-EA-AF-0606-□
		R88D-KT10H-L	R88L-EC-FW-0609-□	R88L-EC-GW-0309-□ R88L-EC-FW-0709-□	R88L-EA-AF-0609-□
		R88D-KT15H-L	R88L-EC-FW-0612-□ R88L-EC-FW-1112-□ R88L-EC-FW-1115-□	-	R88L-EA-AF-0612-□ R88L-EA-AF-1112-□ R88L-EA-AF-1115-□
	3 phase 400 VAC	R88D-KT06F-L	R88L-EC-FW-0303-□	-	-
		R88D-KT10F-L	R88L-EC-FW-0306-□	-	R88L-EA-AF-0303-□ R88L-EA-AF-0306-□
		R88D-KT15F-L	R88L-EC-FW-0606-□	-	R88L-EA-AF-0606-□
		R88D-KT20F-L	R88L-EC-FW-0609-□	-	R88L-EA-AF-0609-□
		R88D-KT30F-L	R88L-EC-FW-0612-□ R88L-EC-FW-1112-□ R88L-EC-FW-1115-□	-	R88L-EA-AF-0612-□ R88L-EA-AF-1112-□ R88L-EA-AF-1115-□

Control cables (CN1)

Symbol	Description	Connect to		Model
(4)	Control cable (1 axis)	Motion control units CS1W-MC221 CS1W-MC421	1 m 2 m 3 m 5 m	R88A-CPG001M1 R88A-CPG002M1 R88A-CPG003M1 R88A-CPG005M1
	Control cable (2 axes)	Motion control units CS1W-MC221-V1 CS1W-MC421-V1	1 m 2 m 3 m 5 m	R88A-CPG001M2 R88A-CPG002M2 R88A-CPG003M2 R88A-CPG005M2
(5)	Control cable (line-driver output for 1 axis)	Position control units (high-speed type) CJ1W-NC234 CJ1W-NC434	1 m 5 m 10 m	XW2Z-100J-G9 XW2Z-500J-G9 XW2Z-10MJ-G9
	Control cable (open-collector output for 1 axis)	Position control units (high-speed type) CJ1W-NC214 CJ1W-NC414	1 m 3 m	XW2Z-100J-G13 XW2Z-300J-G13
	Control cable (line-driver output for 2 axes)	Position control units (high-speed type) CJ1W-NC234 CJ1W-NC434	1 m 5 m 10 m	XW2Z-100J-G13 XW2Z-500J-G1 XW2Z-10MJ-G1
	Control cable (open-collector output for 2 axes)	Position control units (high-speed type) CJ1W-NC214 CJ1W-NC414	1 m 3 m	XW2Z-100J-G5 XW2Z-300J-G5
(6)	Terminal block cable for external signals (for input common, forward/reverse run prohibited inputs, emergency stop input, origin proximity input and interrupt input)	Position control units (high-speed type) CJ1W-NC234 CJ1W-NC434 CJ1W-NC214 CJ1W-NC414	0.5 m 1 m 2 m 3 m 5 m 10 m	XW2Z-C50X XW2Z-100X XW2Z-200X XW2Z-300X XW2Z-500X XW2Z-010X
(7)	Terminal block for external signals (M3 screw, pin terminals)		-	XW2B-20G4
	Terminal block for ext. signals (M3.5 screw, fork/round terminals)		-	XW2B-20G5
	Terminal block for ext. signals (M3 screw, fork/round terminals)		-	XW2D-20G6
(8)	Cable from servo relay unit to servo drive	CS1W-NC1□3, CJ1W-NC1□3, C200HW-NC113, CS1W-NC2□3/4□3, CJ1W-NC2□3/4□3, C200HW-NC213/413, CQM1H-PLB21 or CQM1-CPU43	1m 2m	XW2Z-100J-B25 XW2Z-200J-B25
		CJ1-CPU21/22/23	1m 2m	XW2Z-100J-B31 XW2Z-200J-B31
(9)	Servo relay unit	Position control units CS1W-NC1□3, CJ1W-NC1□3 or C200HW-NC113	-	XW2B-20J6-1B (1 axis)
		Position control units CS1W-NC2□3/433, CJ1W-NC2□3/433 or C200HW-NC213/413	-	XW2B-40J6-2B (2 axes)
		CQM1-PLB21 or CQM1-CPU43-V1	-	XW2B-20J6-3B (1 axis)
		CJ1M-CPU21/22/23	-	XW2B-20J6-8A (1 axis) XW2B-40J6-9A (2 axes)
(10)	Position control unit connecting cable	CQM1H-PLB21	0.5 m 1 m	XW2Z-050J-A3 XW2Z-100J-A3
		CS1W-NC113 or C200HW-NC113	0.5 m 1 m	XW2Z-050J-A6 XW2Z-100J-A6
		CS1W-NC213/413 or C200HW-NC213/413	0.5 m 1 m	XW2Z-050J-A7 XW2Z-100J-A7
		CS1W-NC133	0.5 m 1 m	XW2Z-050J-A10 XW2Z-100J-A10
		CS1W-NC233/433	0.5 m 1 m	XW2Z-050J-A11 XW2Z-100J-A11
		CJ1W-NC113	0.5 m 1 m	XW2Z-050J-A14 XW2Z-100J-A14
		CJ1W-NC213/413	0.5 m 1 m	XW2Z-050J-A15 XW2Z-100J-A15
		CJ1W-NC133	0.5 m 1 m	XW2Z-050J-A18 XW2Z-100J-A18
		CJ1W-NC233/433	0.5 m 1 m	XW2Z-050J-A19 XW2Z-100J-A19
		CJ1M-CPU21/22/23	0.5 m 1 m	XW2Z-050J-A33 XW2Z-100J-A33
(11)	General purpose cable	For general purpose controllers	1 m 2 m	R88A-CPG001S R88A-CPG002S
(12)	Terminal block cable	For general purpose controllers	1 m 2 m	XW2Z-100J-B24 XW2Z-200J-B24
(13)	Terminal block (M3 screw and for pin terminals)		-	XW2B-50G4
	Terminal block (M3.5 screw and for fork/round terminals)		-	XW2B-50G5
	Terminal block (M3 screw and for fork/round terminals)		-	XW2D-50G6

Analogue monitor (CN5)

Symbol	Name	Model
(14)	Analogue monitor cable	1 m R88A-CMK001S

USB personal computer cable (CN7)

Symbol	Name	Model
(15)	USB mini-connector cable	2 m AX-CUSBM002-E

External regenerative resistor

Symbol	Regenerative resistor unit model	Specifications
(16)	R88A-RR08050S	50 Ω, 20 W
	R88A-RR080100S	100 Ω, 20 W
	R88A-RR22047S	47 Ω, 70 W
	R88A-RR50020S	20 Ω, 180 W

Cable for Safety Functions (CN8)

Symbol	Description	Model
(17)	Safety connector with 3 m cable (with loose wires at one end)	R88A-CSK003S-E

Filters

Symbol	Applicable servodrive	Filter model	Manufacturer	Rated current	Leakage current	Rated voltage
(18)	R88D-KT02H-L	R88A-FIK102-RE	Rasmi Electronics Ltd	2.4 A	3.5 mA	250 VAC single-phase
	R88D-KT04H-L	R88A-FIK104-RE		4.1 A	3.5 mA	
	R88D-KT08H-L	R88A-FIK107-RE		6.6 A	3.5 mA	
	R88D-KT10H-L, R88D-KT15H-L	R88A-FIK114-RE		14.2 A	3.5 mA	
	R88D-KT06F-L, R88D-KT10F-L, R88D-KT15F-L	R88A-FIK304-RE		4 A	0.3 mA/32 mA ¹	400 VAC three-phase
	R88D-KT20F-L	R88A-FIK306-RE		6 A	0.3 mA/32 mA ¹	
	R88D-KT30F-L	R88A-FIK312-RE		12.1 A	0.3 mA/32 mA ¹	

1. Momentary peak leakage current for the filter at switch-on/off.

Connectors

Specifications	Model
I/O connector kit -50 pins-(for CN1)	R88A-CNU11C
External encoder connector (for CN4)	R88A-CN41L
Safety I/O signal connector (for CN8)	R88A-CN81S

Computer software

Specifications	Model
CX-Drive version 2.50 or higher	CX-DRIVE 2.50

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.
To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

Below is a list of articles with direct links to our shop Electric Automation Network where you can see:

- Quote per purchase volume in real time.
- Online documentation and datasheets of all products.
- Estimated delivery time enquiry in real time.
- Logistics systems for the shipment of materials almost anywhere in the world.
- Purchasing management, order record and tracking of shipments.

To access the product, [click on the green button](#).

Product	Code	Reference	Product link
Servos, Accurax G5 external encoder connector (for CN4)	294101	R88A-CNK41L	Buy on EAN
G5 series servo safety I/O connector [for CN8]	294100	R88A-CN81S	Buy on EAN
Servos, Drive Accurax G5 ETHERCAT, 100W, 200V	352679	R88D-KN01H-ECT	Buy on EAN
Servos, Drive Accurax G5 EtherCAT linear motors, 1kW, 200V	356050	R88D-KN10H-ECT-L	Buy on EAN
Servos, Drive Accurax G5 EtherCAT linear motors, 750W, 200V	356049	R88D-KN08H-ECT-L	Buy on EAN
Servos, Drive Accurax G5 EtherCAT linear motors, 400W, 200V	356048	R88D-KN04H-ECT-L	Buy on EAN
Servos, Drive Accurax G5 EtherCAT linear motors, 200W, 200V	356047	R88D-KN02H-ECT-L	Buy on EAN
Servos, Drive Accurax G5 EtherCAT linear motors, 100W, 200V	356046	R88D-KN01H-ECT-L	Buy on EAN
Servos, Drive Accurax G5 EtherCAT linear motors, 600W, 400V	356057	R88D-KN06F-ECT-L	Buy on EAN
Machine Controllers, NJ501 Axis Machine Controller 16	355309	NJ501-1300	Buy on EAN
Servos, Drive Accurax G5 EtherCAT linear motors, 3KW, 400V	356061	R88D-KN30F-ECT-L	Buy on EAN
Servos, Drive Accurax G5 EtherCAT linear motors, 3KW, 400V	356060	R88D-KN20F-ECT-L	Buy on EAN
Machine Controllers, NJ301 4 Axis Machine Controller	363842	NJ301-1100	Buy on EAN
Servos, Drive Accurax G5 EtherCAT linear motors, 1.5KW, 200V	356051	R88D-KN15H-ECT-L	Buy on EAN

Machine Controllers, NJ301 Machine Controller 8 Axles	363924	NJ301-1200	Buy on EAN
Drives, Servo Cable Accurax PC G5 / MX2 inverter (mini USB)	322128	AX-CUSBM002-E	Buy on EAN
Servos, Accurax G5, Analog Monitor Cable, 1m [to CN5]	382802	R88A-CMK001S	Buy on EAN
	324250	R88L-EC-FW-1112-APLC	Buy on EAN
Servos, Series G / G5 RFI filter; 14.2A, 250VAC, for models 1.0 and 1.5KW	283805	R88A-FIK114-RE	Buy on EAN
Servos, Series G / G5 RFI filter; 4.1A, 250VAC, for 400W models	283803	R88A-FIK104-RE	Buy on EAN
Servos, Accurax G5 Cable E / S 2m general purpose (for CN1)	323498	XW2Z-200J-B34	Buy on EAN
Servos, Accurax G5 Cable E / S 1m general purpose (for CN1)	323497	XW2Z-100J-B34	Buy on EAN
Servos, RFI filter G5; 4A, 400VAC, for models 600 to 1.5KW	303857	R88A-FIK304-RE	Buy on EAN
Servos, Drive Accurax G5 Analogue / Pulse Linear Motors, 750W, 200V	340298	R88D-KT08H-L	Buy on EAN
Servos, Drive Accurax G5 Analogue / Pulse Linear Motors, 400W, 200V	336933	R88D-KT04H-L	Buy on EAN
Servos, Accurax G5, 5m cable for external encoder (for CN4)	349416	R88A-CRKM005SR-E	Buy on EAN
Servos, RFI filter G5; 6A, 400VAC, for models 2.0KW	303858	R88A-FIK306-RE	Buy on EAN
Servos, RFI filter G5; 12A, 400VAC, for models from 3.0 to 5.0kW	303859	R88A-FIK312-RE	Buy on EAN
Servos, Drive Accurax G5 EtherCAT linear motors, 1kW, 400V	356058	R88D-KN10F-ECT-L	Buy on EAN
Servos, Drive Accurax G5 EtherCAT linear motors, 1.5KW, 400V	356059	R88D-KN15F-ECT-L	Buy on EAN
	324834	R88L-EC-GW-0709-APLS	Buy on EAN
Motion Control Trajexia - EtherCAT Master Module - 16 axes	352416	TJ2-ECT16	Buy on EAN
Motion Control Trajexia - EtherCAT Master Module - 64 axes	352417	TJ2-ECT64	Buy on EAN
Motion Control Trajexia - EtherCAT Master Module - 4 axes	352415	TJ2-ECT04	Buy on EAN
Servos, Drive Accurax G5 Analogue / Pulse Linear Motors, 750W, 200V	336936	R88D-KT15H-L	Buy on EAN
Machine Controllers, Controller 32 Machine NJ501 Axles	355310	NJ501-1400	Buy on EAN
Machine Controllers, Controller 64 Machine NJ501 Axles	355311	NJ501-1500	Buy on EAN

Machine Controllers, CPU Sysmac NJ Power Supply 100-240 VAC	355312	NJ-PA3001	Buy on EAN
Servos, Accurax G5, 10m cable for external encoder (for CN4)	349417	R88A-CRKM010SR-E	Buy on EAN
Servos, general purpose Cable 1m Accurax G5 servo ML2 and EtherCAT	349414	R88A-CPKB001S-E	Buy on EAN
Servos, general purpose Cable 2m for Accurax G5 servo ML2 and EtherCAT	349415	R88A-CPKB002S-E	Buy on EAN
Servos, Accurax G5, 20m cable for external encoder (for CN4)	349418	R88A-CRKM020SR-E	Buy on EAN
Cable (CN8) for safety functions [3m cable]	331798	R88A-CSK003S-E	Buy on EAN
Servos, Drive Accurax G5 ETHERCAT, 600W, 400V	352685	R88D-KN06F-ECT	Buy on EAN
Machine Controllers, CPU Sysmac NJ 24 VDC Power Supply	355313	NJ-PD3001	Buy on EAN
Servos, Accurax G5: Omron Linear Motor Coil Type FW0612	352728	R88L-EC-FW-0612-APLC	Buy on EAN
Servos, Accurax G5: Omron Type Linear Motor FW0306 without connectors	352720	R88L-EC-FW-0306-ANPC	Buy on EAN
Servos, Accurax G5: Omron Type Linear Motor FW0612 without connectors	352725	R88L-EC-FW-0612-ANPC	Buy on EAN
Servos, Accurax G5: Omron Type Linear Motor FW0606	352726	R88L-EC-FW-0606-APLC	Buy on EAN
Servos, Accurax G5: Omron Type Linear Motor FW0609	352727	R88L-EC-FW-0609-APLC	Buy on EAN
Servos, Accurax G5: Omron Type Linear Motor GW0709 without connectors	324831	R88L-EC-GW-0709-ANPS	Buy on EAN
Servos, Accurax G5: Omron Linear Motor Coil Type GW0306 (without connectors)	324816	R88L-EC-GW-0306-ANPS	Buy on EAN
Servos, Accurax G5: Omron Linear Motor Coil Type GW0303 (without connectors)	324815	R88L-EC-GW-0303-ANPS	Buy on EAN
Servos, Series G / G5 RFI filter; 2.4A, 250VAC, for models 100 and 200W	283802	R88A-FIK102-RE	Buy on EAN