

Explanation

V/P = Vehicle / Person with differentiation

Using this function, it is possible to select whether the two relays should be switched separately in response to person (R2) or vehicles (R1).

VorP = Vehicle or person with direction segregation

Using this function, it is possible to select whether the relays should be switched regarding only the direction indifferently of people or vehicles.

VR = Vehicle rejection

The R2 relay switches in response only to person.

PR = Person rejection

The R1 relay switches in response only to vehicle. It can be happen a spurious switching in response of person along the border of detection area.

Attention

The discrimination between a persons and the different vehicles depends mainly on the mounting height and the unit inclination angle. Use also the other two functions like IMMUNITY, LTS, to obtain the required rejection level.

QP = Quasi-presence detection

The slightest (quasi-static) movements are detected as soon as the industrial door has been open. The sensitivity during the opening time of the door is increased by one level. The industrial door is only closed if no more movement over the increased sensitivity is monitored.

F / B = Forward / Backward detection

Forward: detection of objects moving towards the sensor.

Backward: detection of objects moving away from the sensor.

BID = uni-directional / bi-directional movement detection

Respect to initial factory setting direction detection cannot be changed in the VorP operating mode (Vehicle or person detection with direction segregation) where it remains unidirectional.

LTS = lateral traffic suppression

Lateral traffic suppression prevents an industrial door from being inadvertently opened by objects that are only moving or walking past it but do not want to pass through. It is effective at level 4 and 5 of sensitivity as large detection area is needed. To be effective it should be also adopted an inclination angle of the sensor of 30°-45°.

With this function the reaction time of the sensor is improved to 0,5".

IMM = immunity

Immunity function. This function is used to avoid false activation of the sensor due to environmental interferences (vibrations, rains, etc). Be careful that the immunity function increases the response time of the sensor.

R1, R2 = relay

During initial setting or maintenance of door system the two relays R1 and R2 can be separately activated by remote controller using these buttons in a toggle way. When this is done the sensor stops to detect the target and it can restart again by pressing the AUTO button. These R1 and R2 buttons should also be used for setting the "Relay Configuration at the Detection". After this setting the button AUTO should be pushed to restore the normal operating condition of the sensor. Example: by pressing R1 button the relay #1 has been set to OFF; by R2 button relay #2 has been set to ON. After having pressed AUTO button the rest condition of relay #1 will be OFF and that of relay #2 ON.

AUTO = automatic door opening

Normal operating condition of the sensor.

DV = display values

Pressing this button followed by the button of the function to be checked it is possible to display its current value. It is applicable to only these functions: SENSITIVITY, HOLD TIME, DIRECTION RECOGNITION and MOUNTING HEIGHT. Example: pressing in sequence DV+SENS buttons the GREEN LED will display the value of 6 where the sensitivity has been set at this value. Repeat this operation to check the value of other parameters, if required.

Signalling by LED

The RED and GREEN LED flash in the following conditions:

- When power is turned ON, the GREEN LED flashes for 3 seconds.
- During a object detection the GREEN or RED LED lights ON (depending by operating mode setting).
- During programming procedure by remote controller the RED LED flashes many times as the function being modified (see following table). A blind time of 5 seconds will be inserted during the signalling.
- During manual programming procedure the RED and GREEN LED flash a number of time corresponding to the step of the procedure (see description of the procedure).


Relay vs Function

RELAY #	IR REMOTE CONTROLLER BUTTON	FUNCTION	LED	DIRECTION	CONNECTION PIN
1	R1	Vehicles	RED	Forward (also Backward & Bidirection in PR operating mode)	COM - PIN5
					NO - PIN4
					NC - PIN3
2	R2	Persons	GREEN	Backward (also Forward & Bidirection in VR operating mode)	COM - PIN8
					NO - PIN7
					NC - PIN6

Relay configuration at NO DETECTION

	LED OFF	LED ON
R1 / Red LED		
R2 / Green LED		

Description of Infrared remote controller

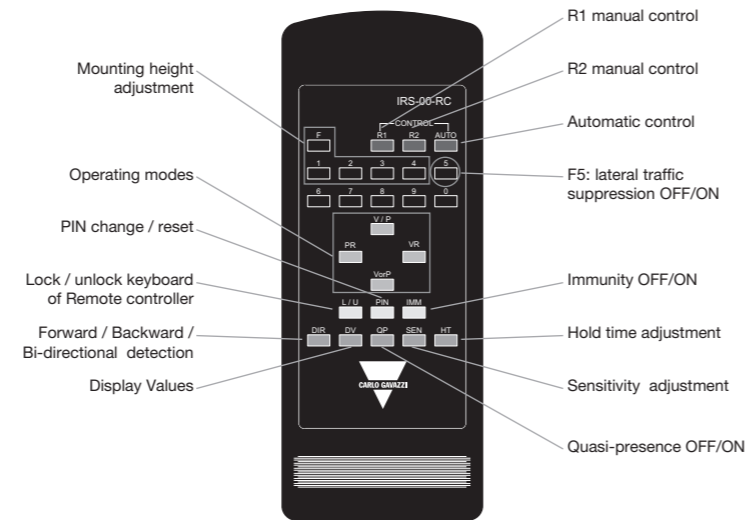

Note: For optimum results point the remote control at the sensor before pressing its buttons.

Note: before using the remote controller

- open the battery compartment at the back of the remote control;
- insert two AAA batteries supplied with the remote control;
- close the batteries compartment.

Remote controller enable/disable


Current status of remote controller	Function to be activated	Button to be typed on the remote controller	Signalling by RED LED on the sensor	Status Modification
Keyboard unlocked	Display of Keyboard status	L/U	1 flash	None
Keyboard locked		L/U	2 flashes	Keyboard locked
Keyboard unlocked	Disabling	L/U	1 flash	None
Keyboard locked	Enabling	L/U	2 flashes	Keyboard locked
		L/U	2 flashes	None
		PIN	1 flash	Ready to accept 4 digits
Keyboard unlocked	PIN change	L/U	4 digits of current PIN code	None
		PIN	1 flash	Waiting confirmation
		PIN	1 flash	Confirmation done
		L/U	4 digits of current PIN code	None
		PIN	1 flash	New PIN code

Sensing field adjustment according to Sensitivity setting and mounting Height

The sensing field area size (lobo) depends on the sensitivity parameter setting and the radar mounting height.


Sensing Field adjustment

Mechanical sensor orientation

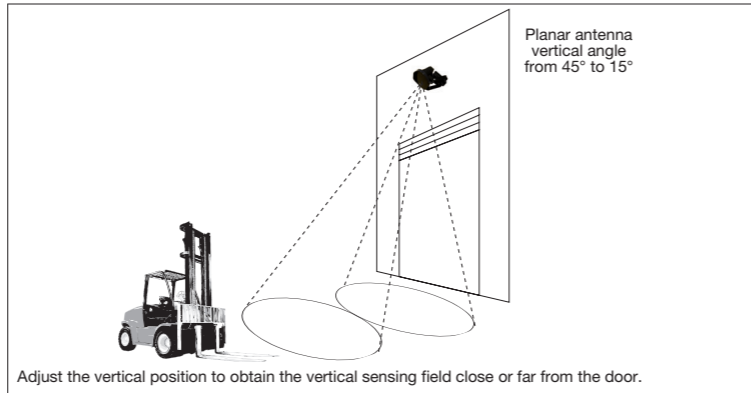


Maximum field extension (with level 5 as sensitivity)

Mounting height: 4.5m with 3 different inclination angles.

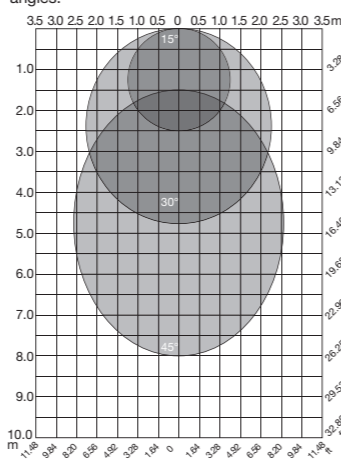

Mounting height: 7m with 3 different inclination angles.

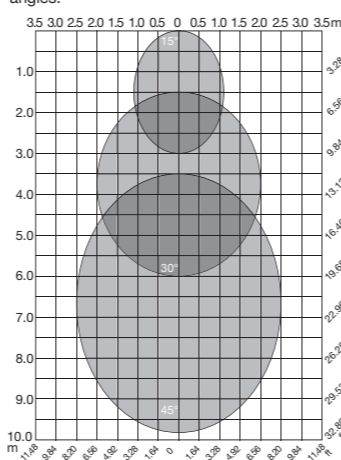

IR remote controller setting procedure

The table below lists all the functions which can be adjusted with remote controller as well as how to adjust them.

KEY	FUNCTION	LEVELS	RANGE	DESCRIPTION	FACTORY SETTING	LED SIGNAL		
F1...F4*	Mounting height	1	2.5-3.5	Distance of the fixing point on the wall from ground	1	RED LED flashes many times as the selected level. Example: typing F3 keys 3 flashes of the RED LED will be noted: the height is set at the level 3.		
		2	3.5-4.5					
		3	4.5-5.5					
		4	5.5-7					
SEN+ 1...5**	Field size	1	See pictures		3	Same as above		
		2						
		3					1-2: small	
		4					3-4: medium	
		5					5: large	
HT+ 1...5**	Relay hold time	1	0.5"	Extension of the relay activation time	1	Same as above		
		2	1"					
		3	2"					
		4	4"					
		5	6"					
DIR	Direction recognition	-	FW or BKW or BID	FW: unidirectional approaching BKW: unidirectional departing BID: bi-directional / Unidirectional detection	FW	RED LED flashes one time in response to FW detection, two times for BKW detection and three times for BiDirectional.		
		-	DV+HT DV+SEN DV+DIR DV+AUT	DV+HT: display the value of HOLD TIME DV+SEN: display the value of SENSITIVITY DV+DIR: display the value of DIRECTION DV+AUT: display the value of MOUNTING HEIGHT	-	RED LED flashes many times as the value of selected function. The maximum number of flashes are: 5 for HOLD TIME and SENSITIVITY, 3 for DIRECTION and 4 for MOUNTING HEIGHT		
		-						
V/P PR VR VorP	Operating modes (or relay assignment)	-	-	V/P: differentiation between people and vehicles PR: people suppression VR: vehicle suppression VorP: people or vehicles with direction segregation	V or P	RED LED flashes - 1 time in response to V/P - 2 times for PR, - 3 times for VR, - 4 times for VorP		
		F5*	LTS	-	OFF/ON	Lateral traffic suppression (see explanations) "Toggle" type function.	OFF	RED LED flashes one time in response to OFF selection and two times for ON
		QP	Quasi-presence	-	OFF/ON	Quasi-presence detection (see explanations) "Toggle" type function.	OFF	RED LED flashes one time in response to OFF selection and two times for ON
		IMM	Immunity	-	OFF/ON	Immunity (see explanations). "Toggle" type function.	OFF	RED LED flashes one time in response to OFF selection and two times for ON
R1 R2 AUTO	Industrial door control	-	-	R1: manual control of relay #1 by remote controller "Toggle" type function. R2: manual control of relay #2 by remote controller "Toggle" type function. AUTO: restoring of normal detection condition	AUTO	The corresponding LED (see the table "Relay vs Functions" and "Relay configuration at NO DETECTION") will be switched ON (and OFF)		
L/U	Keyboard lock/unlock	-	Lock/Unlock	Locking/Unlocking keyboard of controller. "Toggle" function type.	Unlock	RED LED flashes one time in response to UNLOCK selection and two times for LOCK		
PIN	PIN modifying or resetting	-	Mod/Reset	Modify or reset the 4 digit PIN to lock/unlock the keyboard of remote controller. "Toggle" function type.	0000	RED LED flashes one time in response to the first activation and two times at the end of procedure		

* F button pressed contemporary with 1.5 button.


** Function button pressed for 1" followed by button level (1...5) after a pause of 1"

Manual programming

The sensor can be manually programmed using two push-buttons accessible inside the housing after having removed the front closure. Pay attention do not touch the antenna with a fingers.

Configuration keys

Press Keys PB1 and PB2 at the same time for at least 1" to gain access to manual programming, then release. The RED and GREEN LED will light ON together for 1" for indicating the starting of procedure at first level. It follows the flashing of GREEN LED to signal the level (one in this case) and the flashing of RED LED to signal the programmed value. Then the flashing of LEDs will follow with the same sequence until 1 min. and 1/2 will be elapsed.

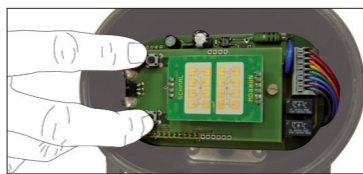

The table beside shows the sequence of programmable functions and the corresponding numbers of selectable values.

LEVEL	FUNCTION	N° OF SELECTABLE VALUES	VALUES
1	SENSITIVITY	5	1 (low)...5 (high)
2	HOLD TIME	5	1 (0.5")...5 (6")
3	MOUNTING HEIGHT	4	1 (2.5-3.5m)... 4 (5.5-7m)
4	OPERATING MODE	4	V/P, PR, VR, VorP
5	DIRECTION	3	OFF / ON
6	IMMUNITY	2	OFF / ON
7	QUASI-PRESENCE	2	OFF / ON
8	LATERAL TRAFFIC SUPPRESSION	2	OFF / ON

Do nothing at a specified level

The GREEN LED will light ON for 1" many times as corresponding level followed by shorter flashing of RED LED many times as it is the value previously programmed inside. Then the flashing of RED and GREEN LED will follow with the same sequence in revolving way until 1 min and ½ will be elapsed.

Changing the Function

To pass from one level (function) to the following one, press again both the buttons for 1". The changing will be signalled by RED and GREEN ON for 1". Then The GREEN LED will flash correspondingly many times as level reached and RED LED will flash correspondingly to the memorized value. Once the last level (level 8) has been reached, attempting to switch to higher level the program jumps back to the first one again.

Changing the value

To pass to higher value (or to switch to ON condition) press for 1" PB2 button indicated as '+'. To switch to a lower value (or to switch to OFF condition), press for 1" PB1 button indicated as '-'. The RED LED will flash a number of pulses correspondingly to the stored value previously programmed.

Ending the programming mode

The manual programming procedure will automatically terminated when 1 min. and 1/2 from last activation of any button will be elapsed.

Trouble Shooting

DEFECT	PROBABLE CAUSE	RECOVERY ACTION
The door will not open and any LED do not light up	The sensor power is OFF	Check the electrical wiring connections Check the power supply
The door opens and closes frequently for no apparent reason	The sensor detects the door moving Vibrations picked up by the sensor when the door is moving	Change the inclination angle of the sensor or reduce sensitivity Verify the robust fixing of sensor Reduce the sensitivity
False tripping of door opening	Interference source disturbs the detection field	Switch the sensor to UNidirectional mode Be sure the fluorescent tubes do not affect the detection lobe Activate the IMMUNITY function
Delayed detection or non-detection of persons	Detection area too small or/and incorrect fixing height selected	Verify the detection area size Verify the fixing height set Check setting for wider area
Person/Vehicle incorrect identification	Incorrect fixing height selected Weak batteries	Set the correct fixing height Check setting for wider area Change battery insertion and voltage
The sensor does not respond to the remote controller	PIN code has been changed	To restore the factory value of PIN code switch OFF the supply. Within 45" after power ON, push PIN button followed by 0 (zero) on the keyboard of remote controller to reset PIN code.

Warranty

Carlo Gavazzi guarantees radar device to be free of manufacturing defects for 2 Years from purchasing date. The guarantee intervenes when the device presents a material defect. The faulty device can be returned back to our factory and will be repaired free of charge. If the defect is due to an exceeding of the permissible technical data, wrong wiring, not permissible changes in equipment by the user or a faulty operation no guarantee is carried out.