## OMRON

Machine Automation Controller

## NX7


Flagship controller performs large-scale, high-speed, high-accuracy control by synchronizing up to 256 axes with the fastest cycle time of 125 µs



### Features

- Implemented OPC UA as standard feature.
   Implemented OPC UA (NX701-1
- Integration of Logic and Motion in one CPU.
- Conforms to IEC 61131-3 (JIS B 3503) standard programming and PLCopen function blocks for Motion Control. Programming with variables allows users to create complex programs efficiently.
- Fast and accurate control by synchronizing all EtherCAT devices, such as vision sensors, servo drives, and field devices, with the PLC and Motion Engines.
- Offers speed without compromising on reliability and robustness expected from PLCs.
- Complete RAS functions: Transmission frame error check, timeout, bus diagnosis, Watchdog (WDT), memory check, and topology check, etc.
- Ideal for large-scale, fast, and highly-accurate control with up to 256 axes.
- Linear and circular interpolation.
- Electronic gear and cam synchronization.
- The Controller can be directly connected to a database. No special Unit, software, nor middleware is required. (NX701-1220)

### NX7 System Configuration

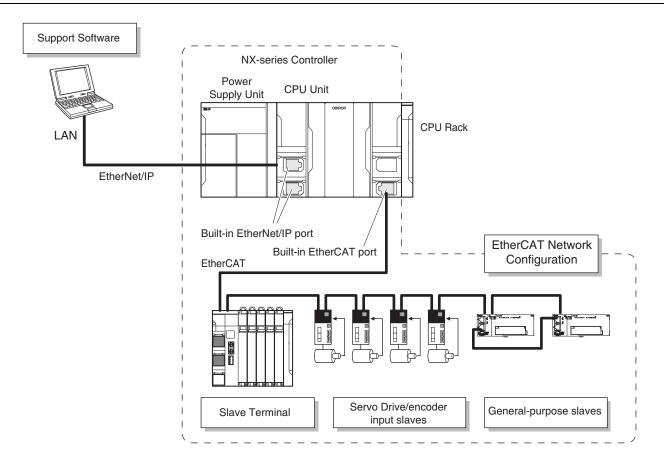

### **Ordering Information**

#### Applicable standards

Refer to the OMRON website (www.ia.omron.com) or ask your OMRON representative for the most recent applicable standards for each model.

### NX701 CPU Units

Product Name		Specifications		Current (Power)	Model
Product Name	Program capacity	Memory capacity for variables	Number of motion axes	consumption	Model
NX701 CPU Units OPC UA Support		4 MB: Retained during power interruption	256		NX701-1700
		256 MB: Not retained during power interruption	128		NX701-1600
NX701 Database Connection CPU Units	80 MB	4 MB: Retained during power interruption	256	40 W (including SD Memory Card and End Cover)	NX701-1720 *1
		256 MB: Not retained during power interruption (including Memory for CJ-series Units)	128		NX701-1620 *1

\*1. NX701-1720-DH, NX701-1620-DH are products equipped with time series data collection system. Consult your Omron sales representative for details.

### Accessories

The following accessories come with the CPU Unit.

Product Name	Model						
Product Name	NX701-1□00	NX701-1□20					
Battery	CJ1W-BAT01						
End Cover	NX-END01 (must be attached to the right end of the CPU Rack)						
End Plate	-						
Fan Unit	NX-FAN01						
SD Memory Card (Flash Memory)		HMC-SD492					

### **Power Supply Units**

One Power Supply Unit is required for each Rack.

Product Name	Power supply	Output capacity	Untions			
Product Name	voltage	Total power consumption	24-VDC service power supply	RUN output	Maintenance forecast monitor	Model
AC Power Supply Unit	100 to 240 VAC	90 W	No	Yes	No	NX-PA9001
DC Power Supply Unit	24 VDC	70 W	INO	No fes No		NX-PD7001

### **Automation Software Sysmac Studio**

Please purchase a DVD and required number of licenses the first time you purchase the Sysmac Studio. DVDs and licenses are available individually. Each model of licenses does not include any DVD.

		_		
Product name	Specifications	Number of licenses	Media	Model
	The Sysmac Studio is the software that provides an integrated environment for setting, programming, debugging and maintenance of machine automation controllers including NJ/ NX-series CPU Units, NY-series Industrial PC, EtherCAT Slaves, and HMI.	_ (Media only)	Sysmac Studio (32-bit) DVD	SYSMAC-SE200D
Sysmac Studio Standard Edition Ver.1.□□	Sysmac Studio runs on the following OS. Windows 7 (32-bit/64-bit version)/Windows 8 (32-bit/64-bit version)/ Windows 8.1 (32-bit/64-bit version)/Windows 10 (32-bit/64-bit version) *1	_ (Media only)	Sysmac Studio (64-bit) DVD	SYSMAC-SE200D-64
	The Sysmac Studio Standard Edition DVD includes Support Software to set up EtherNet/IP Units, DeviceNet slaves, Serial Communications Units, and Support Software for creating screens on HMIs (CX-Designer). For details, refer to your OMRON website.	1 license *2	_	SYSMAC-SE201L
Sysmac Studio Team Development Option *3	Sysmac Studio Team Development Option is a licence to enable the project version control function.	1 license *2	_	SYSMAC-TA401L

\*1. Model "SYSMAC-SE200D-64" runs on Windows 10 (64 bit).
\*2. Multi licenses are available for the Sysmac Studio (3, 10, 30, or 50 licenses).

\*3. This product is a license only. You need the Sysmac Studio Standard Edition DVD media to install it.

This option can be used by applying the Team Development Option to Sysmac Studio version 1.20 or higher.

Project version control function is supported by CPU Unit version 1.16 or later.

### Collection of software functional components Sysmac Library

Please download it from following URL and install to Sysmac Studio.

http://www.ia.omron.com/sysmac\_library/

#### **Typical Models**

Product	Features	Model
Vibration Suppression Library	The Vibration Suppression Library is used to suppress residual vibration caused by the operation of machines.	SYSMAC-XR006
Device Operation Monitor Library	The Device Operation Monitor Library is used to monitor the operation of devices such as air cylinders, sensors, motors, and other devices.	SYSMAC-XR008
Dimension Measurement Library	The Dimension Measurement Library is used to dimension measurement with ZW-8000/7000/5000 Confocal Fiber Displacement Sensor, or E9NC-TA0 Contact-Type Smart Sensor.	SYSMAC-XR014

### **Recommended EtherCAT and EtherNet/IP Communications Cables**

Use a straight STP (shielded twisted-pair) cable of category 5 or higher with double shielding (aluminum tape and braiding) for EtherCAT.

For EtherNet/IP, required specification for the communications cables varies depending on the baud rate.

For 100BASE-TX/10BASE-T, use a straight or cross STP (shielded twisted-pair) cable of category 5 or higher.

For 1000BASE-T, use a straight or cross STP cable of category 5e or higher with double shielding (aluminum tape and braiding).

### **Cable with Connectors**

	Item	Recommended manufacturer	Cable length (m)	Model
	Cable with Connectors on Both Ends	OMRON	0.3	XS6W-6LSZH8SS30CM-Y
Wire Course and Number of Poirs	(RJ45/RJ45) Standard RJ45 plug type *1		0.5	XS6W-6LSZH8SS50CM-Y
Wire Gauge and Number of Pairs: AWG26, 4-pair Cable	Cable color: Yellow *3		1	XS6W-6LSZH8SS100CM-Y
Cable Sheath material: LSZH *2	$\bigcirc$		2	XS6W-6LSZH8SS200CM-Y
			3	XS6W-6LSZH8SS300CM-Y
			5	XS6W-6LSZH8SS500CM-Y
	Cable with Connectors on Both Ends	OMRON	0.3	XS5W-T421-AMD-K
	(RJ45/RJ45) Rugged RJ45 plug type *1		0.5	XS5W-T421-BMD-K
	Cable color: Light blue		1	XS5W-T421-CMD-K
	Cable with Connectors on Both Ends (M12 Straight/M12 Straight) Shield Strengthening Connector cable *4 M12/Smartclick Connectors Cable color: Black		2	XS5W-T421-DMD-K
			5	XS5W-T421-GMD-K
			10	XS5W-T421-JMD-K
		OMRON	0.5	XS5W-T421-BM2-SS
			1	XS5W-T421-CM2-SS
			2	XS5W-T421-DM2-SS
Vire Gauge and Number of Pairs: WG22, 2-pair cable			3	XS5W-T421-EM2-SS
			5	XS5W-T421-GM2-SS
	om O		10	XS5W-T421-JM2-SS
	Cable with Connectors on Both Ends (M12 Straight/RJ45)	OMRON	0.5	XS5W-T421-BMC-SS
	Shield Strengthening Connector cable *4		1	XS5W-T421-CMC-SS
	M12/Smartclick Connectors Rugged RJ45 plug type		2	XS5W-T421-DMC-SS
	Cable color: Black		3	XS5W-T421-EMC-SS
	-0-		5	XS5W-T421-GMC-SS
	- 0		10	XS5W-T421-JMC-SS

\*1. Cables with standard RJ45 plugs are available in the following lengths: 0.2 m, 0.3 m, 0.5 m, 1 m, 1.5 m, 2 m, 3 m, 5 m, 7.5 m, 10 m, 15 m, 20 m. Cables with rugged RJ45 plugs are available in the following lengths: 0.3 m, 0.5 m, 1 m, 2 m, 3 m, 5 m, 10 m, 15 m. For details, refer to the Industrial Ethernet Connectors Catalog (Cat. No. G019).

\*2. The lineup features Low Smoke Zero Halogen cables for in-cabinet use and PUR cables for out-of-cabinet use. Although the LSZH cable is single shielded, its communications and noise characteristics meet the standards.

\*3. Cable colors are available in yellow, green, and blue.
\*4. For details, contact your OMRON representative.

### **Cables / Connectors**

	Item		Recommended manufacturer	Model
Products for EtherCAT or EtherNet/IP (1000BASE-T*2/100BASE-TX)	Wire Gauge and Number of		Hitachi Metals, Ltd.	NETSTAR-C5E SAB 0.5 × 4P CP *1
	Pairs: AWG24, 4-pair	Cables	Kuramo Electric Co.	KETH-SB *1
	Cable		SWCC Showa Cable Systems Co.	FAE-5004 *1
		RJ45 Connectors	Panduit Corporation	MPS588-C *1
Products for EtherCAT or		Cables	Kuramo Electric Co.	KETH-PSB-OMR *3
EtherNet/IP (100BASE-TX/10BASE-T)			JMACS Japan Co., Ltd.	PNET/B *3
(TOUBAGE-TX TUBASE-T)	Wire Gauge and Number of Pairs: AWG22, 2-pair Cable	RJ45 Assembly Connector	OMRON	XS6G-T421-1 *3

\*1. We recommend you to use the above Cable and RJ45 Connector together.
\*2. The products can be used only with the NX701.
\*3. We recommend you to use the above Cable and RJ45 Assembly Connector together.

### **Optional Products and Maintenance Products**

Product name	Specifications	Model
	SD memory card, 2GB	HMC-SD291
Memory Cards	SDHC memory card, 4GB	HMC-SD492
	SDHC memory card, 16GB	HMC-SD1A1 *

\* 16 GB memory card can be used for a CPU Unit with unit version 1.21 or later.

Product name		Specifications	Model
Battery Set	Battery for NX701/NJ501/ NJ301/NJ101 NJ/NX-Series CPU Unit maintenance	<ol> <li>Note: 1. The battery is included as a standard accessory with the CPU Unit.</li> <li>2. The battery service life is 2.5 years at 25°C. (The service life depends on the ambient operating temperature and the power conditions.)</li> <li>3. Use batteries within two years of manufacture.</li> </ol>	C 11W DATO1
End Cover	Mounted to the right-hand side of NX-Series CPU Racks.	One End Cover is provided as a standard accessory with each CPU Unit and I/O Interface Unit.	NX-END01

### **DIN Track Accessories**

Product name	Specifications	Model
DIN Track	Length: 0.5 m; Height: 7.3 mm	PFP-50N
0000	Length: 1 m; Height: 7.3 mm	PFP-100N
	Length: 1 m; Height: 16 mm	PFP-100N2
End Plate	There are 2 stoppers provided with CPU Units and I/O Interface Units as standard accessories to secure the Units on the DIN Track.	PFP-M

### NX Units Digital Input Units

	Specification					
Product Name	Number of points	' I/() retreshind method		ON/OFF response time	Model	
C Input Unit			12 to 24 VDC	Switching Synchronous I/O refreshing and Free-	20 μs max./400 μs max.	NX-ID3317
		NPN		Run refreshing	100 no may /100 no may	NX-ID3343
	4		24 VDC	Input refreshing with input changed time only *	100 ns max./100 ns max.	NX-ID3344
4 points	4 points		12 to 24 VDC	Switching Synchronous I/O refreshing and Free-	20 μs max./400 μs max.	NX-ID3417
		PNP		Run refreshing	100 no may /100 no may	NX-ID3443
				Input refreshing with input changed time only *	100 ns max./100 ns max.	NX-ID3444
	0 mainta	NPN	24 VDC			NX-ID4342
Screwless Clamping erminal Block,	8 points	PNP	24 VDC	Switching Synchronous I/O refreshing and Free-	20 μs max./400 μs max.	NX-ID4442
2 mm Width)	16 points	NPN		Run refreshing	20 µ5 max./400 µ5 max.	NX-ID5342
	16 points	PNP				NX-ID5442
DC Input Unit	16 points	For both NPN/PNP	24 VDC	Switching Synchronous I/O refreshing and Free- Run refreshing	20 µs max./400 µs max.	NX-ID5142-1
IC Input Unit	16 points	For both	24 VDC	Switching Synchronous I/O refreshing and Free-	20 μs max./400 μs max.	NX-ID5142-5
MIL Connector, 80 mm Width)	32 points	NPN/PNP		Run refreshing		NX-ID6142-5
DC Input Unit	32 points	For both NPN/PNP	24 VDC	Switching Synchronous I/O refreshing and Free- Run refreshing	20 μs max./400 μs max.	NX-ID6142-6
AC Input Unit	4 points	200 to 240 V (170 to 264 V	/AC, 50/60 Hz VAC, ±3 Hz)	Free-Run refreshing	10 ms max./40 ms max.	NX-IA3117

\* To use input refreshing with input changed time, the EtherCAT Coupler Unit with unit version 1.1 or later and the Sysmac Studio version 1.07 or higher are required.

Due of the bit		1			fication		
Product Name	Number of points	Internal I/O common	Maximum value of load current	Rated voltage	I/O refreshing method	ON/OFF response time	Model
ransistor Output nit	2 points	NPN PNP	0.5 A/point, 1 A/Unit	24 VDC	Output refreshing with specified time stamp only *	300 ns max./ 300 ns max.	NX-OD2154 NX-OD2258
				12 to 24 VDC		0.1 ms max./ 0.8 ms max.	NX-OD3121
		NPN	0.5 A/point,			300 ns max./ 300 ns max.	NX-OD3153
	4 points		2 A/Unit			0.5 ms max./ 1.0 ms max.	NX-OD3256
Screwless Clamping erminal Block,		PNP		24 VDC		300 ns max./ 300 ns max.	NX-OD3257
2 mm Width)			2 A/point, 8 A/Unit		Switching Synchronous I/O refreshing and Free-Run refreshing	0.5 ms max./ 1.0 ms max.	NX-OD3268
	8 points	NPN		12 to 24 VDC	_	0.1 ms max./ 0.8 ms max.	NX-OD4121
	o points	PNP	0.5 A/point,	24 VDC	_	0.5 ms max./ 1.0 ms max.	NX-OD4256
	16 points	NPN	4 A/Unit	12 to 24 VDC		0.1 ms max./ 0.8 ms max.	NX-OD5121
	To pointo	PNP		24 VDC		0.5 ms max./ 1.0 ms max.	NX-OD5256
ransistor Output Init	16 pointo	NPN	0.5 A/point,	12 to 24 VDC	Switching Synchronous	0.1 ms max./ 0.8 ms max.	NX-OD5121-1
M3 Screw Terminal lock, 30 mm Width)	16 points	PNP	5 A/Unit	24 VDC	I/O refreshing and Free-Run refreshing	0.5 ms max./ 1.0 ms max.	NX-OD5256-1
ransistor Output nit		NPN	0.5 A/point,	12 to 24 VDC		0.1 ms max./ 0.8 ms max.	NX-OD5121-5
	16 points PNP	PNP	2 A/Unit	24 VDC	Switching Synchronous	0.5 ms max./ 1.0 ms max.	NX-OD5256-5
		NPN	0.5 A/point,	12 to 24 VDC	I/O refreshing and Free-Run refreshing	0.1 ms max./ 0.8 ms max.	NX-OD6121-5
MIL Connector, 00 mm Width)	32 points	PNP	2 A/common, 4 A/Unit	24 VDC		0.5 ms max./ 1.0 ms max.	NX-OD6256-5
Fransistor Output Jnit Fujitsu Connector, 30 mm Width)	32 points	NPN	0.5 A/point, 2 A/common, 4 A/Unit	12 to 24 VDC	Switching Synchronous I/O refreshing and Free-Run refreshing	0.1 ms max./ 0.8 ms max.	NX-OD6121-6
Relay Output Unit		N.O.	250 VAC/2 A (cos 250 VAC/2 A (cos			15 ms max./15	NX-OC2633
5	2 points	N.O.+N.C.	24 VDC/2 A 4 A/Unit	φ-0)	Free-Run refreshing	ns max./15	NX-OC2733
Screwless Clamping Ferminal Block, 12 mm Nidth/24 mm Width)	8 points	N.O.	250 VAC/2 A (cos 250 VAC/2 A (cos 24 VDC/2 A 8 A/Unit		Free-Run refreshing	15 ms max./15 ms max.	NX-OC4633

To use input refreshing with input changed time, the EtherCAT Coupler Unit with unit version 1.1 or later and the Sysmac Studio version 1.07 or higher are required.

### **Digital Mixed I/O Units**

			Spe	ecification		
Product Name	Number of points	Internal I/O common	Maximum value of load current	I/O refreshing method	ON/OFF response time	Model
DC Input/Transistor Output Unit	Outputs: 16 points	Outputs: NPN Inputs: 12 to 24 VDC For both NPN/PNP		Switching Synchronous I/O	Outputs: 0.1 ms max./0.8 ms max. Inputs: 20 μs max./400 μs max.	NX-MD6121-5
(MIL Connector, 30 mm Width)	Inputs: 16 points Unputs: PNP Inputs: For both NPN/F		Outputs: 24 VDC Inputs: 24 VDC	refreshing and Free-Run refreshing	Outputs: 0.5 ms max./1.0 ms max. Inputs: 20 µs max./400 µs max.	
DC Input/Transistor Output Unit (Fujitsu Connector, 30 mm Width)	Outputs: 16 points Inputs: 16 points	Outputs: NPN Inputs: For both NPN/PNP	Outputs: 12 to 24 VDC Inputs: 24 VDC	Switching Synchronous I/O refreshing and Free-Run refreshing	Outputs: 0.1 ms max./0.8 ms max. Inputs: 20 μs max./400 μs max.	NX-MD6121-6

### High-speed Analog Input Units

				Specifications					
Product name	Number	In nut you go	<b>D</b>		Conversion	Trigger input section		I/O	Model
poir	points	Input range	Resolution	Input method	time	Number of points	Internal I/O common	refreshing method	
High-speed Analog Input Unit	4	-10 to 10 V -5 to 5 V 0 to 10 V 0 to 5 V	<ul> <li>Input range of -10 to 10 V or -5 to 5 V: 1/64,000 (full scale)</li> </ul>	Differential input	5 μs per	4	NPN	Synchro- nous I/O	NX-HAD401
	- -	1 to 5 V 0 to 20 mA 4 to 20 mA	Other input range: 1/32,000 (full scale)	Dinerential Input	channel	+	PNP	refreshing	NX-HAD402

					Spec	cification				
Product Name	Number of points	Input range	Resolution	Conversion value, decimal number (0 to 100%)	Over all accuracy (25°C)	Input method	Conversion time	Input impedance	I/O refreshing method	Model
Voltage Input Unit			1/8000	-4000 to 4000	±0.2% (full scale)	Single-ended input	250 μs/ point		Free-Run refreshing	NX-AD260
	2 points				(iuii scale)	Differential Input	point			NX-AD260
	2 pointo		1/30000	-15000 to 15000	±0.1% (full scale)	Differential Input	10 μs/ point		Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-AD260
			1/8000	-4000 to 4000	±0.2% (full scale)	Single-ended input	250 μs/ point		Free-Run refreshing	NX-AD360
	4 points	-10 to			(iuii scale)	Differential Input	point	1 MΩ min.		NX-AD360
	, benue	+ +10 V	1/30000	-15000 to 15000	±0.1% (full scale)	Differential Input	10 μs/ point		Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-AD360
			1/8000	-4000 to 4000	±0.2% (full scale)	Single-ended input	250 μs/ point		Free-Run refreshing	NX-AD460
	8 points			(iuii souic)	Differential Input	point			NX-AD460	
			1/30000	-15000 to 15000	±0.1% (full scale)	Differential Input	10 μs/ point		Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-AD460
Current Input Unit			1/8000	0 to 8000	±0.2% (full scale)	Single-ended input	250 μs/ point		Free-Run refreshing	NX-AD220
	2 points				(iuii souic)	Differential Input	point			NX-AD220
		2 points	1/30000	0 to 30000	±0.1% (full scale)	Differential Input	10 μs/ point	250 Ω	Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-AD220
			1/8000	0 to 8000	±0.2% (full scale)	Single-ended input	250 μs/ point	230 32	Free-Run refreshing	NX-AD320
	4 points	4 to			(iuii souic)	Differential Input	point			NX-AD320
		4 points 20 mA	1/30000	0 to 30000	±0.1% (full scale)	Differential Input	10 μs/ point		Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-AD320
			1/8000	0 to 8000	±0.2% (full scale)	Single-ended input	250 μs/		Free-Run refreshing	NX-AD420
	8 points				(full scale) point point	Politi	85 Ω		NX-AD420	
	8 points		1/30000	0 to 30000	±0.1% (full scale)	Differential Input	10 μs/ point		Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-AD420

### Analog Input Units

### Analog Output Units

				Spec	ification			
Product Name	Number of points	Input range	Resolution	Output setting value, decimal number (0 to 100%)	Over all accuracy (25°C)	Conversion time	I/O refreshing method	Model
Voltage Output Unit	2 pointo		1/8000	-4000 to 4000	±0.3% (full scale)	250 μs/point	Free-Run refreshing	NX-DA2603
	2 points	-10 to +10 V	1/30000	-15000 to 15000	±0.1% (full scale)	10 μs/point	Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-DA2605
	4 points		1/8000	-4000 to 4000	±0.3% (full scale)	250 μs/point	Free-Run refreshing	NX-DA3603
	4 points		1/30000	-15000 to 15000	±0.1% (full scale)	10 μs/point	Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-DA3605
Current Output Unit	2 points		1/8000	0 to 8000	±0.3% (full scale)	250 μs/point	Free-Run refreshing	NX-DA2203
	2 points	4 to 20 mA	1/30000	0 to 30000	±0.1% (full scale)	10 μs/point	Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-DA2205
	4 points	4 10 20 MA	1/8000	0 to 8000	±0.3% (full scale)	250 μs/point	Free-Run refreshing	NX-DA3203
	4 points		1/30000	0 to 30000	±0.1% (full scale)	10 μs/point	Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-DA3205

				Speci	ifications								
Product name	Number of channels	Input type	Output of output points		Number of CT input points	Control type	Conversion time	I/O refreshing method	Model				
Temperature Control Unit 2-channel			Voltage output	2	2	Standard control	_		NX-TC2405				
Туре				(for driving SSR)		None	Standard control			NX-TC2406			
	2		Voltage output (for driving SSR)	4	None	Heating/cooling control			NX-TC2407				
		Universal input	Linear current output 2		None Standard control		50	Free-Run	NX-TC2408				
Cemperature Control Unit I-channel		(thermocou- ple, resistance thermometer)	ple, resistance	ple, resistance	ple, resistance	ple, resistance	Voltage output	4	4	Standard control	50 ms	refreshing	NX-TC3405
Гуре	4		(for driving SSR)	4	None	Standard control			NX-TC3406				
			Voltage output (for driving SSR) 8		None	Heating/cooling control			NX-TC3407				
		Linear current output 4		None	Standard control			NX-TC3408					

#### **Temperature Control Units**

### **Temperature Input Units**

Due duet				Specification				
Product Name	Number of points	Input type	Resolution (25°C)	Over all accuracy (25°C)	Conversion time	I/O refreshing method	Terminals	Model
Thermocouple Input type	2 points		0.1°C max.		250 ms/Unit		16 Terminals	NX-TS2101
	4 points		*1				16 Terminals x 2	NX-TS3101
5	2 points	Thermeseurle	0.01°C max.		10 ms/Unit	+	16 Terminals	NX-TS2102
	4 points	Thermocouple	0.01°C max.				16 Terminals x 2	NX-TS3102
	2 points		0.001°C max.	Refer to your OMRON website for details.	60 ms/Unit		16 Terminals	NX-TS2104
	4 points					Free-Run refreshing	16 Terminals x 2	NX-TS3104
Resistance Thermometer	2 points						16 Terminals	NX-TS2201
Input type	4 points		0.1 C Illax.		250 ms/0m		16 Terminals x 2	NX-TS3201
	2 points	Resistance Thermometer	0.01°C max.		10 ms/Unit	_	16 Terminals	NX-TS2202
	4 points	(Pt100/Pt1000, three- wire) *2	0.01°C max.		TO MS/ONI		16 Terminals x 2	NX-TS3202
	2 points		0.001%C may		60 mg/l lpit		16 Terminals	NX-TS2204
	4 points		0.001°C max.		60 ms/Unit		16 Terminals x 2	NX-TS3204

\*1. The resolution is 0.2°C max. when the input type is R, S, or W. \*2. The NX-TS2202 and NX-TS3202 only supports Pt100 three-wire sensor.

#### **Heater Burnout Detection Units**

				Specification				
Product Name	CT ir	put section		Conti	rol output sectio	n		Model
	Number of inputs	Maximum heater current	Number of outputs	Internal I/O common	Maximum load current	Rated voltage	I/O refreshing method	model
Heater Burnout Detection Unit		50.000		NPN	0.1 A/point,	12 to 24 VDC	Free-Run	NX-HB3101
	4	50 AAC	4	PNP	0.4 A/Unit	24 VDC	refreshing	NX-HB3201

### Load Cell Input Unit

			Specification			
Product Name	Number of Model Standards points	Conversion cycle	I/O refreshing method *	Load cell excitation voltage	Input range	Model
Load Cell Input Unit	1	125 μs	<ul> <li>Free-Run refreshing</li> <li>Synchronous I/O refreshing</li> <li>Task period prioritized refreshing</li> </ul>	5 VDC ± 10%	-5.0 to 5.0 mV/V	NX-RS1201

\* Refer to the NX-series Load Cell Input Unit User's Manual (W565) for detailed information on I/O refresh cycle.

### Position interface: Incremental Encoder Input Units

				Specification		
Product Name	Number of channels	External inputs	Maximum response frequency	I/O refreshing method	Number of I/O entry mappings	Model
Incremental Encoder Input	1 (NPN)	3 (NPN)	500 kHz			NX-EC0112
Unit	1 (PNP)	3 (PNP)	500 KH2		1/1	NX-EC0122
	1	3 (NPN)	4 MHz	Free-Run refreshing	1/1	NX-EC0132
	I	3 (PNP)	4 MITZ	Synchronous I/O refreshing		NX-EC0142
	2 (NPN)		500.111			NX-EC0212
	2 (PNP)	None	500 kHz		2/2	NX-EC0222

#### Position interface: SSI Input Units

			Specificati	on		
Product Name	Number of channels	Input/Output form	Maximum data length	Encoder power supply	Type of external connections	Model
SSI Input Unit	1	EIA standard RS-422-A	32 bits	24 VDC, 0.3 A/CH	Screwless push-in terminal block (12 terminals)	NX-ECS112
	2	EIA standard RS-422-A	32 bits	24 VDC, 0.3 A/CH	Screwless push-in terminal block (12 terminals)	NX-ECS212

### Position interface: Pulse Output Units

				Spe	ecification			
Product Name	Number of channels *1	External inputs	External outputs	Maximum pulse output speed	I/O refreshing method	Number of I/O entry mappings	Control output interface	Model
Pulse Output	itput 1 (NPN) 2 (N		1 (NPN)	EQQ lympa			Open collector	NX-PG0112
Unit	1 (PNP) 2 (PNP)	2 (PNP)	1 (PNP)	500 kpps		1/1	output	NX-PG0122
	(NPN)	5 inputs/CH (NPN)	3 outputs/CH (NPN)		<ul> <li>Synchronous I/O refreshing</li> <li>Task period prioritized refreshing *2</li> </ul>		Line driver output	NX-PG0232-5
	2	5 inputs/CH (PNP)	3 outputs/CH (PNP)	4 Мала				NX-PG0242-5
		5 inputs/CH (NPN)	3 outputs/CH (NPN)	4 Mpps				NX-PG0332-5
4		5 inputs/CH (PNP)	3 outputs/CH (PNP)			4/4		NX-PG0342-5

\*1. This is the number of pulse output channels.\*2. Unit version 1.2 or later and an NX-ECC203 EtherCAT Coupler Unit are required.

### **Communications Interface Units**

OMRON

Product Name	Serial interface	External connection terminals	Number of serial ports	Communications protocol	Model
Communicatio ns Interface Unit	RS-232C	Screwless Clamping Terminal Block	1 port		NX-CIF101
	RS-422A/485		1 port	<ul><li>No-protocol</li><li>Signal lines</li></ul>	NX-CIF105
	RS-232C	D-Sub connector	2 ports		NX-CIF210

**RFID Units** 

Product name	Amplifier/Antenna	No. of unit numbers used	Model
RFID Unit (1Ch)			
	V680 series	1	NX-V680C1
RFID Unit (2Ch)	Voo senes		
0		2	NX-V680C2

### **IO-Link Master Unit**

	Specification					
Product Name	Number of IO-Link ports	I/O refreshing method	I/O connection terminals	Model		
IO-Link Master Unit						
	4	Free-Run refreshing	Screwless clamping terminal block	NX-ILM400		

### System Units

Product Name	Specification	Model			
Additional NX Unit Power Supply Unit	Power supply voltage: 24 VDC (20.4 to 28.8 VDC) NX Bus power supply capacity: 10 W max.	NX-PD1000			
Additional I/O Power Supply Unit	Power supply voltage: 5 to 24 VDC (4.5 to 28.8 VDC) I/O power feed maximum current: 4 A	NX-PF0630			
	Power supply voltage: 5 to 24 VDC (4.5 to 28.8 VDC) /O power feed maximum current: 10 A *				
I/O Power Supply Connection Unit	Number of I/O power terminals: IOG: 16 terminals Current capacity of I/O power terminal: 4 A/terminal max.	NX-PC0010			
	Number of I/O power terminals: IOV: 16 terminals Current capacity of I/O power terminal: 4 A/terminal max.	NX-PC0020			
	Number of I/O power terminals: IOV: 8 terminals, IOG: 8 terminals Current capacity of I/O power terminal: 4 A/terminal max	NX-PC0030			
Shield Connection Unit	Number of shield terminals: 14 terminals (The following two terminals are functional ground terminals.)	NX-TBX01			

### **EtherCAT Coupler Units**

NX-series Units on previous pages and NX-series Safety Units can be used by connecting to the EtherCAT Coupler Unit that is connected to the built-in EtherCAT port on the NX7 CPU Unit.

Product Name	Communications cycle in DC Mode	Current consumption	Maximum I/O power supply current	Model
EtherCAT Coupler Unit *1	250 to 4000 μs *2	1.45 W max.	4 A	NX-ECC201
	250 to 4000 μs *2	1.45 W max.	10 A	NX-ECC202
	125 to 10000 μs *2	1.25 W max.		NX-ECC203

\*1. One End Cover NX-END01 is provided with the EtherCAT Coupler Unit.

This depends on the specifications of the EtherCAT master. For example, the values are as follows when the EtherCAT Coupler Unit is connected to the built-in EtherCAT port on an NJ5-series CPU Unit: 500 µs, 1,000 µs, 2,000 µs, and 4,000 µs. Refer to the NJ/NX-series CPU Unit Built-in EtherCAT Port User' Manual (Cat. No. W505) for the specifications of the built-in EtherCAT ports on NJ/NX-series CPU Units. This also depends on the unit configuration.

#### Safety CPU Units

	Specification						
Appearance	Maximum number of safety I/O points	Program capacity	Number of safety master connections	I/O refreshing method	Unit version	Model	
	256 points	512 KB	32	Free-Run refreshing	Ver.1.1	NX-SL3300	
	1024 points	2048 KB	128	Free-Run refreshing	Ver.1.1	NX-SL3500	

#### Safety Input Units

		Specification							
Appearance	Number of safety input points	Number of test output points	Internal I/O common	Rated input voltage	OMRON special safety input devices	Number of safety slave connections	I/O refreshing method	Unit version	Model
	4 points	2 points	Sinking inputs (PNP)	24 VDC	Can be connected.	1	Free-Run refreshing	Ver.1.1	NX-SIH400
	8 points	2 points	Sinking inputs (PNP)	24 VDC	Cannot be connected.	1	Free-Run refreshing	Ver.1.0	NX-SID800

#### Safety Output Units

		Specification						
Appearance	Number of Model safety output points	Internal I/O common	Maximum load current	Rated voltage	Number of safety slave connections	I/O refreshing method	Unit version	Model
	2 points	Sourcing outputs (PNP)	2.0 A/point, 4.0 A/Unit at 40°C, and 2.5A/Unit at 55°C The maximum load current depends on the installation orientation and ambient temperature.	24 VDC	1	Free-Run refreshing	Ver.1.0	NX-SOH200
	4 points	Sourcing outputs (PNP)	0.5 A/point and 2.0 A/Unit	24 VDC	1	Free-Run refreshing	Ver.1.0	NX-SOD400

### **General Specifications**

	Item	NX701			
Enclosure		Mounted in a panel			
Grounding Method		Ground to less than 100 $\Omega$			
Dimensions (h	neight×depth×width)	100 mm × 100 mm × 132 mm			
Weight		880 g (including the End Cover)			
Power consur	nption	40 W (including SD Memory Card and End Cover)			
	Ambient Operating Temperature	0 to 55°C			
	Ambient Operating Humidity	10% to 95% (with no condensation)			
	Atmosphere	Must be free from corrosive gases.			
	Ambient Storage Temperature	-25 to 70°C (excluding battery and fan unit)			
	Altitude	2,000 m or less			
Operation	Pollution Degree	2 or less: Meets IEC 61010-2-201.			
Environment	Noise Immunity	2 kV on power supply line (Conforms to IEC 61000-4-4.)			
	Overvoltage Category	Category II: Meets IEC 61010-2-201.			
	EMC Immunity Level	Zone B			
	Vibration Resistance	Conforms to IEC 60068-2-6. 5 to 8.4 Hz with 3.5-mm amplitude, 8.4 to 150 Hz Acceleration of 9.8 m/s <sup>2</sup> for 100 min in X, Y, and Z directions (10 sweeps of 10 min each = 100 min total)			
	Shock Resistance	Conforms to IEC 60068-2-27. 147 m/s², 3 times in X, Y, and Z directions (100 m/s² for Relay Output Units)			
Battery	Life	2.5 years (at 25°C, Power ON time rate 0% (power OFF))			
Dattery	Model	CJ1W-BAT01			
Applicable Sta	andards	Conforms to cULus, NK*, LR*, EU Directives, RCM and KC Registration.			

\* Supported only by the CPU Units manufactured in December 2016 or later. Not supported by the NX701-1 $\square$ 20.

### NX7 **Performance Specifications**

	Item		NX7 17⊡0	701- 16⊡0		
		LD instruction		0.37 ns or more	16_0	
Processing	Instruction Execution Times	Math Instructions				
Time		(for Long Real D		3.2 ns or more		
		Size	I	80 MB (1600 KS)		
	Program capacity *1	Number	POU definition	6,000		
		Number	POU instance	48,000		
		No Retain Attri-	Size	256 MB		
	Variables capacity	bute *2	Number	360,000		
	variables capacity	Retain Attri-	Size	4 MB		
rogramming		bute *3	Number	40,000		
rogrammig	Data type	Number		8,000		
		CIO Area		NX701-1□00: NX701-1□20: 6144 words (CIO 0 to	CIO 6143) *4	
	Memory for	Work Area		NX701-1□00: NX701-1□20: 512 words (W0 to W511	) *4	
	CJ-Series Units (Can be Speci- fied with AT Specifications for	Holding Area		NX701-1□00: NX701-1□20: 1536 words (H0 to H1	535) *5	
	Variables.)	DM Area		NX701-1□00: NX701-1□20: 32768 words (D0 to D32767) *5		
		EM Area		NX701-1□00: NX701-1□20: 32768 words × 25 banks (E0_00000 to E18_32767) *6		
	Maximum Number of Connect- able Units	Maximum number of NX unit on the system		4,096 (on NX series EtherCAT slave terminal)		
	Maximum number of Expansion	Racks		0		
nit Configu- ation	Model		NX-PA9001 NX-PD7001			
	Power Supply Unit for CPU Rack and Expansion Racks	Power OFF De- tection Time AC Power Supply DC Power Supply		30 to 45 ms		
				5 to 20ms		
		Maximum Number of Controlled		Maximum number of axes which can be defined.		
		Axes		256 axes	128 axes	
		Motion cont	trol axes	Maximum number of motion control All motion control function is available		
				256 axes	128 axes	
		Maximum number of used real axes		Maximum number of used real axes. The Number of used real axes includencoder axes.		
	Number of Controlled Axes			256 axes	128 axes	
		Used motio	n control servo	Maximum number of servo axes whi	ch all motion control function is	
		axes		available.	100	
lotion		Maximum numb	er of axes for linear	256 axes 4 axes per axes group	128 axes	
Control		Number of axes	for circular inter-	2 axes per axes group		
	Maximum Number of Axes Group	polation axis co	nuor	64 groups		
	· · · · · ·			The same control period as that is us	sed for the process data	
	Motion Control Period		Maximum Dainte	communications cycle for EtherCAT.		
		Number of Cam Data	Maximum Points per Cam Table	65,535 points		
	Cams	Points	Maximum Points for All Cam Tables	1,048,560 points		
		Maximum Numb	er of Cam Tables	640 tables		
	Position Units			Pulses, millimeters, micrometers, na	nometers, degrees or inches	
	Override Factors			0.00% or 0.01% to 500.00%		

\*1. This is the capacity for the execution objects and variable tables (including variable names).
\*2. Words for CJ-series Units in the Holding, DM, and EM Areas are not included. For NX701-1□20, Words for CJ-series Units are included.
\*3. Words for CJ-series Units in the CIO and Work Areas are not included. For NX701-1□20, Words for CJ-series Units are included.
\*4. You can set the size in 1ch unit. Use Non-Retain attribute memory.

\*5. You can set the size in 1ch unit. Use Retain attribute memory.
\*6. NX701-1□20 use the dedicated area for the spool function. Even if the spool function is valid, Retain attribute memory is not used.

16

	Item			NX701-		
	Item		17□0	16□0		
	Number of port		2			
	Physical Layer			10BASE-T/100BASE-TX /1000BASE-T		
	Frame length			1514 max.		
	Media Access Method			CSMA/CD		
	Modulation			Baseband		
	Topology			Star		
	Baud Rate			1Gbps (1000BASE-T)		
	Transmission Media			STP (shielded, twisted-pair) cable of E	thernet category 5, 5e or higher	
	Maximum Transmission Distan	ce between Ethern	et Switch and Node	100m		
	Maximum Number of Cascade (	Connections		There are no restrictions if Ethernet sw	itch is used.	
		Maximum Numb	ber of Connections	256 / port total 512		
		Packet interval *7		0.5 to 10,000 ms in 0.5-ms increments Can be set for each connection.		
		Permissible Communications Band		40,000 pps *8 including heartbeat		
		Maximum Number of Tag Sets		256 / port total 512		
		Tag types		Network variables		
Built-in EtherNet/IP	CIP service: Tag Data Links	Number of tags per connection (i.e., per tag set)		8 (7 tags if Controller status is included in the tag set.)		
Port	(Cyclic Communications)	Maximum Link Data Size per Node (total size for all tags)		256 / port total 512		
		Maximum number of tag		369,664 byte (Total in 2 ports 739,328 byte)		
		Maximum Data Size per Connection		1,444 byte		
		Maximum Numb Tag Sets	ber of Registrable	256 / port total 512 (1 connection = 1 tag set)		
		Maximum Tag S	Set Size	1,444 bytes (Two bytes are used if Controller status is included in the tag set.)		
		Multi-cast Pack	et Filter *9	Supported.		
		Class 3 (numbe	er of connections)	128 / port total 256 (clients plus server)		
	Cip Message Service: Explicit Messages	UCMM (non- connection	Maximum Number of Clients that Can Communicate at One Time	32 / port total 64		
we.		type)	Maximum Number of Servers that Can Communicate at One Time	32 / port total 64		
	Maximum number of TCP socke	et service	1	30		

\*7. Data is updated on the line in the specified interval regardless of the number of nodes.
\*8. Means packets per second, i.e., the number of communications packets that can be sent or received in one second.
\*9. An IGMP client is mounted for the EtherNet/IP port. If an ethernet switch that supports IGMP snooping is used, filtering of unnecessary multicast packets is performed.

			NX701-			
	Item		17□0 16□0			
		Support Profile/	Model	Micro Embedded Device Server Profile PLCopen Information Model		
		Default Endpoin	t/Port	opc.tcp://192.168.250.1:4840/		
		Maximum numb (Client)	er of sessions	5		
		Maximum numb Items per server		2,000		
		Sampling rate of Items (ms)	f the Monitored	0, 50, 100, 250, 500, 1000,2000, 5000, 10000 if set to 0 (zero), it is assumed that is set to 50.		
		Maximum number per server	er of Subscriptions	100		
		Maximum numb can be publishe	er of variables that d	10,000		
		Maximum numb attributes that ca	er of value an be published *10	10,000		
Built-in		Maximum numb definitions that	er of structure can be published	100		
EtherNet/IP Port	OPC UA Server	Restrictions on variables unable to be published		<ul> <li>Variable which size are over 1024Bytes</li> <li>Double and over dimensional array of structures</li> <li>Structures includes double and over dimensional array</li> <li>Structures nested 4 and over Unions</li> <li>Array which's index number don't start from 0</li> <li>Array which's element is over 1024</li> <li>Structures which's members are over 100.</li> </ul>		
		SecurityPolicy/Mode		None • Sign - Basic128Rsa15 • Sign - Basic256 • Sign - Basic256Sha256 • SignAndEncrypt - Basic128Rsa15 • SignAndEncrypt - Basic256 • SignAndEncrypt - Basic256Sha256		
			Authentication	X.509		
		Application Authentication	Maximum number of certification	Trusted certification: 32 Issuer certification: 32 Rejected certification: 32		
		User Authentication	Authentication	User name / Password Anonymous		
	Communications Standard			IEC 61158 Type12		
	EtherCAT Master Specifications			Class B (Feature Pack Motion Control compliant)		
	Physical Layer			100BASE-TX		
	Modulation			Baseband		
	Baud Rate			100 Mbps (100Base-TX)		
	Duplex mode			Auto		
	Тороlоду			Line, daisy chain, and branching		
Built-in	Transmission Media			Twisted-pair cable of category 5 or higher (double-shielded straight cable with aluminum tape and braiding)		
EtherCAT Port	Maximum Transmission Distance between Nodes			100m		
	Maximum Number of Slaves			512		
	Range of node address			1-512		
	Maximum Process Data Size			Inputs: 11,472 bytes Outputs: 11,472 bytes *11		
	Maximum Process Data Size per	Slave		Inputs: 1,434 bytes Outputs: 1,434 bytes		
	Communications Cycle			<ul> <li>Primary periodic task: 125 μs, 250 μs to 8 ms (in 250-μs increments)</li> <li>Priority-5 periodic task: 125 μs, 250 μs to 100 ms (in 250-μs increments)</li> </ul>		
	Sync Jitter			1 μs max.		
Internal Cloc	k			At ambient temperature of $55^{\circ}$ C: -3.5 to +0.5 min error per month At ambient temperature of $25^{\circ}$ C: -1.5 to +1.5 min error per month At ambient temperature of $0^{\circ}$ C: -3 to +1 min error per month		

\*10.The number of value attributes is defined by the following formula. Number of value attributes = (Number of basic data type variables) + (Number of array-specified elements) + (Number of values in the structure) \*11.The data must be within eight frames.

### **Function Specifications**

		Item		NX701-□□□	
	Function			I/O refreshing and the user program are executed in units that are called tasks. Tasks are used to specify execution conditions and execution priority.	
		Periodically	Maximum Number of Primary Periodic Tasks	1	
Tasks		Executed Tasks	Maximum Number of Periodic Tasks	4	
		Conditional-	Maximum number of event tasks	32	
		ly executed tasks	Execution conditions	When Activate Event Task instruction is executed or when condition expression for variable is met.	
		Programs		POUs that are assigned to tasks.	
	POU (program organization	Function Blog	cks	POUs that are used to create objects with specific conditions.	
	units)	Functions		POUs that are used to create an object that determine unique outputs for the inputs, such as for data processing.	
	Programming Languages			Ladder diagrams *1 and structured text (ST)	
	Namespaces	espaces		A concept that is used to group identifiers for POU definitions.	
	Variables	External Ac- cess of Vari- ables Network Variables		The function which allows access from the HMI, host computers, or other Controllers	
			Boolean	BOOL	
			Bit Strings	BYTE, WORD, DWORD, LWORD	
		Data Types	Integers	INT, SINT, DINT,LINT, UINT, USINT, UDINT, ULINT	
			Real Numbers	REAL, LREAL	
			Durations	TIME	
			Dates	DATE	
			Times of Day	TIME_OF_DAY	
			Date and Time	DATE_AND_TIME	
			Text Strings	STRING	
		Derivative Data Types		Structures, unions, enumerations	
Program-	Data Types	Structures	Function	A derivative data type that groups together data with different variable types.	
ning	Data Types		Maximum Number of Members	2048	
			Nesting Maximum Levels	8	
			Member Data Types	Basic data types, structures, unions, enumerations, array variables	
			Specifying Member Offsets	You can use member offsets to place structure members at any memory locations.	
			Function	A derivative data type that groups together data with different variable types.	
		Unions	Maximum Number of Members	4	
		_	Member Data Types	BOOL, BYTE, WORD, DWORD, LWORD	
		Enumera- tions	Function	A derivative data type that uses text strings called enumerators to express variable values.	
			Function	An array is a group of elements with the same data type. You specify the number (subscript) of the element from the first element to specify the element.	
		Array Speci-	Maximum Number of Dimensions	3	
	Data Type Attri- butes	fications	Maximum Number of Elements	65535	
			Array Specifications for FB Instances	Supported.	
		Range Specif	ications	You can specify a range for a data type in advance. The data type can take only values that are in the specified range.	
		Libraries		User libraries	

\*1. Inline ST is supported. (Inline ST is ST that is written as an element in a ladder diagram.)

### NX7

Single-aris         Control Modes         Position sthat can be managed           Adsolute Positions that can be managed         Alsolute Positioning Positions         Command positions and setual positions           Single-aris Position         Single-aris Positioning Single-aris Positioning Single-aris         Alsolute Positioning Interrupt Feeding         Positioning performed for a specific three distance from the position and current positioning performed for a specific three distance from the position sheee an Positioning performed for a specific three distance from the position sheee an Positioning performed for a specific three distance from the position where an Positioning performed in Position Centrel Mode.           Single-aris Sing			Item		NX701-□□□	
Single-axis         Single-axis         Position for a large of the specified with an absolute wake.           Notice         Position         Position         Position         Position           Single-axis         Velocity Control         Velocity Control         Velocity Control         Velocity Control           Velocity Control         Velocity Control         Velocity Control         Velocity Control         Velocity Control           Single-axis         Velocity Control         Velocity Control         Velocity Control         Velocity Control           Single-axis         Velocity Control         Velocity Control         A velocity command is augute auch control period in the position           Single-axis         Velocity Control         A velocity command is augute auch control period in Velocity Control Mode.           Single-axis         Single-axis         Velocity Control         A velocity command is augute auch control period in Velocity Control Mode.           Single-axis         Single-axis         Velocity Control         The torque of the motor is controled.           Single-axis         Single-axis         Velocity Control         The torque of the motor is controled.           Single-axis         Single-axis         Single-axis         Single-axis         Velocity Control           Velocity Control         Position auch control is performed to reparation and p		Control Modes			position control, velocity control, torque control	
Motion Single-axis Positioning Single-axis Positioning Positioning Single-axis Positioning		Axis Types				
Notion         Single-axis         Relative Positioning         Positioning is performed for a specified travel distance from the position during is performed for a specified travel distance from the position and is adjusted from a date and input.           Single-axis         Velocity Control         Velocity Control<		Positions that can be managed			Command positions and actual positions	
Notion         Single-aste Control         Network Pastinuing Desico         pestion				Absolute Positioning	Positioning is performed for a target position that is specified with an absolute value.	
Motion Control         Control (Polici synchronous absolute positioning)         Interrupt Feeding interrupt input was received from an external input.         Out of polici synchronous absolute positioning           Single-axis Velocity Control         Velocity control         Velocity control is performed in Position Control Mode.           Single-axis Torgue Control         Velocity control         Velocity control is performed using the specified on the input parameter is ended.           Single-axis Single-axis         The corrup of the motor is controlled.         Starting Carn Operation         A carn motion is performed using the specified dynameter is ended.           Single-axis Synchro- trol         Starting Carn Operation         A gear motion with the specified dynameter is ended.           Single-axis         Starting Gar Operation         A gear motion with the specified dynameter and and synce position is performed using the specified dynameter and and synce position is performed using the specified dynameter and and synce position is performed using the specified dynameter and and synce position is performed to submit down and is anythronous down and is anythronous down and is performed on synce the specified dynameter and and synce position is performed using the specified dynameter and and synce position is performed using the specified dynameter and and synce position is performed using the specified dynameter and and synce position is performed using the specified dynameter and and synce position is performed using the specified dynameter and and synce position is performed using the specified dynameter and and the result is output as the command position of the axexes and and synce position is anded.			Single-axis	Relative Positioning		
Motion Control         Single-axis Velocity Control         Control mode. Velocity Control         Velocity Control         Velocity Control           Number of the second seco				Interrupt Feeding		
Notion         Syngle-axis Traye Control         Syngle-axis Traye Control         Avelocity command is output each control period in Velority Control Mode.           Single-axis Traye Control         Starting Cam Operation A cam motion is performed using the specified cam table.         The torque of the motor is controlled.           Single-axis Synchro- trol         Starting Cam Operation A gear motion with the specified gear ratio is performed to there an amater axis and alave axis.         A gear motion with the specified gear ratio is performed between a matter axis and alave axis.           Synchronous Trol         Single-axis Synchro- Trol         A gear motion with the specified gear ratio and sync position is performed between a master axis and alave axis.           Single-axis         Single-axis Synchronous Periloming Postforming Specified gear ratio and sync position is performed between a master axis and alave axis.         The perilom position of position in gear motion is ended.           Single-axis         Single-axis         The phase of a master axis in synchronous control is shifted.           Combining Axee Manual Operation         Jogging         An axis in single-axis         Single-axis           Nonciri Single-axis         Single-axis         Resetting Axis Errors         Arese cross are cleared.           Homing         An axis in single-axis         Jogging         An axis in single-axis         The command position in a social and the limit signals, home proximity signal, and home signal are to sinding displate and with a specified dearea to a social be						
Motion         Single-axis         Torque Control         A velocity command is output each control period in Velocity Control Mode.           Motion         Single-axis         Torque Control         The torque of the motor is controlled.           Single-axis         Single-axis         Single-axis         Single-axis         A cam motion is performed using the specified cam table.           Motion         Single-axis         Single-axis         Positioning Gaer Operation         A cam motion is performed using the specified gaer ratio is performed between a master axis and slave axis.           Motion         Positioning Gaer Operation         The paperind gaer motion or positioning gaer motion is performed between a master axis in synchronized cornol is shifted.           Control         Positioning Axee         The phase of a master axis in synchronized cornol is shifted.           Control         Positioning See Operation         The specified gaer motion or positioning gaer motion is performed is shifted.           Control         Single-axis         Powering the Servo         The servo in the Servo Drive is turned ON to enable axis motion.           Motion         Single-axis         Positioning is performed or is positioning is performed is provinity signal, and home signal are used to define home.           Motion         Position for the axis tast part are cleared.         Moming with parameter, a motor is operated and the limit signals, home proxinity signal, and home signal are used to define home.			Single-axis	Velocity Control	Velocity control is performed in Position Control Mode.	
Notion Control         Single-axis Single-axis         Single-axis Single-axis         Solution Single-axis Synchro- nized Co- trol         Solution Cam Single-axis Synchro- nized Co- Trol         Solution Cam Single-axis Synchro- Synchronous Positioning Cam Synchronous Positioning is performed in synchronized control is shifted.           Motion Control         Single-axis Single-axis Single-axis Single-axis Single-axis Single-axis         Positioning Axes The command position of two axes are added or subtracted and the result is output as the command position of two axes are added or subtracted and the result is output as the command position of two axes are added or subtracted and the limit signals, nome proximity signal, and home signal are used to define home.           Homing with parameter Signal and home signal are used to define home.         Solution the naxis is solution to an axis is appendimentiately.           Auxitiary Numeritary Signal signal and home signal are used to define home.         The command position of an axis is recorded when a trigger occcurs.           High-Speced					A velocity command is output each control period in Velocity Control Mode.	
Notion Control         Single-axis				Torque Control	The torque of the motor is controlled.	
Notion Control         Single-axis         Starting Gear Operation Operation         A gear motion with the specified gear ratio is performed between a master axis and save axis.           Notion Control         Positioning Gear Operation         A gear motion with the specified gear ratio and sync position is performed between a master axis and slave axis.           Single-axis         Positioning Gear Operation         Positioning is performed in sync with a specified master axis.           Single-axis         Positioning is performed in sync with a specified master axis.           Single-axis         Positioning is performed in sync with a specified master axis.           Positioning Xees         The phase of a master axis in synchronized control is shifted.           Control         Powering the Servo         The servo in the Servo Drive is turned ON to enable axis motion.           Jogging         An axis is jogged at a specified target velocity.         Powering the Servo in the Servo Drive is turned ON to enable axis motion.           Homing         Resetting Axis Errors         Axes errors are cleared.         A motri is operated and the limit signals, home proximity signal, and home signal are used to define home.           Vision give performed between a master axis is stopped in mediately.         Stopping         A maxis is stopped an axis on portated and the limit signals, home proximity signal, and home signal are used to define home.           Auxiliary         Feabring the Current res         Positioning is performed to a axis on po				Starting Cam Operation	A cam motion is performed using the specified cam table.	
Motion Control         Single-axis Synchroca         Single-axis Synchroca         Single-axis Synchroca         A second Pearlian (Gear Operation Synchroca         A second Pearlian (Gear Operation Synchroca         The specified gear ratio and sync position is performed between a master axis and slave axis.           Motion Control         Single-axis Single-axis         Single-axis Manual Operation         The specified gear ratio and sync position is performed between a master axis and slave axis.           Single-axis Control         Single-axis Manual Operation         Powering the Servo Intersor Single Servo Jagging         The servo in the Servo Drive is turned ON to enable axis motion.           Manual Operation         Powering the Servo Jagging         An axis is joged at a specified traget velocity.           Homing         A mator is operated and the limit signals, home proximity signal, and home signal are used to define home.           Homing with parameter Stopping         An axis is decelerated to a stop at the specified rate.           High-speed Homing         Single-axis           Stopping         An axis is decelerated to a stop at the specified rate.           High-speed Homing         Stopping           An axis is stopped immediately.         Stopping           An axis is stopped immediately.         Stopping           An axis is decelerated to a stop at the specified rate.           High-speed Homing         Stopping           An axis is s				Ending Cam Operation	The cam motion for the axis that is specified with the input parameter is ended.	
Motion Control         Single-axis Synchronized Con- rized Con- trol         Positioning Gear Operation         A gear motion with the specified gear ratio and sync position is performed between a master axis and slave axis.           Motion Control         Finding Gear Operation         The specified gear motion or positioning gear motion is ended.           Single-axis         Finding Gear Operation         The specified gear motion at some axis in synchronized control is ended.           Single-axis         Powering the Servo         The Servo in the Servo Drive is turned ON to enable axis motion.           Goperation         A gear motion with the specified gear ratio and sync position of the command position.         The specified gear ratio and sync position of motion or position of two axes are added or subtracted and the result is output as the command position.           Single-axis         Powering the Servo         The Servo in the Servo Drive is turned ON to enable axis motion.           Motion (Control         Operation         A axis is jogged at a specified target velocity.           Resetting Axis Errors         A xee errors are cleared.         Homing           Homing         A motio is operated and the limit signals, home proximity signal, and home signal are used to define home.           Homing         Stopping         An axis is stopped in an ator astolute target position of 0 to return to home.           Stopping         An axis is stopped interned to anoty axis is decelerated to a stop at the specified rate.				Starting Gear Operation		
Motion Control         Ending Gear Operation Synchronos Positioning is performed in sync with a specified master axis.           Master Axis Phase Shift Depate of a master axis in synchronized control is shifted.         Combining Axes         The phase of a master axis in synchronized control is shifted.           Single-axis         Powering the Servo         The secretified gear metion or you are a are added or subtracted and the result is output as the command position.           Single-axis         Powering the Servo         The Servo in the Servo Drive is turned ON to enable axis motion.           Motion Control         Powering the Servo         The Servo in the Servo Drive is turned ON to enable axis motion.           Homing         An axis is jogged at a specified target velocity.           Homing         An axis is goaled and the limit signals, home proximity signal, and home signal are used to define home.           Homing with parameter Specifying the parameter, a motor is operated and the limit signals, home proximity signal, and home signal are used to define home.           Stopping         An axis is decelerated to a absolute target position of 0 to return to home.           Stopping         An axis is decelerated to a absolute target position of 0 to return to home.           Stopping         An axis is decelerated to a absolute target position of an axis can be changed to any position.           Functione for single axis Control         Enabling External tarches         The command current position or actual position of an axis.      <			Synchro-	-	A gear motion with the specified gear ratio and sync position is performed between a	
Notion Control         Single-axis         Single-axis         Single-axis         Single-axis         Single-axis         Single-axis         Postioning Axes         The phase of a master axis in synchronized control is shifted.           Notion         Single-axis         Powering the Servo         The command positions of two axes are added or subtracted and the result is output as the command positions of two axes are added or subtracted and the result is output as the command positions of two axes are added or subtracted and the result is output as the command position of two axes are added or subtracted and the instignals, home proximity signal, and home signal are used to define home.           Single-axis         Resetting Axis Errors         Axes errors are cleared.           Homing         A motor is operated and the limit signals, home proximity signal, and home signal are used to define home.           Image at the intermed at the limit signals, home proximity signal, and home signal are used to define home.           Image at the intermed at the limit signals, home proximity signal.           Image at the intermed at the limit signals, home proximity signal.           Image at the intermed at the limit signals, home proximity signal.           Are axis is decelerated to a stop at the specified rate.           Immediately Stopping         An axis is stopped immediately.           Immediately Stopping         An axis is recorded when a trigger occurs.           Imabiling External ataches         The command position or axis is recorded when a trig				Ending Gear Operation	The specified gear motion or positioning gear motion is ended.	
Notion Control         Single-axis         Combining Axes         The command positions of two axes are added or subtracted and the result is output as the command position.           Single-axis         Single-axis         Powering the Servo Jogging         The Servo In the Servo Drive is turned ON to enable axis motion.           Jagging         An axis is jogged at a specified target velocity.         Resetting Axis Errors         Axes errors are cleared.           Homing         A motor is operated and the limit signals, home proximity signal, and home signal are used to define home.         Powering the Servo Jogging         An axis is operated and the limit signals, home proximity signal, and home signal are used to define home.           High-speed Homing         Positioning is performed for an absolute target position of 0 to return to home.         Stopping           Stopping         An axis is decelerated to a atop at the specified rate.         Inmediately Stopping           An axis is opping         An axis is stopped immediately.         Secting Override Fac- tors         The target velocity of an axis can be changed.           Changing the Current Position         The position of an axis is recorded when a trigger occurs.         Disabiling External Latches         The command position or actual position of an axis to see when it is within a specified range (acoue).           Enabling digital cam switches         You can monitor whether the difference between the command position of an axis.           Monitoring Axis         You can				Synchronous Positioning	Positioning is performed in sync with a specified master axis.	
Motion Control         Single-axis Manual Operation         Powering the Servo Jogging         The Servo in the Servo Drive is turned ON to enable axis motion.           Single-axis         Single-axis Manual Operation         Resetting Axis Errors Axes errors are cleared.           Homing         A motor is operated and the limit signals, home proximity signal, and home signal are used to define home.           Homing with parameter Specifying the parameter, a motor is operated and the limit signals, home proximity signal, and home signal are used to define home.           High-speed Homing Stopping         A maxis is decelerated to a stop at the specified rate.           Immediately Stopping         An axis is decelerated to a stop at the specified rate.           Immediately Stopping         An axis is stopped immediately.           Sting Override Fac- tors         The target velocity of an axis can be changed.           Changing the Current Position.         The position of an axis is recorded when a trigger occurs.           Disabiling External Latches         The current latch is disabled.           Zone Monitoring         You can monitor the command position or actual position of an axis to see when it is within a specified arrage (zone).           Enabling digital cam switches         You can monitor whether the difference between the command position or an axis.           Monitoring Axis Following Error         The error between the command north position an actual current position is set to 0.           Torque Limi				Master Axis Phase Shift	The phase of a master axis in synchronized control is shifted.	
Motion Control         Manual Operation         Jogging         An axis is jogged at a specified target velocity.           Single-axis         Resetting Axis Errors         Axes errors are cleared.           Homing         A motor is operated and the limit signals, home proximity signal, and home signal are used to define home.           Homing with parameter         Specifying the parameter, a motor is operated and the limit signals, home proximity signal, and home signal are used to define home.           High-speed Homing         Positioning is performed for an absolute target position of to return to home.           Stopping         An axis is decelerated to a stop at the specified rate.           Immediately Stopping         An axis is decelerated to a stop at the specified rate.           Immediately Stopping         An axis is decelerated to a stop at the specified rate.           Interdite Stopping         An axis is decelerated to a stop at the specified rate.           Interdite Stopping         An axis is decelerated to a stop at the specified rate.           Interdite Stopping         The target velocity of an axis can be changed.           Changing the Current Position         The command current position or actual position of an axis to see when it is any position.           Enabling External Latches         The position of an axis is recorded when a trigger occurs.           Disabiling External Latches         The current latch is disabled.           Zone Monitoring				Combining Axes		
Motion Control         Operation         Jogging         An axis is jogged at a specified target velocity.           Single-axis         Resetting Axis Errors         Axes errors are cleared.           Homing         A motor is operated and the limit signals, home proximity signal, and home signal are used to define home.           Homing with parameter, Boelfying the parameter, a motor is operated and the limit signals, home proximity signal, and home signal are used to define home.           High-speed Homing         Positioning is performed for an absolute target position of 0 to return to home.           Stopping         An axis is decelerated to a stop at the specified rate.           Immediately Stopping         An axis is stopped immediately.           Setting Override Fac- tors         The target velocity of an axis can be changed.           Changing the Current Position         The position of an axis is recorded when a trigger occurs.           Disabling External axis Control         The current latch is disabled.           Zone Monitoring         You can monitor the command position or actual position of an axis.           Monitoring Axis Follong digital cam switches         You can monitor whether the difference between the cordinand position of an axis.           Monitoring Axis Follong digital cam switches         You can monitor whether the difference between the command position of an axis.           Monitoring Axis Following Error         The error between the command current position and actual cur				Powering the Servo	The Servo in the Servo Drive is turned ON to enable axis motion.	
Single-axis       Homing       A motor is operated and the limit signals, home proximity signal, and home signal are used to define home.         Homing with parameter       Specifying the parameter, a motor is operated and the limit signals, home proximity signal, and home signal are used to define home.         High-speed Homing       Positioning is performed for an absolute target position of 0 to return to home.         Stopping       An axis is decelerated to a stop at the specified rate.         Immediately Stopping       An axis is stopped immediately.         Setting Override Fac- tors       The target velocity of an axis can be changed.         Changing the Current Position.       The command current position or actual ourrent position of an axis can be changed to any position.         Enabling External Latches       The position of an axis is recorded when a trigger occurs.         Disabiling External Latches       The courrent latch is disabled.         Zone Monitoring       You can monitor the command position or actual position of an axis.         Mointoring Axis Following Error       You can monitor whether the difference between the command position or actual positions of two specified axes exceeds a threshold value.         Resetting the Following Error       The error between the command current position and actual current position is set to 0.         Torque Limit       The regre control function of the slave axis currently in synchronized control.         Stave Axis Positoin       This function com	Motion			Jogging	An axis is jogged at a specified target velocity.	
Auxiliary Functions         Homing with parameter signal, and home signal are used to define home.           Homing with parameter signal, and home signal are used to define home.         Homing with parameter signal, and home signal are used to define home.           High-speed Homing         Positioning is performed for an absolute target position of 0 to return to home.           Stopping         An axis is decelerated to a stop at the specified rate.           Immediately Stopping         An axis is stopped immediately.           Setting Override Fac- tors         The target velocity of an axis can be changed.           Changing the Current Position.         The command current position or actual current position of an axis can be changed to any position.           Enabling External Latches         The position of an axis is recorded when a trigger occurs.           Zone Monitoring         You can monitor the command position or actual position of an axis to see when it is within a specified range (zone).           Enabling digital cam switches         You can monitor whether the difference between the command positions or actual positions of two specified rase exceeds a threshold value.           Resetting the Following Error         The error between the command current position and actual current position is set to 0.           Torque Limit         The torque control function of the slave axis currently in synchronized control.           Cam monitor         Outputs the specified offset position for the slave axis in synchronized control.	Control		Functions for Single-	Resetting Axis Errors		
Auxiliary       Froming with paralited signal, and home signal are used to define home.         High-speed Homing       Positioning is performed for an absolute target position of 0 to return to home.         Stopping       An axis is decelerated to a stop at the specified rate.         Immediately Stopping       An axis is decelerated to a stop at the specified rate.         Setting Override Factors       The target velocity of an axis can be changed.         Changing the Current position of an axis is recorded when a trigger occurs.       Enabling External Latches         Latches       The command current position or actual current position of an axis to see when it is within a specified range (zone).         Enabling digital cam switches       You can monitor the command position or actual position of an axis.         Monitoring Axis Following Error       You can turn a digital output ON and OFF according to the position is actual position is actual position sor two specified axes exceeds a threshold value.         Resetting the Following Error       The error between the command current position and actual current position is set to 0.         Torque Limit       The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.         Stave Axis Position       Control.       Control.         Cam monitor       Outputs the specified offset position of the slave		Single-axis		Homing		
Auxiliary Functions for Single- axis ControlStoppingAn axis is decelerated to a stop at the specified rate.Immediately StoppingAn axis is stopped immediately.Auxiliary Functions for Single- axis ControlSetting Override Fac- torsThe target velocity of an axis can be changed.The command current position or actual current position of an axis can be changed to any position.The command current position or actual current position of an axis can be changed to any position.Enabling External LatchesThe position of an axis is recorded when a trigger occurs.Disabing External LatchesThe current latch is disabled.Zone MonitoringYou can monitor the command position or actual position of an axis to see when it is within a specified range (zone).Monitoring Axis Following ErrorYou can monitor whether the difference between the command positions or actual positions of two specified axes exceeds a threshold value.Resetting the Following ErrorThe error between the command current position and actual current position is set to 0.Torque LimitThe torque control function of the Slave axis currently in synchronized control.Stave Axis Position CompensationThis function compensates the position for the slave axis in synchronous control.				Homing with parameter		
Auxiliary Functions for Single axis Control         Immediately Stopping         An axis is stopped immediately.           Enabling External Latches         The target velocity of an axis can be changed.           Changing the Current Position         The command current position or actual current position of an axis can be changed to any position.           Enabling External Latches         The position of an axis is recorded when a trigger occurs.           Disabling External Latches         The current latch is disabled.           Zone Monitoring         You can monitor the command position or actual position of an axis to see when it is within a specified range (cone).           Enabling digital cam switches         You can turn a digital output ON and OFF according to the position of an axis.           Monitoring Axis Fror         You can monitor whether the difference between the command positions or actual positions of two specified axes exceeds a threshold value.           Resetting the Following Error         The torque control function of the serve Drive can be enabled or disabled and the torque limits can be set to control the output torque.           Slave Axis Position Compensation         This function compensates the position of the slave axis currently in synchronized control.				High-speed Homing	Positioning is performed for an absolute target position of 0 to return to home.	
Auxiliary Functions for Single axis Control         Setting Override Fac- tors         The target velocity of an axis can be changed.           Auxiliary Functions for Single axis Control         Changing the Current Position of an axis is recorded when a trigger occurs.           Disabling External Latches         The position of an axis is recorded when a trigger occurs.           Disabling External Latches         The current latch is disabled.           Zone Monitoring         You can monitor the command position or actual position of an axis to see when it is within a specified range (zone).           Enabling digital cam switches         You can turn a digital output ON and OFF according to the position of an axis.           Monitoring Axis Following Error         You can monitor whether the difference between the command positions or actual positions of two specified axes exceeds a threshold value.           Resetting the Following Error         The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.           Slave Axis Position Compensation         This function compensates the position of the slave axis in synchronized control.				Stopping	An axis is decelerated to a stop at the specified rate.	
Auxiliary       The target velocity of an axis can be changed.         Auxiliary       Changing the Current Position       The command current position or actual current position of an axis can be changed to any position.         Latches       The position of an axis is recorded when a trigger occurs.         Disabling External Latches       The current latch is disabled.         Zone Monitoring       You can monitor the command position or actual position of an axis to see when it is within a specified range (zone).         Enabling digital cam switches       You can turn a digital output ON and OFF according to the position of an axis.         Monitoring Axis Following Error       You can monitor whether the difference between the command positions or actual positions of two specified axes exceeds a threshold value.         Resetting the Following Error       The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.         Slave Axis Position Compensation       This function compensates the position of the slave axis currently in synchronized control.         Cam monitor       Outputs the specified offset position for the slave axis in synchronous control.				Immediately Stopping	An axis is stopped immediately.	
Auxiliary       Position       any position.         Functions       Enabling External Latches       The position of an axis is recorded when a trigger occurs.         Disabling External axis Control       Disabling External Latches       The current latch is disabled.         Zone Monitoring       You can monitor the command position or actual position of an axis to see when it is within a specified range (zone).         Enabling digital cam switches       You can turn a digital output ON and OFF according to the position of an axis.         Monitoring Axis Following Error       You can monitor whether the difference between the command positions or actual positions of two specified axes exceeds a threshold value.         Resetting the Following Error       The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.         Slave Axis Position Compensation       This function compensates the position of the slave axis in synchronous control.				-	The target velocity of an axis can be changed.	
Auxiliary Functions for Single- axis Control       Latches       The position of an axis is recorded when a trigger occurs.         Disabling External Latches       Disabling External Latches       The current latch is disabled.         Zone Monitoring       You can monitor the command position or actual position of an axis to see when it is within a specified range (zone).         Enabling digital cam switches       You can turn a digital output ON and OFF according to the position of an axis.         Monitoring Axis Following Error       You can monitor whether the difference between the command positions or actual positions of two specified axes exceeds a threshold value.         Resetting the Following Error       The error between the command current position and actual current position is set to 0.         Torque Limit       The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.         Slave Axis Position Compensation       This function compensates the position for the slave axis currently in synchronized control.         Cam monitor       Outputs the specified offset position for the slave axis in synchronous control.						
for Single- axis Control       Latches       The current latch is disabled.         Zone Monitoring       You can monitor the command position or actual position of an axis to see when it is within a specified range (zone).         Enabling digital cam switches       You can turn a digital output ON and OFF according to the position of an axis.         Monitoring Axis Following Error       You can monitor whether the difference between the command positions or actual positions of two specified axes exceeds a threshold value.         Resetting the Following Error       The error between the command current position and actual current position is set to 0.         Torque Limit       The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.         Slave Axis Position Compensation       This function compensates the position for the slave axis in synchronous control.         Cam monitor       Outputs the specified offset position for the slave axis in synchronous control.					The position of an axis is recorded when a trigger occurs.	
Zone Monitoring       You can monitor the command position or actual position of an axis to see when it is within a specified range (zone).         Enabling digital cam switches       You can turn a digital output ON and OFF according to the position of an axis.         Monitoring Axis Following Error       You can monitor whether the difference between the command positions or actual positions of two specified axes exceeds a threshold value.         Resetting the Following Error       The error between the command current position and actual current position is set to 0.         Torque Limit       The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.         Slave Axis Position Compensation       This function compensates the position of the slave axis in synchronous control.         Cam monitor       Outputs the specified offset position for the slave axis in synchronous control.				-	The current latch is disabled.	
switches       You can turn a digital output ON and OFF according to the position of an axis.         Monitoring Axis Following Error       You can monitor whether the difference between the command positions or actual positions of two specified axes exceeds a threshold value.         Resetting the Following Error       The error between the command current position and actual current position is set to 0.         Torque Limit       The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.         Slave Axis Position Compensation       This function compensates the position of the slave axis in synchronized control.         Cam monitor       Outputs the specified offset position for the slave axis in synchronous control.				Zone Monitoring		
Following Error       positions of two specified axes exceeds a threshold value.         Resetting the Following Error       The error between the command current position and actual current position is set to 0.         Torque Limit       The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.         Slave Axis Position Compensation       This function compensates the position of the slave axis currently in synchronized control.         Cam monitor       Outputs the specified offset position for the slave axis in synchronous control.					You can turn a digital output ON and OFF according to the position of an axis.	
Error       The error between the command current position and actual current position is set to 0.         Torque Limit       The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.         Slave Axis Position Compensation       This function compensates the position of the slave axis currently in synchronized control.         Cam monitor       Outputs the specified offset position for the slave axis in synchronous control.						
Slave Axis Position Compensation         This function compensates the position of the slave axis currently in synchronized control.           Cam monitor         Outputs the specified offset position for the slave axis in synchronous control.					The error between the command current position and actual current position is set to 0.	
Slave Axis Position CompensationThis function compensates the position of the slave axis currently in synchronized control.Cam monitorOutputs the specified offset position for the slave axis in synchronous control.				Torque Limit		
Cam monitor         Outputs the specified offset position for the slave axis in synchronous control.					This function compensates the position of the slave axis currently in synchronized	
Start velocity You can set the initial velocity when axis motion starts.				Start velocity	You can set the initial velocity when axis motion starts.	

		Item		NX701-□□□	
			Absolute Linear Inter- polation	Linear interpolation is performed to a specified absolute position.	
		Multi-axes	Relative Linear Interpo- lation	Linear interpolation is performed to a specified relative position.	
		Coordinat- ed Control	Circular 2D Interpola- tion	Circular interpolation is performed for two axes.	
			Axes Group Cyclic Syn- chronous Absolute Po- sitioning	A positioning command is output each control period in Position Control Mode.	
			Resetting Axes Group Errors	Axes group errors and axis errors are cleared.	
	Axes Groups		Enabling Axes Groups	Motion of an axes group is enabled.	
			Disabling Axes Groups	Motion of an axes group is disabled.	
		Auxiliary Functions	Stopping Axes Groups	All axes in interpolated motion are decelerated to a stop.	
		for Multi- axes Coordi-	Immediately Stopping Axes Groups	All axes in interpolated motion are stopped immediately.	
		nated Con- trol	Setting Axes Group Override Factors	The blended target velocity is changed during interpolated motion.	
			Reading Axes Group Positions	The command current positions and actual current positions of an axes group can be read.	
			Changing the Axes in an Axes Group	The Composition Axes parameter in the axes group parameters can be overwritten temporarily.	
			Setting Cam Table Properties	The end point index of the cam table that is specified in the input parameter is changed.	
		Cams	Saving Cam Tables	The cam table that is specified with the input parameter is saved in non-volatile memory in the CPU Unit.	
	Common Items		Generating cam tables	The cam table that is specified with the input parameter is generated from the cam property and cam node.	
			Writing MC Settings	Some of the axis parameters or axes group parameters are overwritten temporarily.	
Notion		Parameters	Changing axis parame- ters	You can access and change the axis parameters from the user program.	
Control		Count Modes		You can select either Linear Mode (finite length) or Rotary Mode (infinite length).	
		Unit Conversions		You can set the display unit for each axis according to the machine.	
		Accelera- tion/ Decel- eration Control	Automatic Acceleration/ Deceleration Control	Jerk is set for the acceleration/deceleration curve for an axis motion or axes group motion.	
			Changing the Accelera- tion and Deceleration Rates	You can change the acceleration or deceleration rate even during acceleration or deceleration.	
	Auxiliary Func- tions	In-position Check		You can set an in-position range and in-position check time to confirm when positioning is completed.	
		Stop Method		You can set the stop method to the immediate stop input signal or limit input signal.	
		Re-execution of Motion Control In- structions		You can change the input variables for a motion control instruction during execution and execute the instruction again to change the target values during operation.	
		Multi-execution of Motion Control In- structions (Buffer Mode)		You can specify when to start execution and how to connect the velocities between operations when another motion control instruction is executed during operation.	
		Continuous Axes Group Motions (Transition Mode)		You can specify the Transition Mode for multi-execution of instructions for axes grou operation.	
			Software Limits	Software limits are set for each axis.	
		Monitoring Functions	Following Error	The error between the command current value and the actual current value is monitored for an axis.	
			Velocity, Acceleration Rate, Deceleration Rate, Torque, Interpolation Velocity, Inter- polation Acceleration Rate, And Interpolation Decelera- tion Rate	You can set and monitor warning values for each axis and each axes group.	
		Absolute Encoder Support		You can use an OMRON G5-Series or 1S-Series Servomotor with an Absolute Encoder to eliminate the need to perform homing at startup.	
		Input signal logic inversion		You can inverse the logic of immediate stop input signal, positive limit input signal, negative limit input signal, or home proximity input signal.	
	External Interfac	e Signals		The Servo Drive input signals listed on the right are used. Home signal, home proximity signal, positive limit signal, negative limit signal, immediate stop signal, and interrupt input signal	

	Item			NX701-□□□		
	(C) EtherCAT Slaves Maximum Number of Slaves		mber of Slaves	512		
Unit (I/O) Manage- ment	CJ-Series Units	Basic I/O Units	Load Short-circuit Pro- tection and I/O Discon- nection Detection	Alarm information for Basic I/O Units is read.		
		Communicati	ons protocol	TCP/IP, UDP/IP		
		CIP Commu- nications	Tag Data Links	Programless cyclic data exchange is performed with the devices on the EtherNet/IP network.		
		Service	Message Communica- tions	CIP commands are sent to or received from the devices on the EtherNet/IP network.		
		TCP/IP functions	CIDR	The function which performs IP address allocations without using a class (class A to C) of IP address.		
		Tunctions	IP Forwarding	The function which forward IP packets between interfaces.		
	Built-in Ether- Net/IP port		Socket Services	Data is sent to and received from any node on Ethernet using the UDP or TCP protocol. Socket communications instructions are used.		
	Internal Port		FTP client	File can be read from or written to computers at other Ethernet nodes from the CPU Unit. FTP client communications instructions are used.		
		TCP/IP Applications	FTP Server	Files can be read from or written to the SD Memory Card in the CPU Unit from computers at other Ethernet nodes.		
			Automatic Clock Ad- justment	Clock information is read from the NTP server at the specified time or at a specified interval after the power supply to the CPU Unit is turned ON. The internal clock time in the CPU Unit is updated with the read time.		
			SNMP Agent	Built-in EtherNet/IP port internal status information is provided to network management software that uses an SNMP manager.		
Communi-		OPC UA	Server Function	Functions to respond to requests from clients on the OPC UA network		
cations		Supported Services	Process Data Commu- nications	Control information is exchanged in cyclic communications between the EtherCAT master and slaves.		
			SDO Communications	A communications method to exchange control information in noncyclic event communications between EtherCAT master and slaves. This communications method is defined by CoE.		
		Network Scanning		Information is read from connected slave devices and the slave configuration is automatically generated.		
	EtherCAT Port	DC (Distributed Clock)		Time is synchronized by sharing the EtherCAT system time among all EtherCAT devices (including the master).		
		Packet Monitoring		The frames that are sent by the master and the frames that are received by the master can be saved. The data that is saved can be viewed with WireShark or other applications.		
		Enable/disable Settings for Slaves		The slaves can be enabled or disabled as communications targets.		
		Disconnecting/Connecting Slaves		Temporarily disconnects a slave from the EtherCAT network for maintenance, such as for replacement of the slave, and then connects the slave again.		
		Supported Application Protocol	СоЕ	SDO messages of the CAN application can be sent to slaves via EtherCAT.		
	Communications Instructions			The following instructions are supported. CIP communications instructions, socket communications instructions, SDO message instructions, no-protocol communications instructions *2, FTP client instructions, and Modbus RTU protocl instructions *2		
Operation Management	RUN Output Contacts			The output on the Power Supply Unit turns ON in RUN mode.		
		Function		Events are recorded in the logs.		
System Management	Event Logs	Maximum	System event log	2,048		
		number of	Access event log	1,024		
		events	User-defined event log	1.024		

\*2. Supported only by the CPU Units with unit version 1.11 or later.

	Γ	Item		NX701-□□□		
	Online Editing	g Single		Programs, function blocks, functions, and global variables can be changed online. Different operators can change different POUs across a network.		
	Forced Refreshing			The user can force specific variables to TRUE or FALSE.		
		Maximum Number of Forced Vari- ables	Device Variables for EtherCAT Slaves	64		
	MC Test Run			Motor operation and wiring can be checked from the Sysmac Studio.		
	Synchronizing			The project file in the Sysmac Studio and the data in the CPU Unit can be made the same when online.		
	Differentiation mo	onitoring		Rising/falling edge of contacts can be monitored.		
		Maximum nui	nber of contacts	8		
		Types	Single Triggered Trace	When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically.		
Debugging			Continuous Trace	Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.		
		Maximum Nu Data Trace	mber of Simultaneous	4		
		Maximum Nu	mber of Records	10,000		
	Data Tracing	Sampling	Maximum Number of Sampled Variables	192 variables		
	bata ridonig	Timing of Sar	npling	Sampling is performed for the specified task period, at the specified time, or when a sampling instruction is executed.		
		Triggered Tra	ces	Trigger conditions are set to record data before and after an event.		
			Trigger Conditions	When BOOL variable changes to TRUE or FALSE Comparison of non-BOOL variable with a constant Comparison Method: Equals (=), Greater than (>), Greater than or equals ( $\geq$ ), Less Than (<), Less than or equals ( $\leq$ ), Not equal ( $\neq$ )		
			Delay	Trigger position setting: A slider is used to set the percentage of sampling before and after the trigger condition is met.		
	Simulation	1		The operation of the CPU Unit is emulated in the Sysmac Studio.		
Dellehilite		Controller Errors	Levels	Major fault, partial fault, minor fault, observation, and information		
Reliability Functions	Self-diagnosis	User-defined errors		User-defined errors are registered in advance and then records are created by executing instructions.		
				8 levels		
		CPU Unit Names and Serial IDs		When going online to a CPU Unit from the Sysmac Studio, the CPU Unit name in the project is compared to the name of the CPU Unit being connected to.		
	Protecting Soft- ware Assets and Preventing Op- erating Mistakes	Protection	User Program Transfer with No Restoration In- formation	You can prevent reading data in the CPU Unit from the Sysmac Studio.		
			CPU Unit Write Protec- tion	You can prevent writing data to the CPU Unit from the Sysmac Studio or SD Memory Card.		
Security			Overall Project File Pro- tection	You can use passwords to protect .smc files from unauthorized opening on the Sysmac Studio.		
		Data Protection		You can use passwords to protect POUs on the Sysmac Studio.		
		Verification of Operation Authority		Online operations can be restricted by operation rights to prevent damage to equipment or injuries that may be caused by operating mistakes.		
		Number of Groups Verification of User Program Execu- tion ID		5 The user program cannot be executed without entering a user program execution ID from the Sysmac Studio for the specific hardware (CPU Unit).		
SD Memo- ry Card Functions	Storage Type	1		SD Memory Card, SDHC Memory Card		
		Automatic transfer from SD Memory Card		The data in the autoload folder on an SD Memory Card is automatically loaded when the power supply to the Controller is turned ON.		
	Application	Transfer program from SD Memory Card *2		The user program on an SD Memory Card is loaded when the user changes system- defined variable to TRUE.		
		SD Memory Card Operation Instructions		You can access SD Memory Cards from instructions in the user program.		
		File Operations from the Sysmac Stu- dio		You can perform file operations for Controller files in the SD Memory Card and read/ write standard document files on the computer.		
		SD Memory Card Life Expiration De- tection		Notification of the expiration of the life of the SD Memory Card is provided in a		

\*2. Supported only by the CPU Units with unit version 1.11 or later.

	Item			NX701-□□□	
	SD Memory Card backup functions	Operation	Using front switch	You can use front switch to backup, compare, or restore data.	
Backup functions			Using system-defined variables	You can use system-defined variables to backup, compare, or restore data. *3	
			Memory Card Opera- tions Dialog Box on Sysmac Studio	Backup and verification operations can be performed from the SD Memory Card Operations Dialog Box on the Sysmac Studio.	
	lanotiono		Using instruction	Backup operation can be performed by using instruction.	
		Prohibiting backing up data to the SD Memory Card		Prohibit SD Memory Card backup functions.	
	Sysmac Studio Controller backup functions			Backup, restore, and verification operations for Units can be performed from the Sysmac Studio.	

\*3. Restore is supported with unit version 1.14 or later.

### **Function Specifications of Database Connection CPU Units**

Besides functions of the NX701-DDD, functions supported by the NX701-1D20 is as follows.

Item Supported port Supported DB *1*2			Description NX701-1□20		
			Built-in EtherNet/IP port		
			Microsoft Corporation: SQL Server 2012/2014/2016/2017/2019 Oracle Corporation: Oracle Database 11g /12c/18c/19c MySQL Community Edition 5.6/5.7/8.0 *3 International Business Machines Corporation (IBM): DB2 for Linux, UNIX and Windows 9.7/10.1/10.5/11.1 Firebird Foundation Incorporated: Firebird 2.5		
	DB Connections databases that o	can be connected at the same	The PostgreSQL Global Development Group: PostgreSQL 9.4/9.5/9.6/10/11/12/13 3 connections max. *4		
	Supported ope	rations	The following operations can be performed by executing DB Connection Instructions in the NJ/NX- series CPU Units. Inserting records (INSERT), Updating records (UPDATE), Retrieving records (SELECT), Deleting records (DELETE), Execute Stored Procedure *5, and Execute Batch Insert *5		
	Max. number o for simultaneou		32		
	Max. number o in an INSERT o		SQL Server: 1,024 Oracle: 1,000 DB2: 1,000 MySQL: 1,000 Firebird: 1,000 PostgreSQL: 1,000		
	Max. number o in an UPDATE		SQL Server: 1,024 Oracle: 1,000 DB2: 1,000 MySQL: 1,000 Firebird: 1,000 PostgreSQL: 1,000		
	Max. number o in a SELECT op		SQL Server: 1,024 Oracle: 1,000 DB2: 1,000 MySQL: 1,000 Firebird: 1,000 PostgreSQL: 1,000		
Instruction	Max. number of in the output of	f records f a SELECT operation	65,535 elements, 4 MB		
	Stored proce- dure call *5	Supported databases	<ul> <li>SQL Server</li> <li>Oracle Database</li> <li>MySQL Community Edition</li> <li>PostgreSQL</li> </ul>		
		Argument (Sum of IN, OUT and INOUT)	Up to 256 variables *6		
		Return value	One variable		
		Result set	Supported		
		Spool function	Not supported		
	Batch insert execution *5	Supported databases	<ul> <li>SQL Server</li> <li>Oracle Database</li> <li>MySQL Community Edition</li> <li>PostgreSQL</li> </ul>		
		Supported data size	Less than 1,000 columns and upper limit (8 MB) of structure variable size or less *7		
		Spool function	Not supported		
	Max. number o a mapping can	f DB Map Variables for which be connected	SQL Server: 60 Oracle: 30 DB2: 30 MySQL: 30 Firebird: 15 PostgreSQL: 30 *8		
Run mode of the DB Connection Service			<ul> <li>Operation Mode or Test Mode</li> <li>Operation Mode: When each instruction is executed, the service actually accesses the DB.</li> <li>Test Mode: When each instruction is executed, the service ends the instruction normally without accessing the DB actually.</li> </ul>		
Spool function			Used to store SQL statements when an error occurred and resend the statements when the communications are recovered from the error.		
	Spool capacity		2 MB *9		
Operation Log function			<ul> <li>The following three types of logs can be recorded.</li> <li>Execution Log: Log for tracing the executions of the DB Connection Service.</li> <li>Debug Log: Detailed log for SQL statement executions of the DB Connection Service.</li> <li>SQL Execution Failure Log: Log for execution failures of SQL statements in the DB.</li> </ul>		
DB Connection Service shutdown function			Used to shut down the DB Connection Service after automatically saving the Operation Log files into the SD Memory Card.		
Encrypted Communication			SQL Server     Oracle Database     MySQL Community Edition     PostgreSQL		
		TLS Ver.	TLS 1.2		

\*1. SQL Server 2014, Oracle Database 12c and PostgreSQL 9.4 are supported by the DB Connection Service Version 1.02 or higher. SQL Server 2016, My SQL 5.7, DB2 11.1 and Postgre SQL 9.5/9.6 are supported by the DB Connection Service Version 1.03 or higher. SQL Server 2017 is supported by the DB Connection Service Version 1.04 or higher.

Oracle Database 18c, MySQL Community Edition 8.0 and PostgreSQL 10 are supported by the DB Connection Service Version 2.00 or higher. You cannot use Oracle 10g with the DB Connection Service version 2.00 or higher.

- SQL Server 2019, Oracle Database 19c and PostgreSQL 11/12/13 are supported by the DB Connection Service Version 2.01 or higher. \*2. Connection to the DB on the cloud is not supported.
- \*3. The supported storage engines of the DB are InnoDB and MyISAM.
- \*4. When two or more DB Connections are established, the operation cannot be guaranteed if you set different database types for the connections.
- \*5. The function is available for the DB Connection Service Version 2.00 or higher.
- \*6. Depends on members of a structure.
- \*7. Constrained by the memory capacity for variables. See the specifications for the memory capacity for variables.
- \*8. Even if the number of DB Map Variables has not reached the upper limit, the total number of members of structures used as data type of DB Map Variables is 10,000 members max.
- \*9. Refer to "NJ/NX-series Database Connection CPU Units User's Manual(W527)" for the information.

Note: The extended support for databases has ended for the following DB versions.

Please consider replacing the current database with a new version.

Item	Discription
Microsoft Corporation: SQL Server	2008/2008R2
Oracle Corporation: Oracle Database	10g
Oracle Corporation: MySQL Community Edition	5.1/5.5
International Business Machines Corporation (IBM): DB2 for Linux, UNIX and Windows	9.5
Firebird Foundation Incorporated: Firebird	2.1
The PostgreSQL Global Development Group: PostgreSQL	9.2/9.3

### **Version Information**

### Unit Versions and Programming Devices (NX701 CPU Units)


Refer to "NX-series CPU Unit Hardware User's Manual (W535)".

### Functions That Were Added or Changed for Each Unit Version and Sysmac Studio version

Refer to "NX-series CPU Unit Hardware User's Manual (W535)".

### **Components and Functions**

#### **CPU Unit** NX701-000

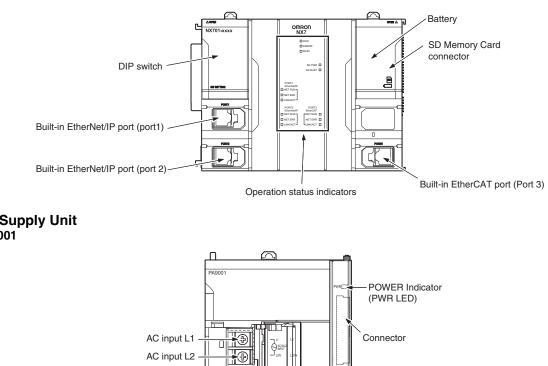

LG GR


RUN output

Ð

٩

#### **Power Supply Unit** NX-PA9001


NX-PD7001

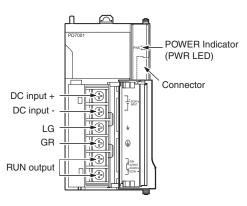


### NX7 Dimensions

### CPU Units NX701-




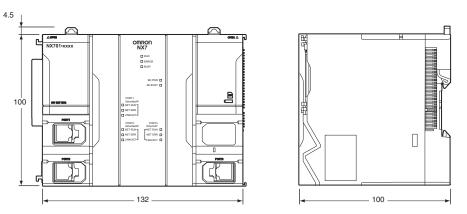


When a cable is connected (such as a communications cable)

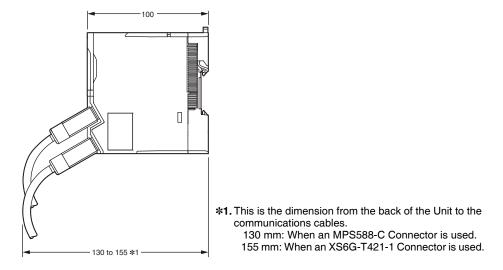


### Power Supply Units NX-PA9001

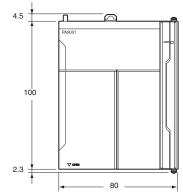


# End Cover (included with CPU Units) NX-END01

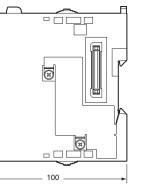

### NX-PD7001

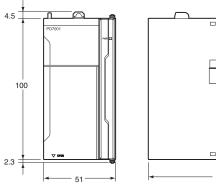

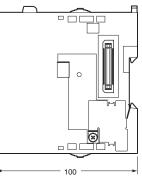

### **Related Manuals**

Cat. No.	Model number	Manual	Application	Description
W514	NX701 NX1P2 NJ501 NJ301 NJ101	NJ/NX-series Startup Guide (Motion Control)	Using the motion control function module of the NJ/NX- series for the first time	The startup procedures for setting axis parameters and performing simple one-axis positioning and two-axis linear interpolation with an NJ/NX-series CPU Unit and the operating instructions for the Sysmac Studio are described.
W535	NX701	NX-series CPU Unit Hardware User's Manual	Learning the basic specifications of the NX701- series CPU Units, including introductory information, designing, installation, and maintenance. Mainly hardware information is provided.	An introduction to the entire NX701-series system is provided along with the following information on a Controller built with a CPU Unit. • Features and system configuration • Introduction • Part names and functions • General specifications • Installation and wiring • Maintenance and inspection
W501	NX701 NX102 NX1P2 NJ501 NJ301 NJ101	NJ/NX-series CPU Unit Software User's Manual	Learning how to program and set up an NJ/NX-series CPU Unit. Mainly software information is provided.	<ul> <li>The following information is provided on a Controller built with an NJ/NX-series CPU Unit.</li> <li>CPU Unit operation</li> <li>CPU Unit features</li> <li>Initial settings</li> <li>Programming language specifications and programming with the IEC 61131-3 standard.</li> </ul>
W507	NX701 NX102 NX1P2 NJ501 NJ301 NJ101	NJ/NX-series CPU Unit Motion Control User's Manual	Learning about motion control settings and programming concepts	The settings and operation of the CPU Unit and programming concepts for motion control are described.
W505	NX701- NX102- NX1P2- NJ501- NJ301- NJ301- NJ301- NJ301- NJ101-	NJ/NX-series CPU Unit Built-in EtherCAT Port User's Manual	Using the built-in EtherCAT port on an NJ/NX-series CPU Unit	Information on the built-in EtherCAT port is provided. This manual provides an introduction and provides information on the configuration, features, and setup.
W527	NX701-20 NX102-20 NJ501-20 NJ101-20	NJ/NX-series Database Connection CPU Units User's Manual	Learning about the functions and application procedures of the NJ/NX-series DB Connection function.	Describes the functions and application procedures of the NJ/NX-series DB Connection function.
W506	NX701 NX102 NX1P2 NJ501 NJ301 NJ101	NJ/NX-series CPU Unit Built-in EtherNet/ IP Port User's Manual	Using the built-in EtherNet/IP port on an NJ/NX-series CPU Unit	Information on the built-in EtherNet/IP port is provided. Information is provided on the basic setup, tag data links, FINS communications (non-disclosure), and other features.
W588	NX102- NX701-1 NJ501-1 00	NJ/NX-series CPU Unit OPC UA User's Manual	Using the OPC UA.	Describes the OPC UA.
W502	NX701 NX102 NJ501 NJ301 NJ101	NJ/NX-series Instructions Reference Manual	Learning about the specifications of the instruction set that is provided by OMRON	The instructions in the instruction set (IEC 61131-3 specifications) are described.
W508	NX701 NX102 NJ501 NJ301 NJ301 NJ301	NJ/NX-series Motion Control Instructions Reference Manual	Learning about the specifications of the motion control instructions that are provided by OMRON	The motion control instructions are described.
W503	NX701-000 NX102-000 NX1P2-000 NJ501-000 NJ301-000 NJ101-000	NJ/NX-series Troubleshooting Manual	Learning about the errors that may be detected in an NJ/NX-series Controller.	Concepts on managing errors that may be detected in an NJ/NX-series Controller and information on individual errors are described.
W504	SYSMAC-SE2	Sysmac Studio Version 1 Operation Manual	Learning about the operating procedures and functions of the Sysmac Studio.	Describes the operating procedures of the Sysmac Studio.
W589	SYSMACSE2	Sysmac Studio Project Version Control Function Operation Manual	Learning the overview of the Sysmac Studio project version control function and how to use it.	The manual outlines the Sysmac Studio project version control function, and describes how to install, basic operation, and how to operate its major functions.

Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products. Microsoft, Windows, Windows Vista and SQL Server are registered trademarks of Microsoft Corporation in the United States and other countries. Oracle, Oracle Database and MySQL are trademarks or registered trademarks of Oracle Corporation and/or its affiliates in the United States and other countries. IBM and DB2 are trademarks or registered trademarks of International Business Machines Corp., registered in the United States and other countries. EtherCAT® is a registered trademark of Beckhoff Automation GmbH for their patented technology.  $EtherNet/IP^{{\sc m}} \text{ and } DeviceNet^{{\sc m}} \text{ are trademarks of ODVA}.$ 

OPC UA is trademark of the OPC Foundation.

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (http://www.openssl.org/) This product includes cryptographic software written by Eric Young (eay@cryptsoft.com).

Other company names and product names in this document are the trademarks or registered trademarks of there respective companies.

### **Terms and Conditions Agreement**

### Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

### Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

### Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

#### Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

### Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

### Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

### Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

### Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

#### Note: Do not use this document to operate the Unit.

#### **OMRON Corporation Industrial Automation Company** Kyoto, JAPAN

#### Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V. Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON ELECTRONICS LLC 2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2018-2021 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice. CSM\_8\_1 Cat. No. P141-E1-10 0921 (1218)